



**CRAZY CART SHIFT 2.0 AND
CRAZY CART SHIFT LIGHTSHOW
BATTERY REPLACEMENT INSTRUCTIONS**
PART # W20136401003

Required Tools: (Not included)

- A. 4 mm Allen wrench
- B. 5 mm Allen wrench

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 4 mm Allen wrench, loosen and remove the bolt from the plastic cover next to the power switch. Lift up the battery cover.



Step 2

Using a 5 mm Allen wrench, loosen the bolts from the battery strap.



Step 3

Remove both bolts from the battery strap.



Step 4

Locate and disconnect the battery from the controller. Using both hands, carefully remove the battery from the unit.



Step 5

Reverse the procedures

- Place the new battery inside.
- Re-connect the battery and control module.
- Place the bracket back to secure the battery.
- Re-attach the battery cover.

ATTENTION: Charge battery 12 hours before using.