

Required Tools: (Not included)

- Phillips screwdriver
- Flathead screwdriver

⚠ WARNING

⚠CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove the six (6) screws from the deck.

**Step 2**

Remove the deck from the unit. Remove the two (2) screws from the battery holder.



Step 3

Disconnect the battery from the controller.



Step 4

Remove the batteries from the tray to allow access to the wires connected to the power switch. Using a flathead screwdriver, remove the silicone that holds the power switch in place.



Step 5

Disconnect the black wire that comes from the charger port. Remove the two (2) wires that come from the controller connected to the two (2) other prongs on the power switch. Note: the prongs on the power switch are different colors. The two (2) silver color prongs connect the two (2) wires from the controller. The K1 wire from the controller is labeled as Mid-Pin, meaning it needs to be connected to the middle prong. K2 connects to the silver prong. The gold colored prong connects the black wire that comes from the charger port.



Step 6

This image shows how the K1 wire is labeled (Mid-Pin) and needs to be connected to the middle prong.



Step 7

Reverse the procedures to install the new power switch

- Attach the new power switch.
- Reinstall the batteries.
- Connect batteries to controller.
- Attach the deck.

Attention: Charge battery 12 hours before using