

Required Tools: (Not included)


- 4mm Allen Wrench
- 5mm Allen Wrench

⚠ WARNING


⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 4mm Allen wrench, remove the bolts from the brake lever clamp.

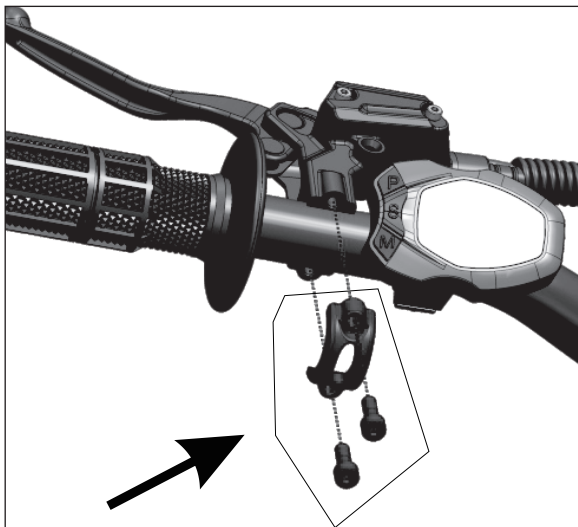
**Step 2**

Using a 5mm Allen wrench, loosen the bolts on the upper and lower connecting plates, but do not remove them. Using a 4mm Allen wrench, loosen and remove the bolt on the brake line holder. Press the right front damper down to the position shown in the image below and remove the brake tubing. Note: The front wheel needs to be removed to slide down the stanchion.

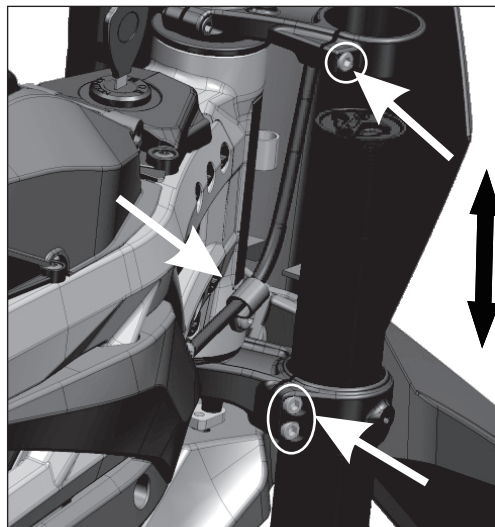


Step 3

Follow the replacement battery instructions to remove the battery.

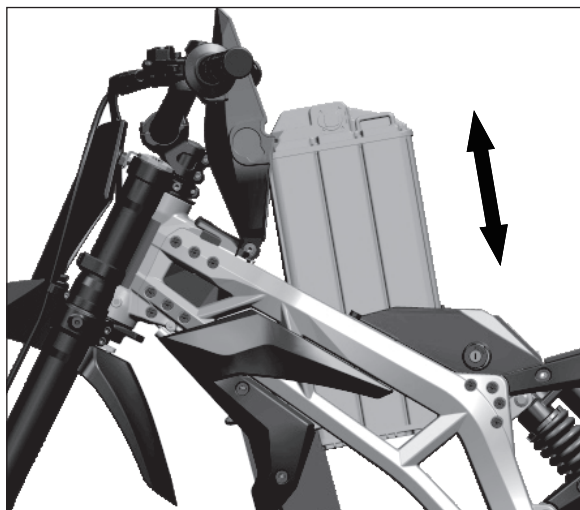


Step 4

Pull the battery separator (A) downward to remove it. Lift the battery separator (B) upward to remove it.

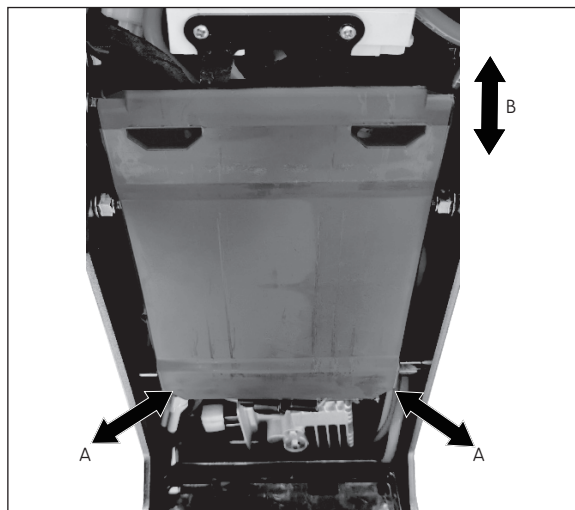


Step 5

Using a 4mm Allen wrench, loosen and remove the tubing clamps located on the inner right side of the frame.

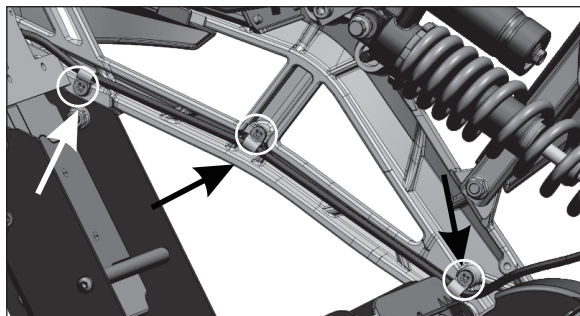

Step 6

Using a 4mm Allen wrench, remove the bolt on the brake line holder. Using a 5mm Allen wrench, remove the bolts from the brake caliper. Remove the brake assembly and set aside.

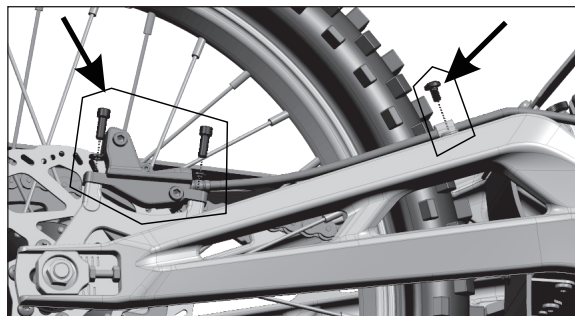

Step 7

Insert a rear brake, then reverse steps 1 through 6.

ATTENTION: Charge battery 12 hours before using.

Note

Tighten the oil pump screws while the brake is engaged. After installation, check the brake performance and adjust the brake lever tension as needed.

