



C30 & C35 & C35 SLA KICKSTAND REPLACEMENT

C30 PART # W13113207028

C35 & C35 SLA PART # W13113290028

Required Tool: (Not included)

A. 4 mm Allen wrench

WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a size 4mm Allen wrench loosen and remove the two (2) hex screws that hold the kickstand onto the frame.



Step 2

Reverse the steps.

ATTENTION: Charge battery 8 hours before using.