



ECOSMART HD/SUP CONTROLLER REPLACEMENT

ECOSMART HD PART NUMBER:W13114508015

ECOSMART SUP PART NUMBER:W13114510015

Required Tools: (Not included)


- 4 mm Allen Wrench
- Phillips Screwdriver

WARNING

 **CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a 4mm Allen wrench, remove the four bolts that secure the deck to the frame.

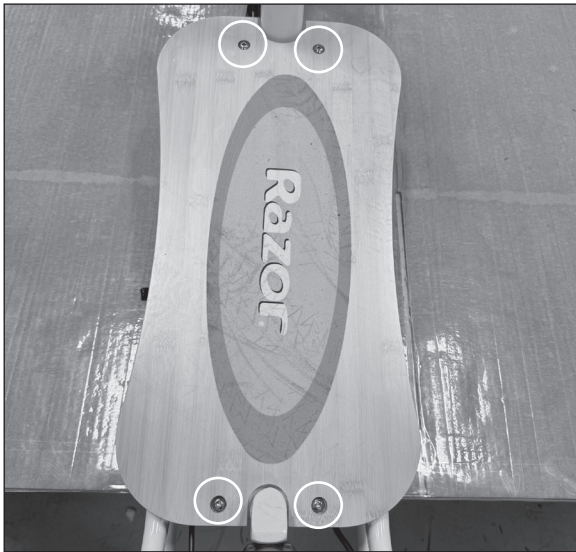

Step 2

Using a 4mm Allen wrench, remove four bolts from the battery tray.

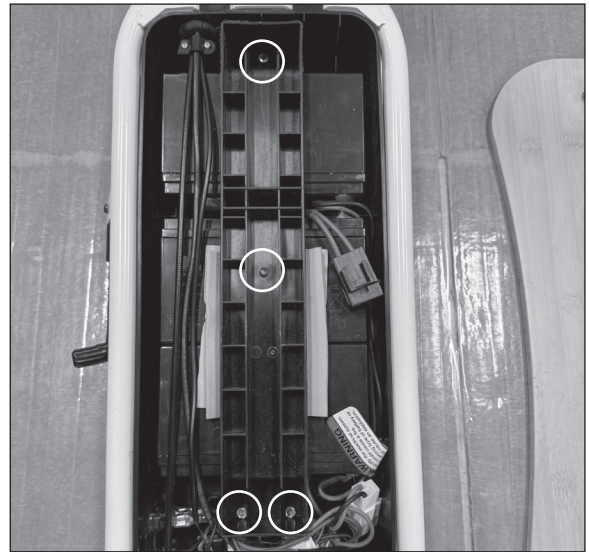


Step 3

Disconnect all the connectors by depressing the locking pin.



Step 4

Using a Phillips screwdriver, remove the two screws that hold the controller in place inside the battery tray.

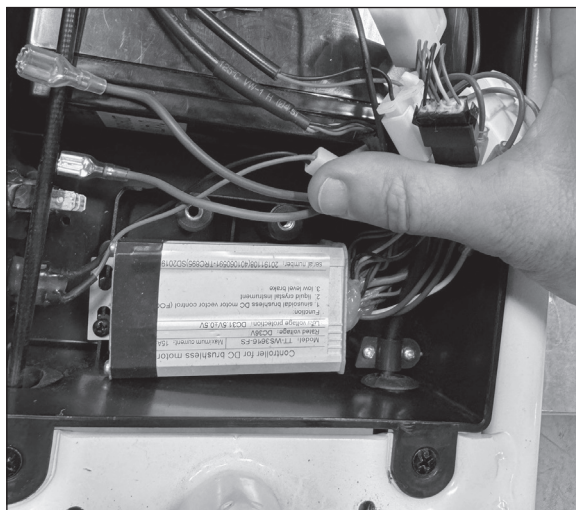

Step 5

Insert a new controller, then reverse steps 1 through 4.

Note: The red and blue wires from the controller connect to the silver-colored prongs in any sequence. The black wire from the charger port connects to the gold-colored prong only.

ATTENTION: Charge battery 12 hours before using.