

Required Tool: (Not included)


- 10 mm wrench

⚠ WARNING


⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

To adjust brake cable play, thread the brake lever adjuster in or out 1/4 to 1/2 turn until the desired brake adjustment is attained. Most adjustments are complete at this step. If brake still needs further adjustment, proceed to step 2.

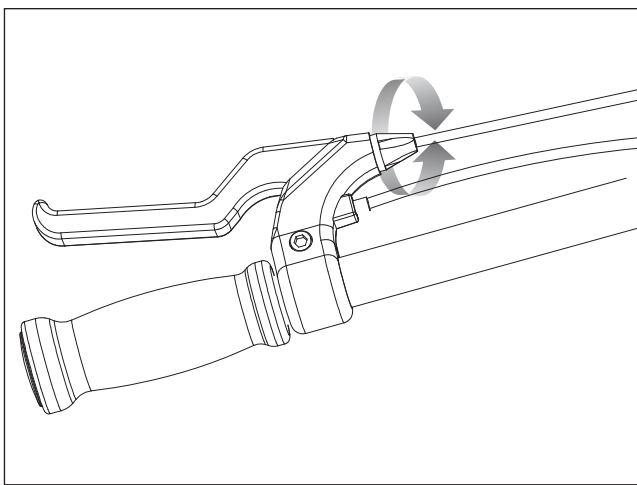**Step 2**

If brake is too tight or has too much slack, use a 10 mm wrench to loosen the brake cable and adjust accordingly.

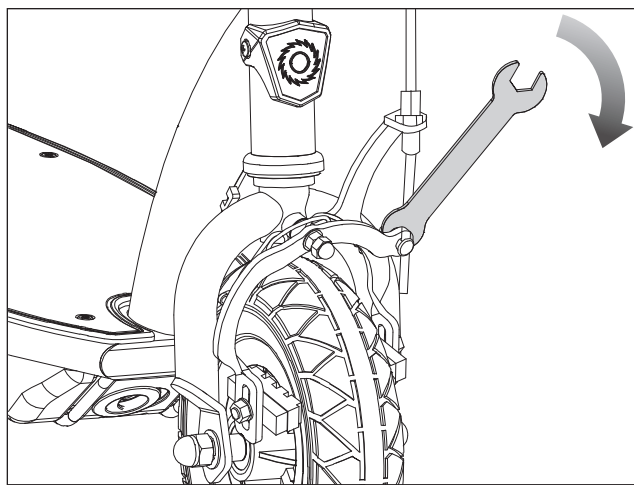

Step 3

Inspect the brake pads **(A)** for proper alignment against the wheel or excess wear. To realign brake pads, loosen the fixing nut **(B)** and adjust the pad to contact the rim. Re-tighten and readjust as needed. Verify proper brake function prior to riding the scooter.

ATTENTION: Charge battery 12 hours before using.

