



**HOVERTRAX BRIGHTS
POWER SWITCH REPLACEMENT**
PART NUMBER:W15156234101

Required Tools: (Not included)


- Phillips Screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Turn the Hovertrax upside down. Use a Phillips screwdriver to remove all the screws securing the right lower cover in sequence.

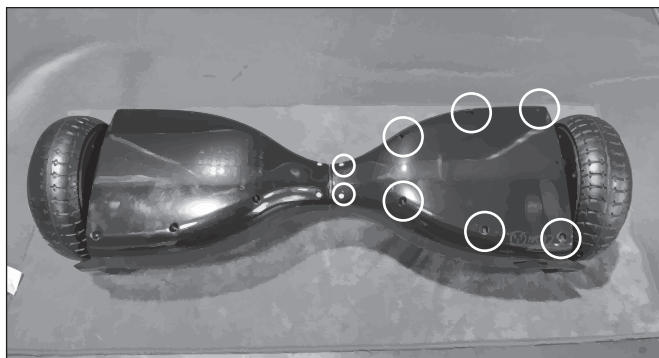


Step 2

Carefully cut the zip tie that holds the cables.

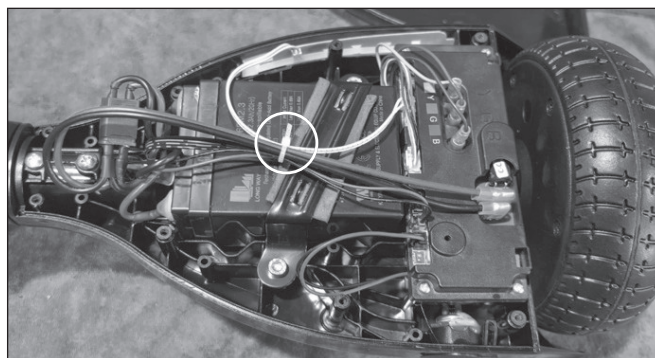


Step 3

Find the power wire and disconnect the connector.

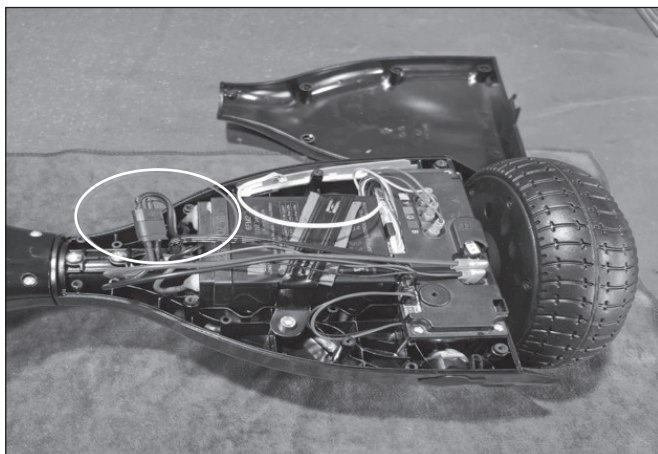



Step 4

Disconnect the switch plug from the controller.

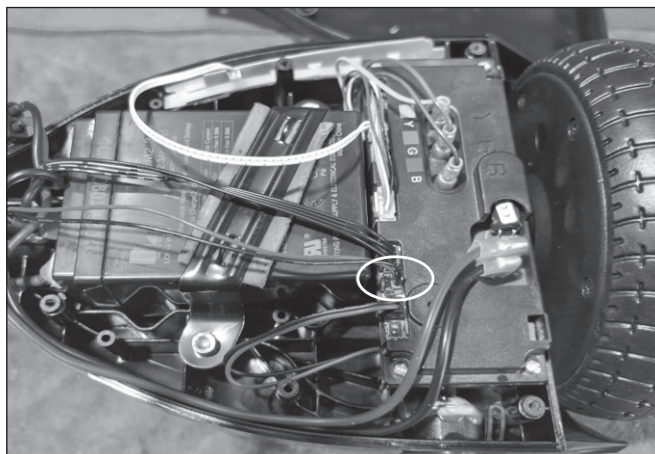

Step 5

As shown in the pictures below, the power switch can be removed by gently tapping it with a small tool.

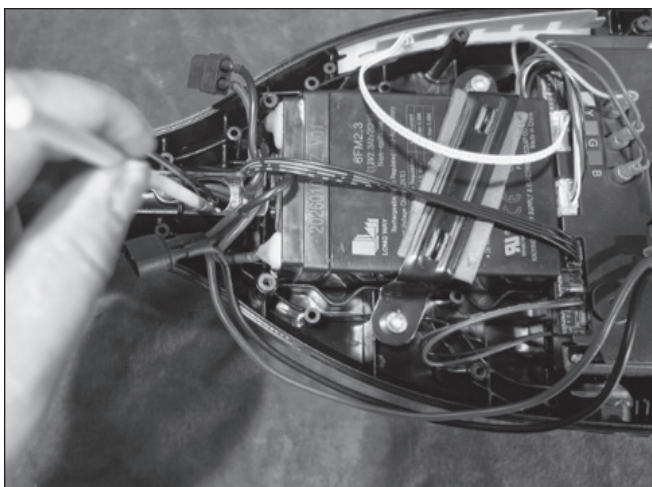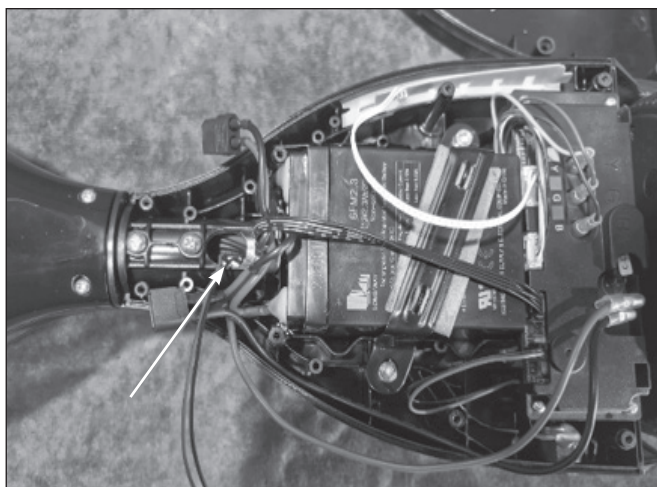

Step 6

Insert a new power switch, then reverse steps 1 through 5.

ATTENTION: Charge battery 12 hours before using.