



ECOSMART HD/SUP
POWER SWITCH REPLACEMENT
PART NUMBER:W13112445101

Required Tools: (Not included)


- 4 mm Allen Wrench
- Flat Screwdriver

! WARNING

! CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a 4mm Allen wrench, remove the four bolts that secure the deck to the frame.

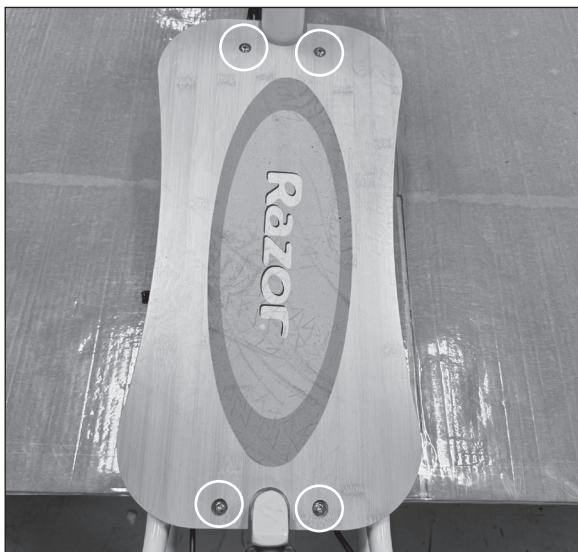

Step 2

Using a 4mm Allen wrench, remove four bolts that secure the battery bracket.

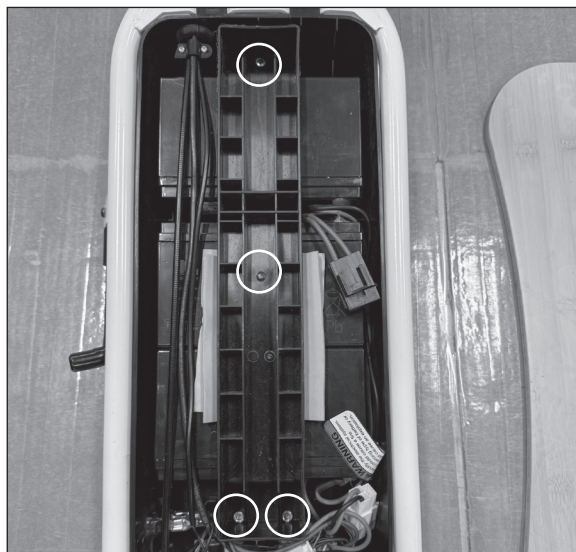

Step 3

Locate and disconnect the battery from the controller.



Step 4

Disconnect and remove the three wires that connect to the power switch.



Step 5

Using a flat screwdriver, remove the silicone from the back of the power switch. Push the power switch out from the battery tray.



Step 6

Insert a new power switch, then reverse steps 1 through 5. Note: The red and blue wires from the controller connect to the silver-colored prongs in any sequence. The black wire from the charger port connects to the gold-colored prong only.

ATTENTION: Charge battery 12 hours before using.