

Tools Required: (Not included)

- A. Phillips head screwdriver
- B. Flat head screwdriver
- C. 8mm open wrench
- C. 10mm open wrench

Step 1

Using a Phillips screw driver remove the two screws that hold the chain guard onto the frame.

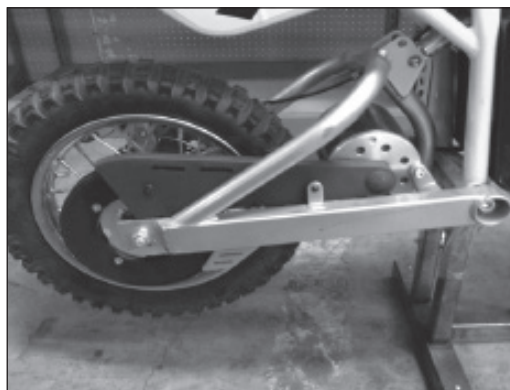


Figure 1

Step 2

Using flat screw driver remove the spring from the tensioner arm to release the tension.



Figure 2

Step 3

Using an 8mm open wrench remove the nut that holds the tensioner in place and remove it



Figure 3

Step 4

Using a 10mm open wrench loosen the nut that holds the bearings onto the tensioner arm and remove it.



Figure 4

Step 5

Replace the chain tensioner with the new part.

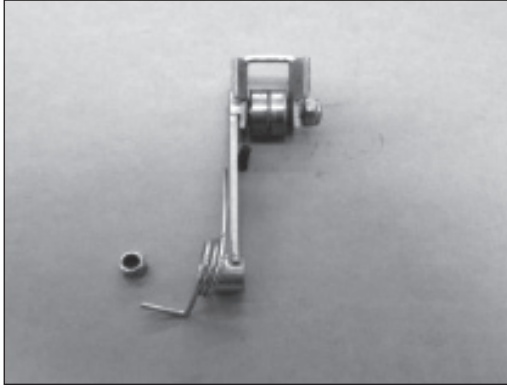


Figure 5

Step 6

This picture explains the sequence of the tensioner.

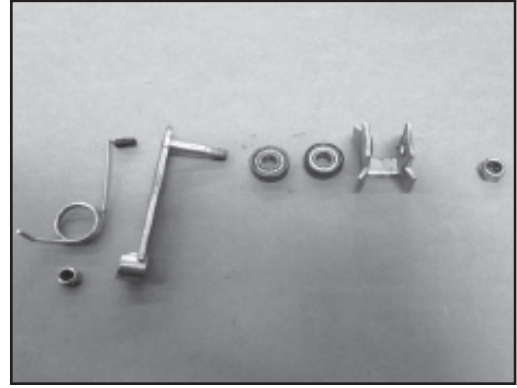


Figure 6

Step 7

Reverse the steps to reinstall.