

**Required Tools: (Not included)**

- A. Two (2) 19 mm Wrenches
- B. Phillips Screwdriver


PART # W13110003048 - BLACK  
W13110060048 - RED  
W13110040048 - BLUE  
W13110062048 - PINK  
W13110080048 - ORANGE

**⚠ WARNING**


**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

**Step 1**

Flip the unit over and using a Phillips screwdriver, remove the twenty (20) screws from the bottom of the unit.

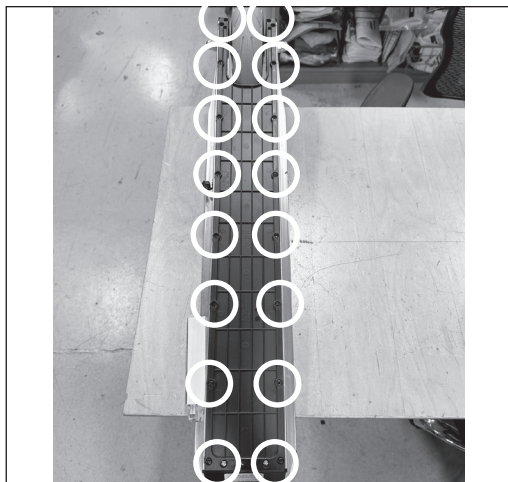
**Step 2**

Lift and remove the front cover and the battery cover from the unit.

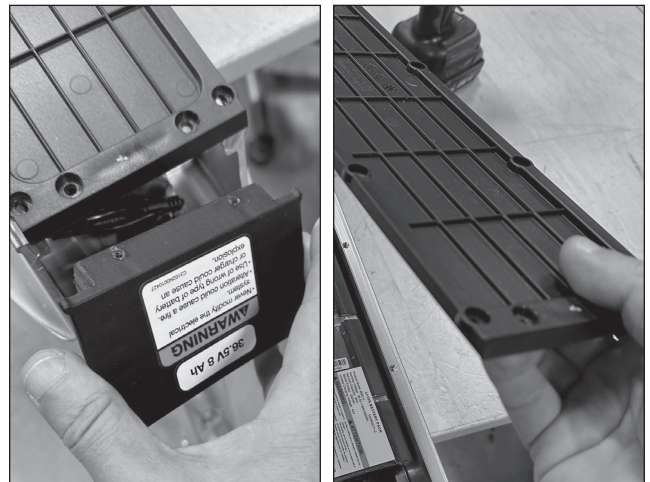


### Step 3

Locate and disconnect the motor from the controller.

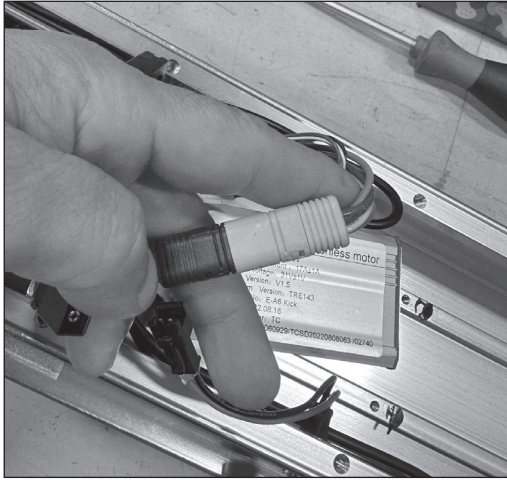

### Step 4

Using a Phillips screwdriver, remove one (1) screw on each side that holds the rear lights in place, then remove the lights.

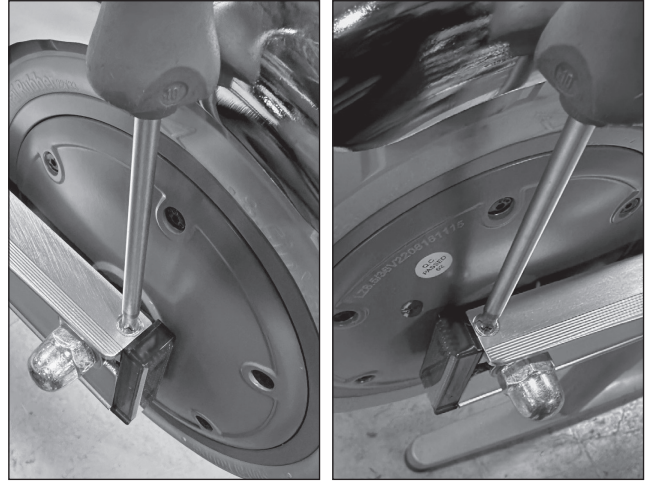

### Step 5

Using two (2) 19 mm wrenches, loosen up the lock nuts from the rear axle and pull the rear wheel off from the frame.



### Step 6

Reverse the procedures to install the new rear wheel and motor.

**ATTENTION: Charge battery 7 hours before using.**