

Required Tools: (Not included)

- 5 mm Allen Wrench
- 4 mm Allen Wrench
- Phillips Screwdriver
- Cutting Pliers

⚠ WARNING


⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Lift the seat to access the two (2) hex bolts that hold the seat to the frame.


**Step 2**

Using a 5 mm Allen wrench, remove the two (2) hex bolts that hold the seat to the frame. Set the seat aside.

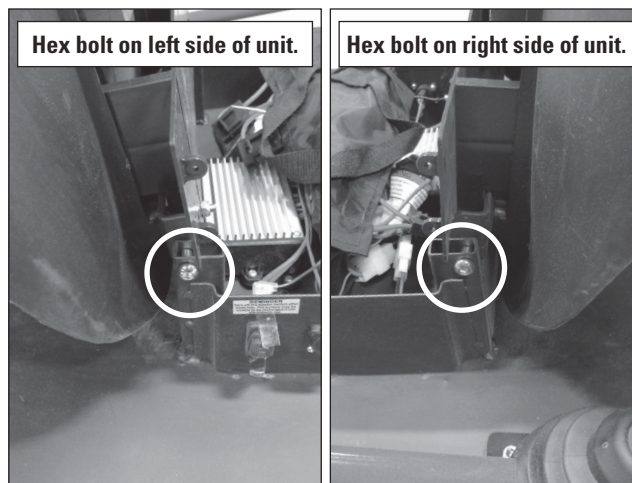


Step 3

Using a Phillips screwdriver, remove the seven (7) screws from the motor cover.

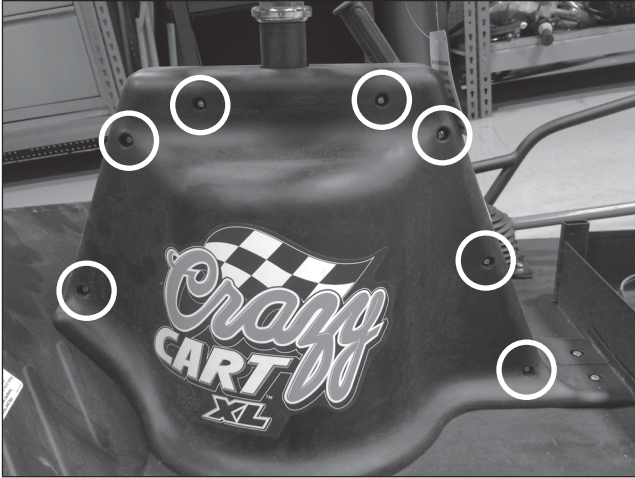


Step 4

Using a 4 mm Allen wrench, remove the two (2) hex bolts at the rear of the motor cover. Remove the motor cover from the frame and set it aside.

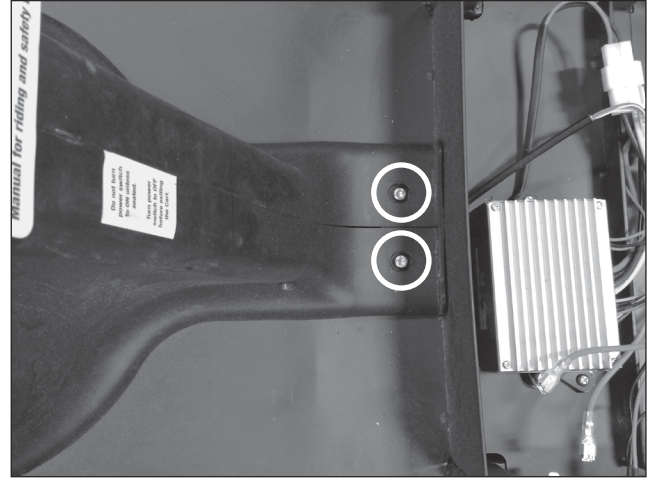


Step 5

Locate and disconnect the throttle from the controller. Slide the connector through the opening at the front of the battery compartment.

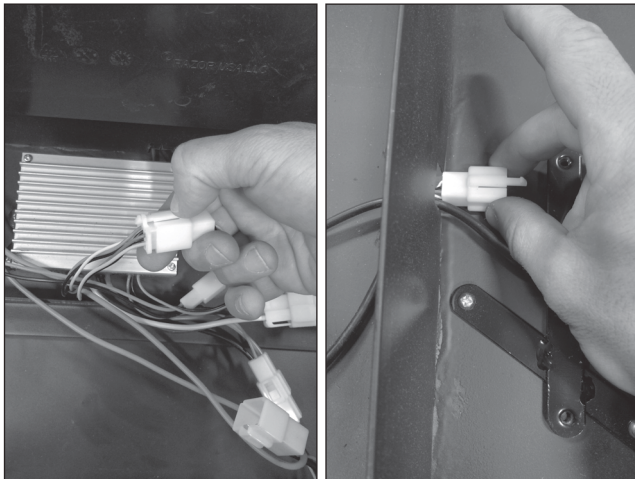

Step 6

Using cutting pliers, cut all the zip-ties that hold the cable to the frame. Using a Phillips screwdriver, remove the three (3) screws from the throttle cover. Then remove the cover and the throttle from the unit.

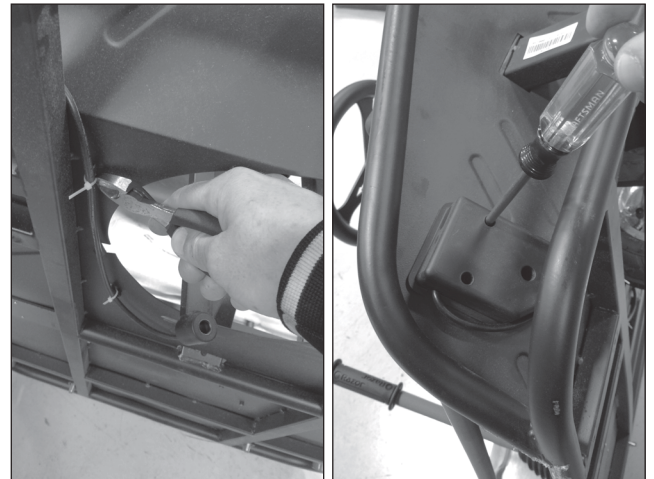

Step 7

To install a new throttle, reverse steps 1 through 6.

ATTENTION: Charge battery 12 hours before using.