



C30 & C35 & C35 SLA CONTROLLER REPLACEMENT

C30 PART # W13113207015

C35 PART # W13113210015

C35 SLA PART # W13113212015

Required Tool: (Not included)


A. Phillips screwdriver

WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove six (6) screws from the deck. Remove the deck from the unit and set aside.

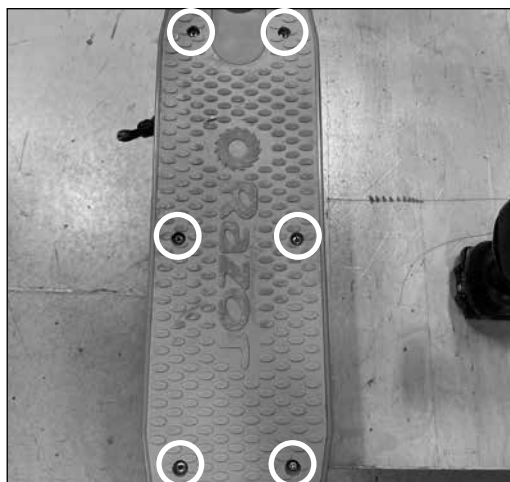


Step 2

Locate and disconnect the battery connector from the controller.



Step 3

Using a Phillips screwdriver, remove two (2) screws from the controller bracket. Remove the bracket and controller from the unit and set aside.

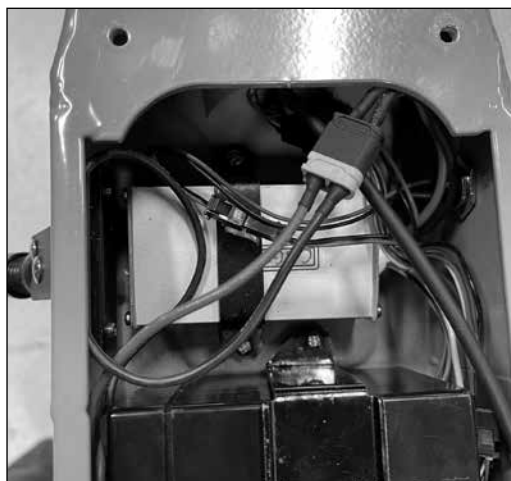

Step 4

Continue to disconnect the rest of the connectors from the controller.



Step 5

Reverse the steps.

- Reattach the battery bracket on top of the battery.
- Reconnect the battery to the controller.
- Reposition the deck and attach with the screws that were removed in Step 1.

ATTENTION: Charge battery 8 hours before using.