 




OWNER'S MANUAL

Read and understand this entire manual before using this product! For assistance contact Razor.

THANKS FOR YOUR PURCHASE!

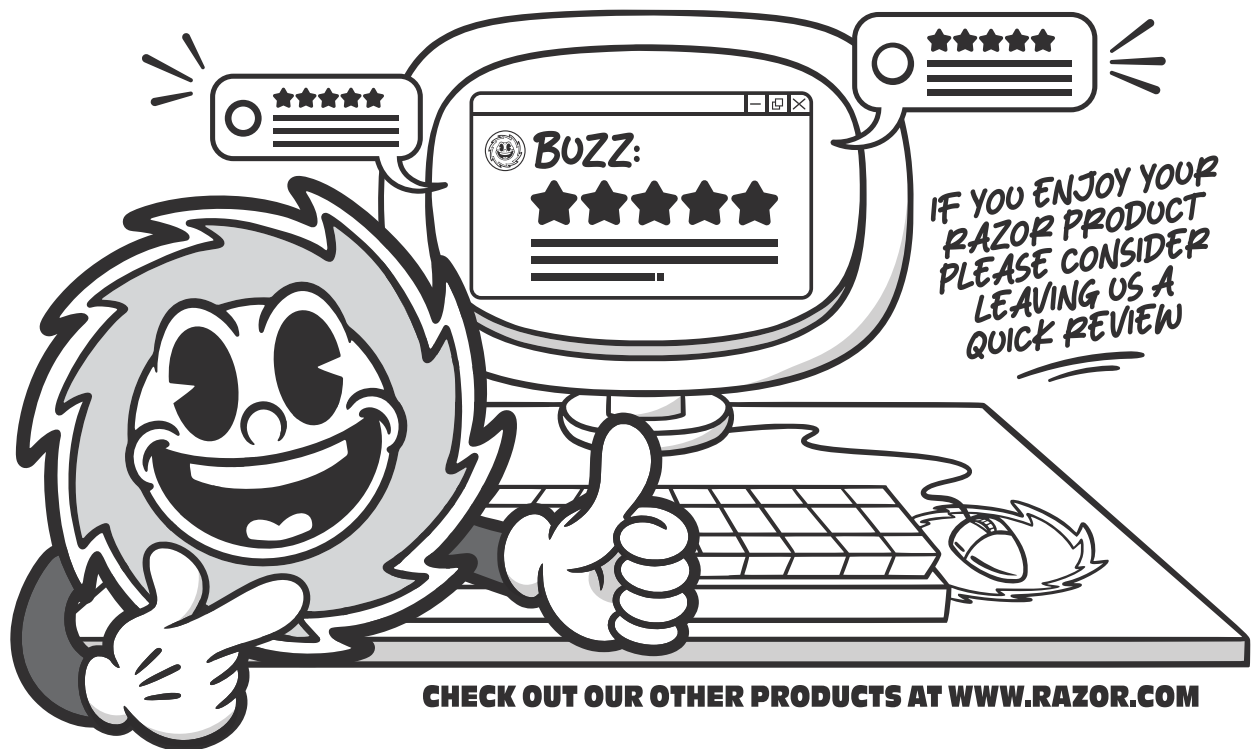

CHECK OUT OUR OTHER PRODUCTS AT WWW.RAZOR.COM

CONTENT

Safety Warnings.....	1	Usage.....	7-8
Before You Begin.....	2	Repair and Maintenance.....	8
Assembly and Set-Up.....	3-6	Product Parts.....	9
Pre-Ride Checklist.....	7	Warranty and Contact Information.....	10

SAFETY WARNINGS



Always read and follow all instructions in this manual before allowing anyone to ride this product.

⚠ WARNING: This product moves when used. Riding this product presents potential risks and it is possible to lose control and crash or to ride into potentially dangerous situations.

To prevent DEATH, SERIOUS INJURY, or PROPERTY DAMAGE:

WHO SHOULD RIDE

RECOMMENDED MINIMUM rider age is 12 years and older.

DO NOT exceed maximum weight limit of 265 lb. (120 kg).

ADULT SUPERVISION AND PARENTAL JUDGMENT is essential to select riding products appropriate for children. Not every product is appropriate for every age or size of child, and different age recommendations are available for similar products intended to reflect the nature of the hazards and the expected mental or physical abilities of a child based on their parents' discretion. Adult supervision is especially important in households where children of different ages may have access to the same riding products. Any rider unable to fit comfortably on the product should not attempt to ride it.

Rider age and weight are not the only factors to consider when deciding if a child should operate this product. The child must also be of appropriate height and maturity to operate the product and to follow rules.

Persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all the safety instructions and understand the hazards inherent with this product use should not use or be permitted to use it.

Persons with heart conditions, pregnant women, head, back or neck ailments (or prior surgeries to these areas of the body) should not use or be permitted to use this product.

Keep this product away from small children.

ADULT SUPERVISION REQUIRED

Both children and the adults responsible for their supervision while riding must recognize potentially dangerous situations and that a rider can be seriously injured or killed even when wearing appropriate safety equipment.

ALWAYS check the area where this product is to be operated to ensure it is suitable for safe operation.

ONLY allow the use and operation of this product after the intended rider demonstrates an understanding of how to operate it.

WHAT TO WEAR

ALWAYS wear an appropriate helmet, elbow pads, and knee pads. Your helmet should be flat atop your head, not tilted back at an angle. It should fit snugly and not obstruct your field of vision. The chin strap must fit securely and remain fastened while riding. Helmets may be required by law or regulation in your area.



ALWAYS wear athletic shoes (lace-up shoes with rubber soles) and keep shoelaces tied and away from wheels and moving parts. Never ride barefoot or when wearing sandals.

Long-sleeve shirts, long pants, and gloves are also recommended.

RIDE AT YOUR OWN RISK AND FOCUS ON SAFE RIDING

ALWAYS check and obey local laws or regulations that may affect the locations where this product may be used. Keep safely away from parked vehicles and from traffic at all times

NOTICE: Always yield to pedestrians and follow traffic laws. Riding on the sidewalk may be illegal; consult local laws.

RIDE DEFENSIVELY. Be careful to avoid pedestrians, skaters, skateboards, scooters, bikes, children or animals that may enter your path, and respect the rights and property of others.

NOTICE: This product has no traditional mechanical brake; place your feet on the floor to stop. Plan your stopping distance accordingly!

ALWAYS hold Drift Bars when riding.

WATCH OUT for obstacles that could catch a wheel or force you to swerve suddenly. Avoid sharp bumps, drainage grates, and other surface changes.

ALWAYS ride on flat, dry surfaces, such as pavement or level ground, without loose debris, such as sand, leaves, rocks or gravel. Wet, slick, bumpy, uneven or rough surfaces may reduce traction and lead to a crash.

DO NOT ride this product in mud, ice, puddles or water. Never immerse this product in water.

DO NOT attempt stunts or tricks when riding. Racing, stunt riding, or other maneuvers may cause loss of control, or may cause uncontrolled operator actions or reactions.

ONLY one (1) rider at a time.

DO NOT ride at night or in low visibility conditions.

DO NOT ride in wet or icy weather.

NEVER use headphones or a mobile phone while riding.

NEVER use this product near steps or swimming pools.

NEVER attempt to hold onto a moving vehicle when riding this product.

ALWAYS keep hands, feet, hair, body parts, clothing, or similar articles away from wheels or other moving parts when riding

INSPECT BEFORE RIDING

ALWAYS check that all covers and guards are secured and in serviceable condition.

ALWAYS check that tires are in good condition prior to riding.

ALWAYS look for any damage to the product and wheels.

NEVER modify the product from the manufacturer's original design and configuration.

FAILURE TO FOCUS ON SAFE, DEFENSIVE RIDING AND FOLLOW THE ABOVE WARNINGS INCREASES YOUR RISK OF SERIOUS INJURY OR DEATH.


KEEP FOR FUTURE REFERENCE.

BEFORE YOU BEGIN

Remove contents from box and check parts against diagram below. Remove the separators that protect the components from damage during shipping. Inspect the contents of the box for scratches in the paint or dents that may have occurred during shipping. Because the Crazy Cart Shuffle MAX was partially assembled and packed at the factory there should not be any problems, even if the box has a few marks or dents.

Estimated Assembly and Set-Up Time

Allow up to 15–20 minutes for assembly. Razor recommends assembly by an adult.

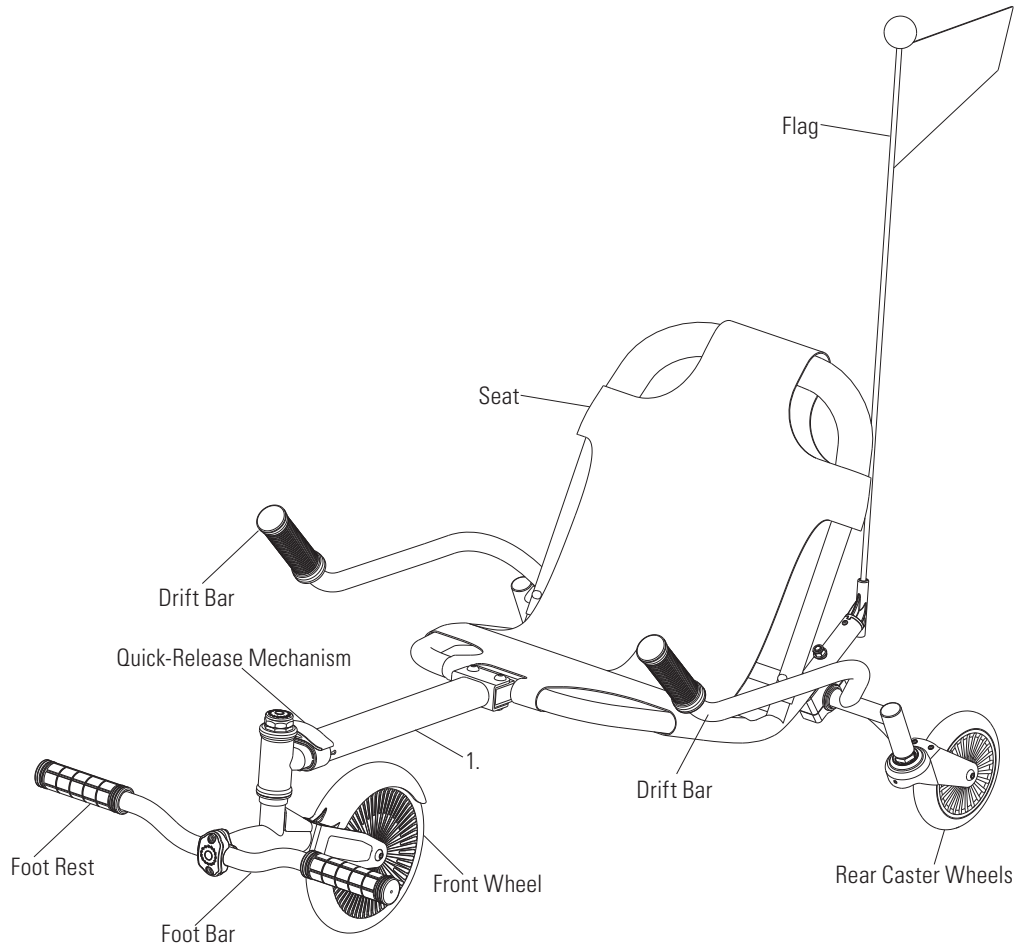


⚠ WARNING: DO NOT USE NON-RAZOR PRODUCTS WITH YOUR CRAZY CART SHUFFLE MAX. The Crazy Cart Shuffle MAX has been built to certain Razor design specifications. The original equipment supplied at the time of sale was selected on the basis of its compatibility with the frame, fork and all other parts. Use of non-Razor or aftermarket components may compromise safety, performance, and will void your warranty.

Product ID Locations:

- (See locations to the left)
1. Frame (underneath unit)
 2. Barcode on side of box (not shown)

Required Tools

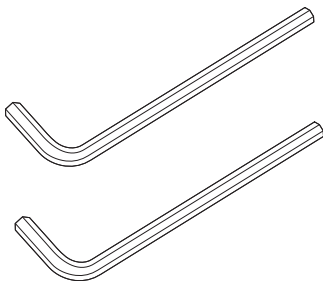


Two (2) 5 mm Allen Wrenches (included)

First, let's double check we have everything!

Box Contents:


- ☐ Crazy Cart Shuffle MAX
- ☐ Two (2) 5 mm Allen Wrenches
- ☐ Owner's Manual

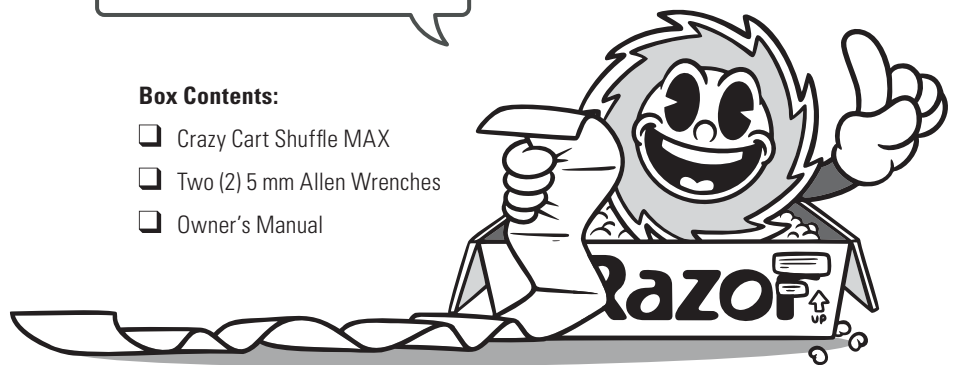


Need Help? Visit our website for replacement parts, product support, a list of authorized service centers in the US and customer service contact information at www.razor.com. Please have the product I.D. code (located on the white label of your product) available for better assistance. Additional Customer Service contact information is listed at the back of this manual.

ASSEMBLY AND SET-UP

□ Attaching the Seat

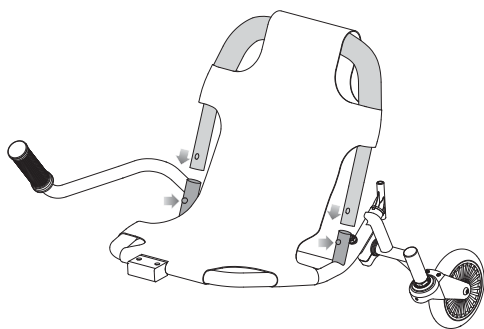

1 Slide the seat back frame tubes (left and right) on to the seat bottom frame tubes (left and right) until they hit the spring-loaded buttons on the seat bottom frame tubes. Press both spring-loaded buttons (left and right) on the seat bottom frame tubes simultaneously to slide down and install the seat back frame tubes onto the seat bottom frame simultaneously.

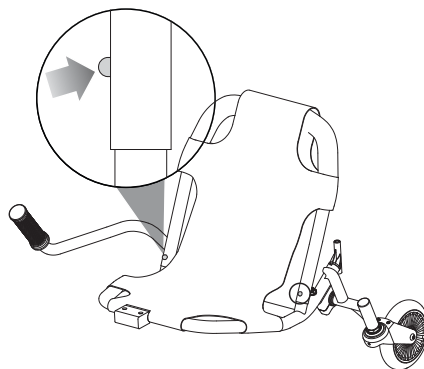


2 The spring-loaded buttons will pop out when properly installed.


⚠ WARNING: Failure to properly engage the spring-loaded buttons may cause the seat to dislodge while riding and may cause you to lose control. When correctly engaged the seat will not rotate nor will it move sideways. Note that when properly engaged, the spring-loaded buttons are clearly visible in the holes on the seat frame.

□ Attaching the Frame

Required Tools: Two (2) 5 mm Allen Wrenches (included)

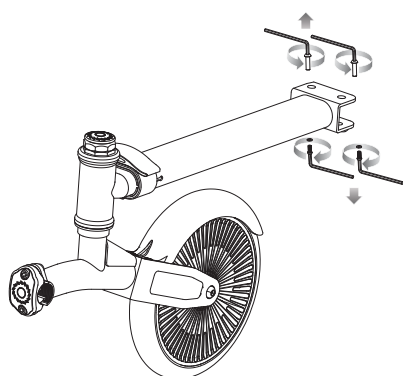


1 Using two (2) 5 mm Allen wrenches, remove the four (4) bolts on the front half of the frame.

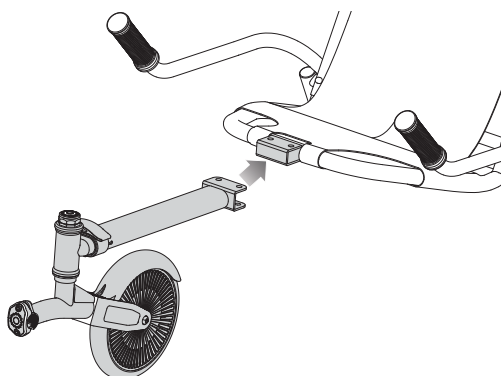

2 Install the front half of the frame to the rear half of the frame, making sure that all holes align.

⚠ WARNING: Failure to properly adjust and tighten the bolts securing the handlebars can cause loss of control, resulting in a crash that could lead to serious injury or death.

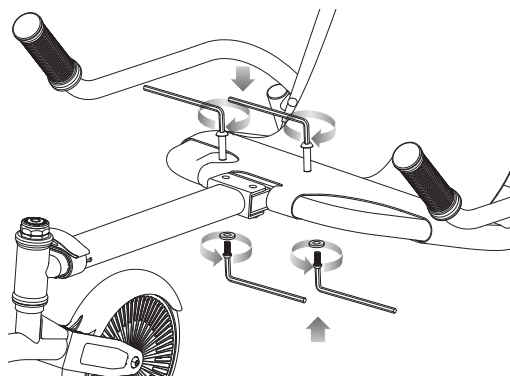


3 Using two (2) 5 mm Allen wrenches, install the four (4) bolts through the frame.


ASSEMBLY AND SET-UP

□ Attaching the Foot Bar


Required Tools: Two (2) 5 mm Allen Wrenches (included)

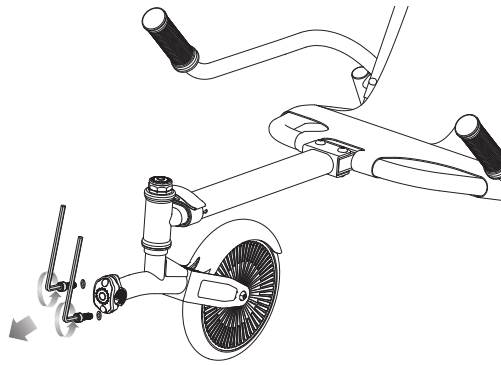

1 Using a 5 mm Allen Wrench, remove the two (2) screws and washers securing the clamp.

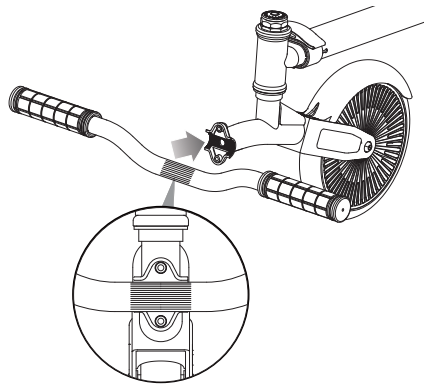


2 Center the foot bar in the foot bar clamp.

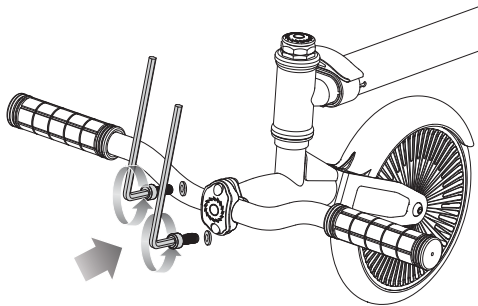


3 Using a 5 mm Allen Wrench, tighten the two screws and washers securing the clamp.

□ Attaching the Rear Caster Wheels

Required Tool: 5 mm Allen Wrench (included)

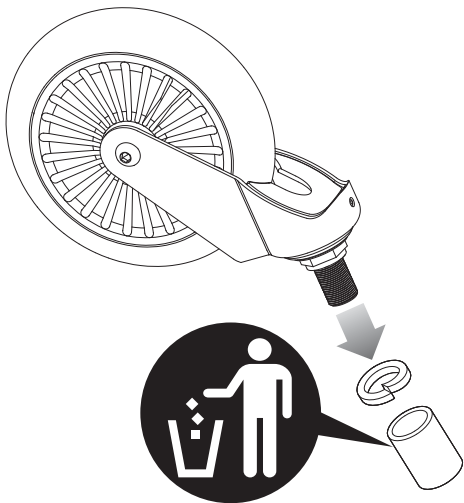

1 Remove the plastic packing material from the caster wheel. Discard the plastic packing material.

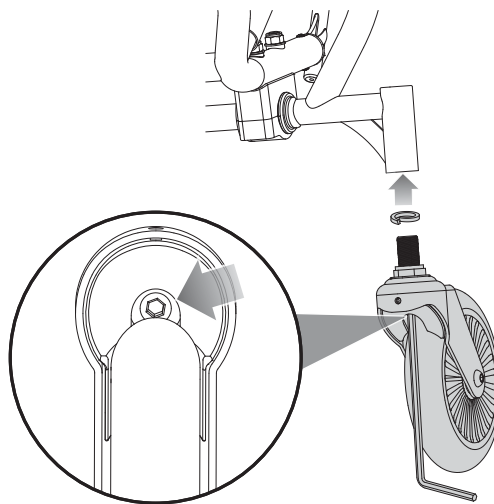


2 Put the wheel screw into the frame tube and using a 5 mm Allen wrench, tighten the bolt under the rear wheel caster.

⚠ WARNING: Failure to properly adjust and tighten the bolts that secure the wheels can cause loss of control, resulting in a crash that could lead to serious injury or death.


Note: Practice riding only in wide open areas clear from curbs, parking blocks and other obstacles. Impacting the wheels against any hard surface can damage the wheels. Wheels are not covered under your limited warranty.

PRO TIP:
Use the
Allen wrench
to attach the
rear wheels.

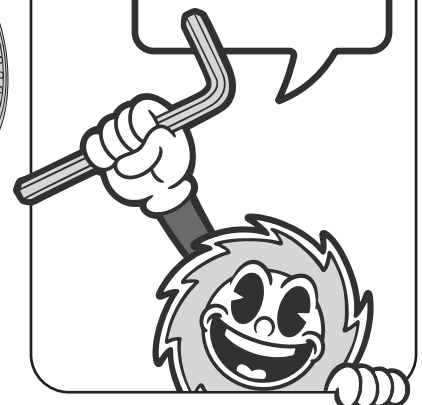


ASSEMBLY AND SET-UP


□ Adjusting the Frame Length

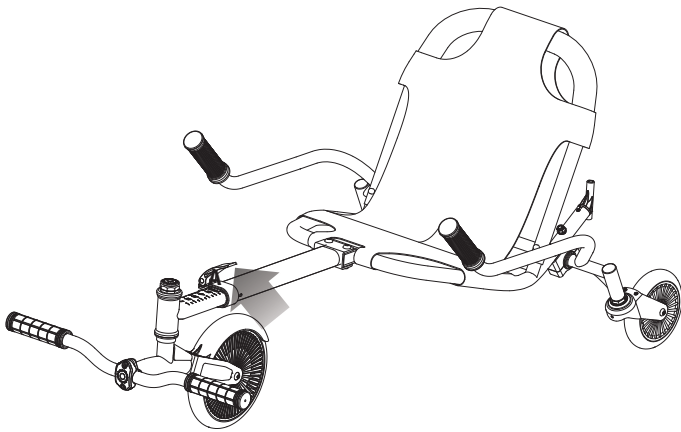

1 Locate the Quick-Release Mechanism (A). Pull it upward to release.

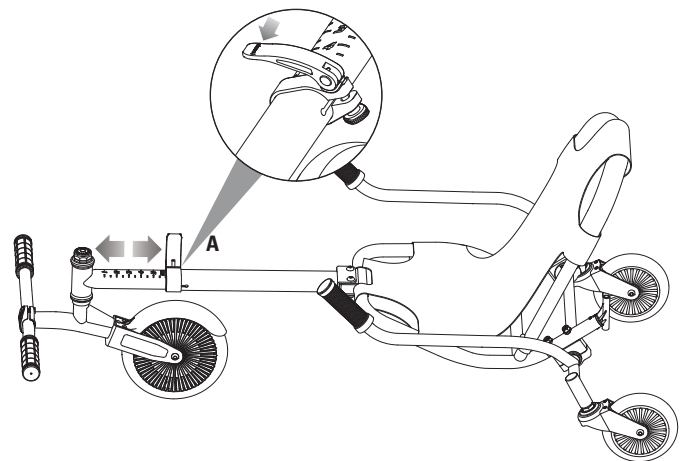


2 Slide and adjust the frame to the desired length. Push down to lock the Quick-Release Mechanism (A).

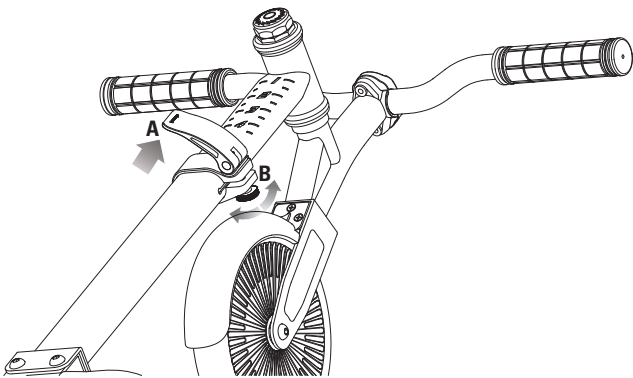


3 If the tension of the Quick-Release (QR) Mechanism needs adjustment, open the QR lever (A) and tighten or loosen the adjustment nut (B) as necessary. After making the adjustment, push down firmly on the QR lever to test the tension. The QR lever must always be fully engaged and locked down while riding. Tension should be snug when locked, do not over tighten.

ASSEMBLY AND SET-UP


□ Attaching the Flag

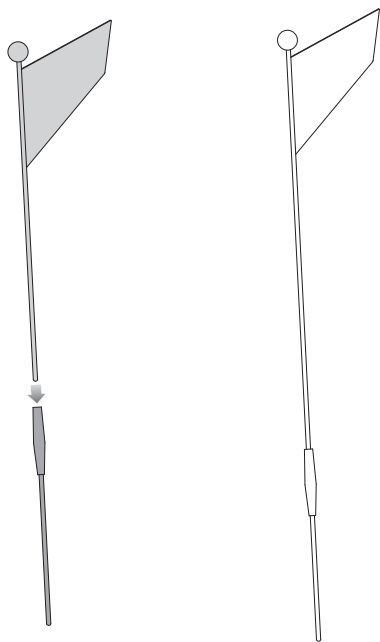

1 Assemble the flag as shown.

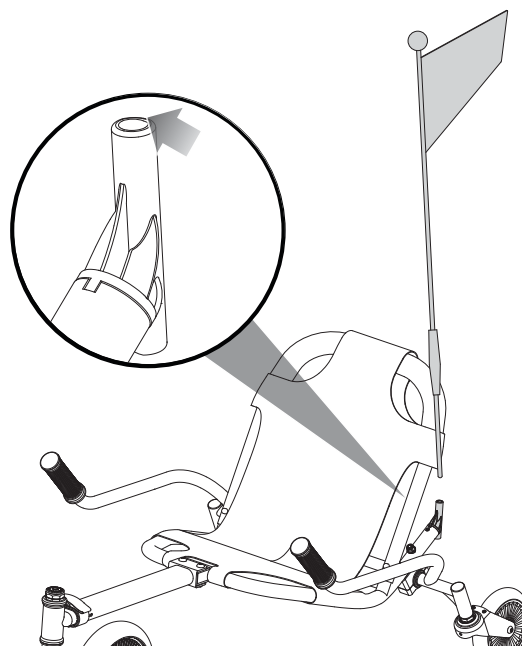

2 Insert flag into fixed hole located behind the seat.

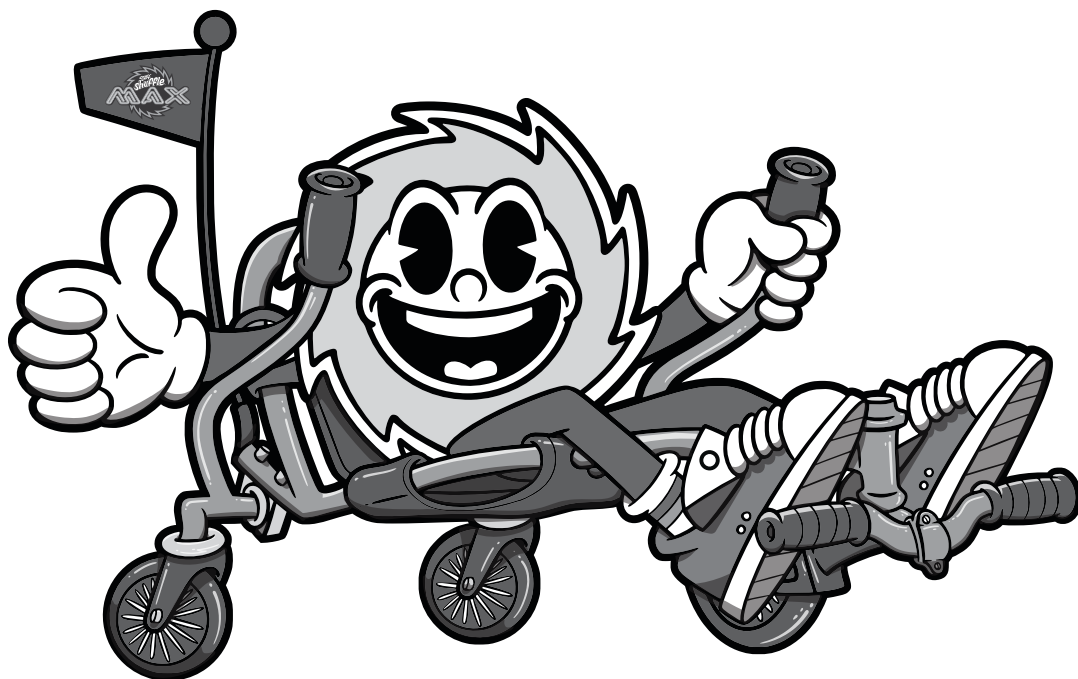

Need Help? Visit our website for replacement parts, product support, a list of authorized service centers in the US and customer service contact information at www.razor.com. Please have the product I.D. code (located on the white label of your product) available for better assistance. Additional Customer Service contact information is listed at the back of this manual.

PRE-RIDE CHECKLIST



Wheels

Periodically inspect the wheels for excess wear.



Frame, Fork and Drift Bars

Check for cracks or broken connections. Although broken frames are rare, it is possible for a rider to strike a curb or object and wreck, bend, or break the frame. Inspect your product on a regular basis.



Hardware/Loose Parts

Check and secure all fasteners before every ride. Make sure the bolts and casters are tight. There should not be any unusual rattles or sounds from loose parts or broken components. If the unit is damaged, do not ride. **See "Safety Warnings" on page 1 of this manual.**



Safety Gear

ALWAYS wear an appropriate helmet, elbow pads, and knee pads. Your helmet should be flat atop your head, not tilted back at an angle. It should fit snugly and not obstruct your field of vision. The chin strap must fit securely and remain fastened while riding. A helmet may be legally required by local law or regulation in your area. Always wear athletic shoes (lace-up shoes with rubber soles) and keep shoelaces tied and out of the way of the wheels, motor and drive system. NEVER ride barefoot or in sandals.



Laws and Regulations

Always check and obey any local laws or regulations.




Be Careful!

This product is not for aggressive or trick riding. Avoid steep inclines and don't ride too fast — you can lose control and fall. Skateboard parks are not designed for young riders. Never ride in traffic or on the street and watch your surroundings for pedestrians, bikers, boarders and skaters.

Hold on to the Drift Bars at all times.

☒ **HAVE FUN!!**

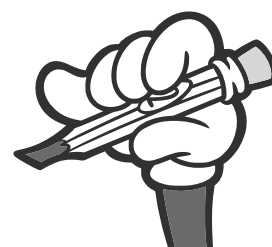


USAGE

☐ How to Ride


The Crazy Cart Shuffle MAX is designed for learning at a slow pace. While seated, grasp grips on the Drift Bars and place both feet on the Foot Bar. Using feet, move the Foot Bar from side-to-side to propel the product. Using hands, move Drift Bars up and down to spin and drift. **Maintain a hold on the Drift Bars at all times.**

How to Move Forward

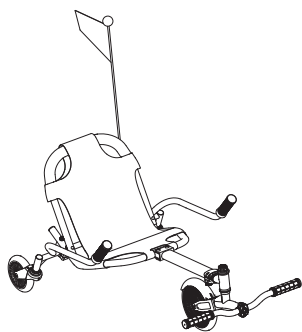


With the Drift Bars down, move the Foot Bar from side-to-side to propel the product forward.

How to Turn Left

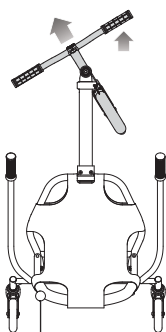


Push the right side of the Foot Bar with your foot to turn left.

How to Turn Right

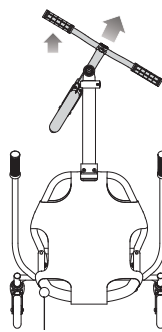

Push the left side of the Foot Bar with your foot to turn right.

How to Drift and Spin

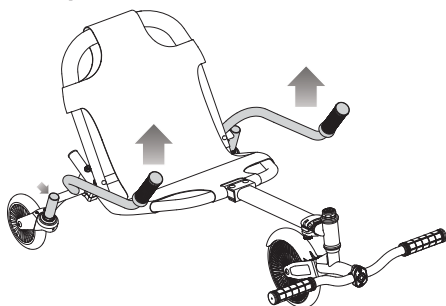

While turning in either direction, pull up the Drift Bars to initiate drifts and spins. Use Foot Bar to control your rotation and direction of travel. Razor recommends that you practice drifting and spinning in an open area free from obstructions before riding your Crazy Cart Shuffle MAX around others.

⚠ WARNING: When riding, both feet must be placed securely on Foot Bar.



⚠ WARNING: Do not allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with the wheels or other moving components.

USAGE

❑ How to Stop

This product has no brake. Place your feet on the ground and lower the Drift Bars to slow and stop. Make certain feet are placed on the sides (not in front of the Foot Bar before dismounting to either side).

Note: Do not step out of Crazy Cart Shuffle MAX until unit has come to a complete stop.

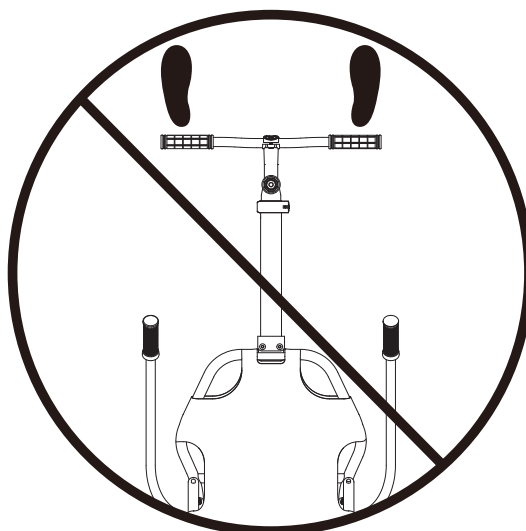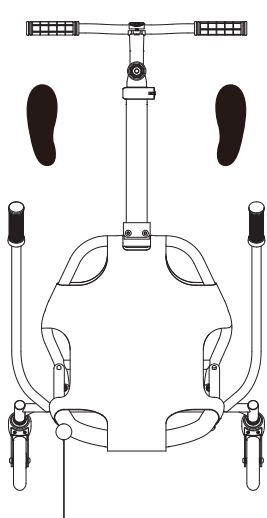

REPAIR AND MAINTENANCE

❑ Cleaning

Wipe with a damp cloth to remove dirt and dust. Do not use industrial cleaners or solvents, as they may damage the surfaces. Do not use alcohol, alcohol-based or ammonia-based cleaners, as they may damage or dissolve the plastic components or soften the decals or decal adhesive.

❑ Wheels and Bearings

Under normal circumstances and conditions, Razor wheels and wheel bearings are maintenance free. Nonetheless, it is the responsibility of the owner or guardian to periodically inspect the wheels for wear and tear, the axle for proper tightness, bearings for side-to-side play, and for loose parts. When a wheel develops play, this is an indication of excess wear and replacement is necessary. Replace immediately with only genuine Razor wheels. Worn wheels/bearings are considered normal wear-and-tear and are not covered by the Razor Warranty. Wheels other than genuine Razor wheels may not be compatible with your Razor product. The use of anything other than genuine Razor replacement parts may affect your safety and will void your warranty.

❑ Replacement Parts

The most frequently requested replacement parts are available for purchase at some Razor retail partners. For the complete selection of replacement parts visit www.razor.com.

❑ Repair Centers

For a list of authorized Razor repair centers:


- Check online at www.razor.com.
- Additional Customer Service contact information is listed at the back of this manual.



CRAZY CART SHUFFLE MAX PARTS

Keep your Crazy Cart Shuffle MAX rolling for years with genuine Razor parts. Visit our website to purchase replacement parts.
(Specifications subject to change without notice.)

- | | | | |
|--------------------------|---------------------------|-----------------------------------|--------------------------------|
| 1. Foot Grips (x2) | 5. Headset (Upper/Lower) | 8. Quick-Release Mechanism | 13. Rear Caster w/ Wheels (x2) |
| 2. Foot Bar / Front Fork | 6. Front Adjustment Frame | 9. Rear Frame | 14. Seat Support Bar |
| 2-1 Clamp | 7. Rear Adjustment Frame | 10. Drift Bar Clamps (Left/Right) | 15. Seat Pad |
| 2-2 Foot Bar | 7-1 Coupling Bolts (x2) | 11. Rear Axle / Drift Bar | 16. Seat |
| 3. Front Fender | 7-2 Flat Washers (x2) | 12. Drift Bar Grips (x2) | 17. Flag |
| 4. Front Wheel Complete | 7-3 Bolts (x2) | | |

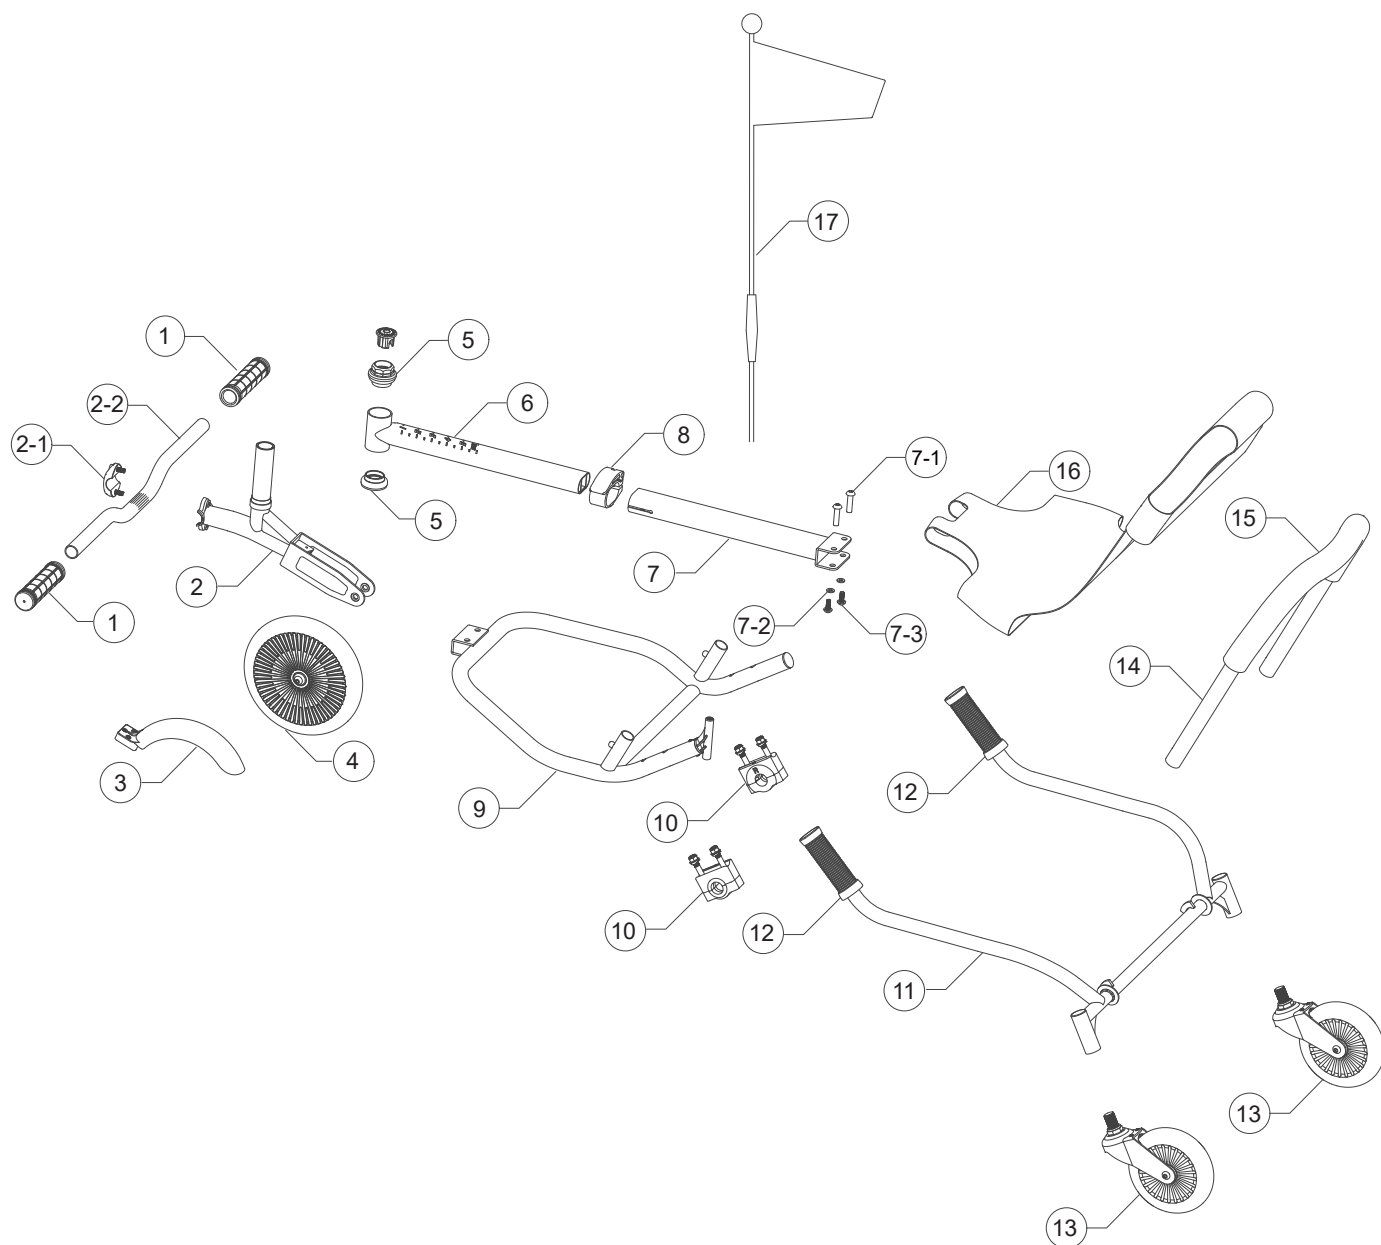

Need Help? Visit our website for replacement parts, product support, a list of authorized service centers in the US and customer service contact information at www.razor.com. Please have the product I.D. code (located on the white label of your product) available for better assistance. Additional Customer Service contact information is listed at the back of this manual.

WARRANTY

Razor Limited Warranty

The manufacturer warrants this product to be free of manufacturing defects for a period of 6 months from date of purchase. This Limited Warranty does not cover normal wear and tear, or any damage, failure or loss caused by improper assembly, maintenance, or storage.

This Limited Warranty will be void if the product is ever:

- used in a manner other than for recreation or transportation;
- modified in any way;
- rented.

The manufacturer is not liable for incidental or consequential loss or damage due directly or indirectly to the use of this product.

Razor does not offer an extended warranty. If you have purchased an extended warranty, it must be honored by the insurance provider from which it was purchased.

For your records, save your original sales receipt with this manual and write the serial number below.

NOTE: Manual illustrations are for demonstration purposes only. Illustrations may not reflect exact appearance of actual product. Specifications subject to change without notice.

CUSTOMER SERVICE CONTACT INFORMATION

For assistance contact Razor. DO NOT RETURN TO STORE.

Visit our website for product support, a list of authorized service centers in the US and customer service contact information at www.razor.com.

Please have the product I.D. code (located on the white label of your product) available for better assistance.

Additional Customer Service contact information is listed below:

AMERICAS

Razor USA LLC
P.O. Box 3610
Cerritos, CA 90703
USA

+1 866 467 2967
Monday - Friday
8:00 AM - 5:00 PM Pacific Time
customersupport@razorusa.com

EUROPE, MIDDLE EAST, AFRICA

Razor USA LLC (Europe)
Handelsweg 2
2742 RD Waddinxveen
Netherlands

+44 (0) 120 267 2702
info@razoreu.com

ASIA

Razor USA LLC (Asia)
P.O. Box 3610
Cerritos, CA 90703
USA

+81 50 7579 6622
info@razor-asia.com

UNITED KINGDOM AND IRELAND

Razor USA LLC (UK)
Unit 20
Hartnoll Business Centre
Post Hill, Tiverton
Devon EX16 4NG
UK

+44 (0) 120 267 2702
info@razoreu.com

AUSTRALIA AND NEW ZEALAND

Razor USA LLC
P.O. Box 4280
Auburn South
VIC 3122
Australia

+1 800 954 354
info@razoranz.com

Printed in China for Razor USA LLC.

Copyright ©2003-2026 Razor USA, LLC. All rights reserved. Razor® and the Razor logo design are among the registered trademarks of Razor USA LLC in the United States and/or select foreign countries. Crazy Cart® Shuffle™ MAX and logo design are trademarks of Razor USA LLC

US_260826

WELCOME TO THE FAMILY!

