



SONIC GLOW
BATTERY REPLACEMENT
PART NUMBER:W13112160003

Required Tools: (Not included)

- Phillips Screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a Phillips screwdriver, remove six (6) screws from the deck, then remove the deck.




Step 2

Using a Phillips screwdriver, remove four (4) screws from the battery brackets, then remove the battery brackets.

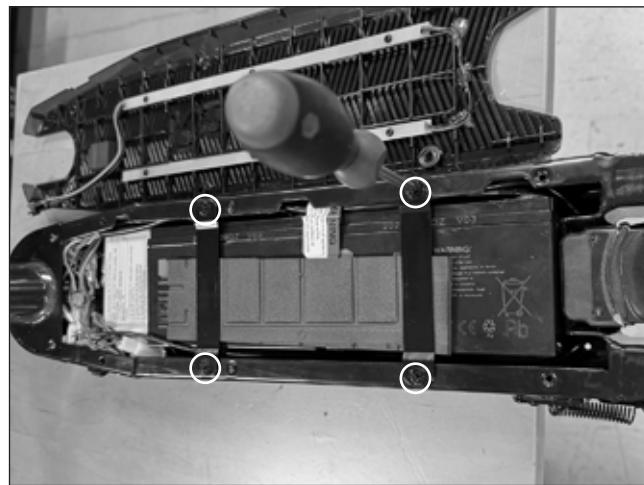

Step 3

Locate and disconnect the battery from the controller and the two wires that connect to the reset button.

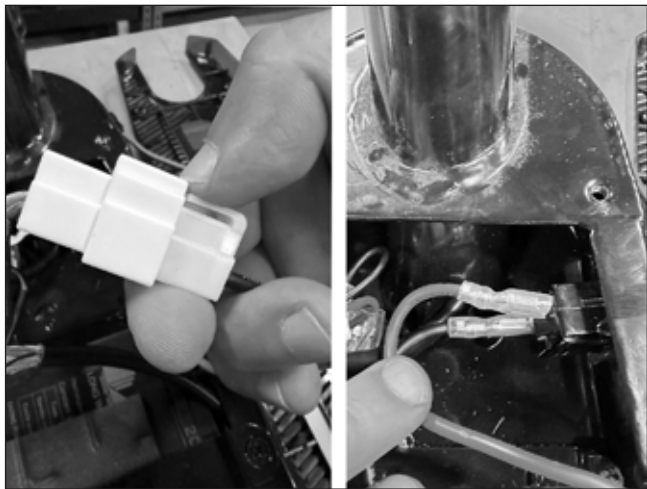

Step 4

Using both hands, lift and remove the batteries from the unit.

Step 5

Reverse steps 1 - 4 to install new batteries.

ATTENTION: Charge battery 12 hours before using.