



SONIC GLOW
POWER SWITCH REPLACEMENT
PART NUMBER:W13112445101

Required Tools: (Not included)


- Flat Screwdriver
- Phillips Screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a Phillips screwdriver, remove six (6) screws from the deck, then remove the deck.

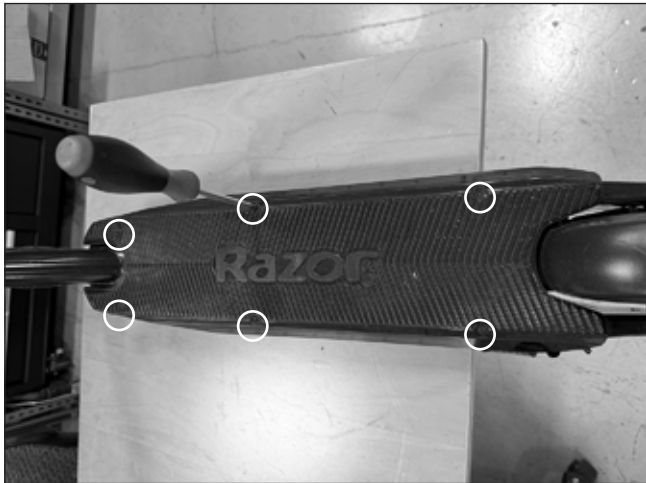

Step 2

Locate and disconnect the battery from the controller.

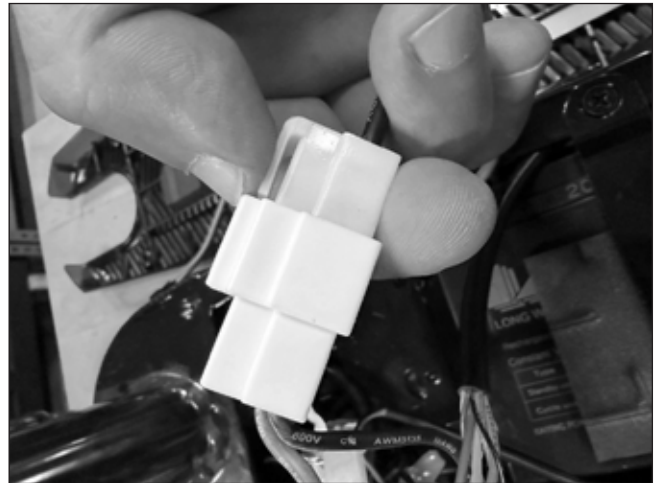

Step 3

For better access to the power switch, remove the Phillips screw that secures the controller to the frame, then remove the controller.



Step 4

Locate and disconnect the red, blue, and black wires from the power switch. Using a flat screwdriver, remove the glue from the back of the power switch and push the power switch out from the battery compartment.



Step 5

Reverse steps 1 - 4 to install a new power switch.

Note: When reconnecting the power switch, connect the red wire to the bottom silver prong, the blue wire to the middle prong, and the black wire from the charger port to the top gold-colored prong.

ATTENTION: Charge battery 12 hours before using.