



**HOVERTRAX BRIGHTS
CONTROLLER REPLACEMENT**
PART NUMBER:W15156234015

Required Tools: (Not included)


- Phillips Screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Turn the Hovertrax upside down. Use a Phillips screwdriver to loosen all the screws securing the left and right lower covers in sequence.

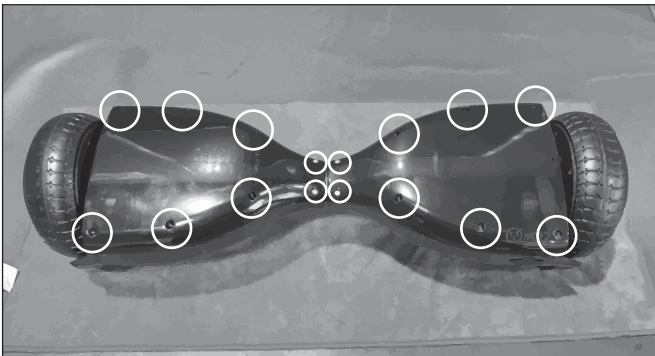


Step 2

Find the power wire and disconnect the connector.

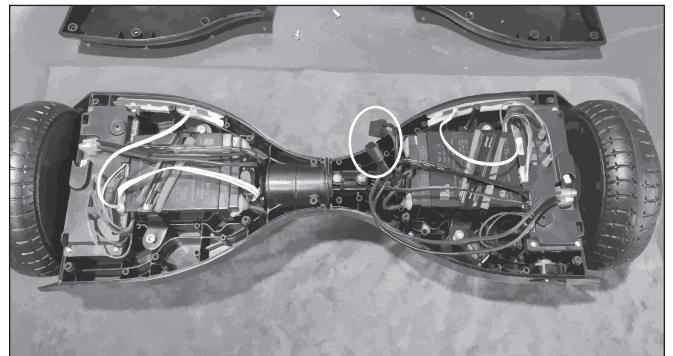


Step 3

Right controller: Disconnect all connectors shown in the picture.

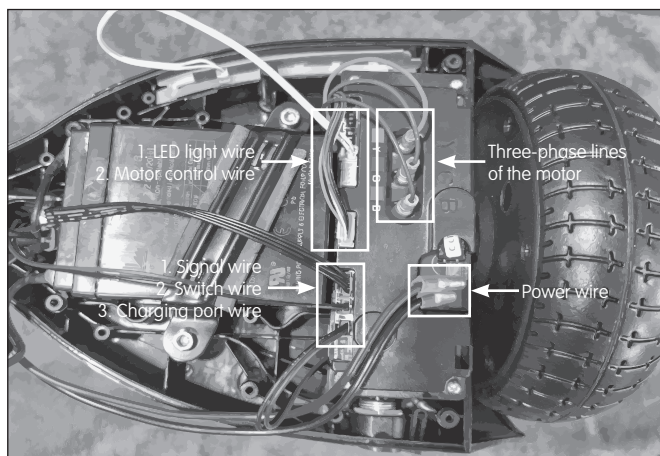


Step 4

Left controller: Disconnect all connectors shown in the picture.

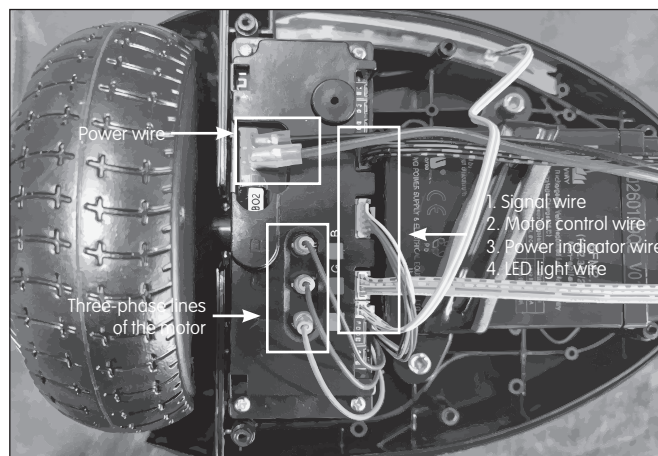

Step 5

Use a Phillips screwdriver to remove all the screws on the left/right controller.

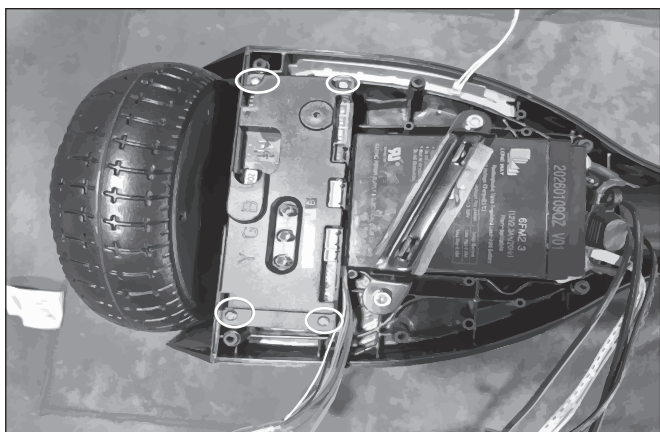

Step 6

Insert new controllers, then reverse steps 1 through 5.

ATTENTION: Charge battery 12 hours before using.