

Required Tools: (Not included)

- 5 mm Allen Wrench
- Phillips Screwdriver

⚠ WARNING


⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Remove the four (4) hex screws on the deck using a Phillips screwdriver.

**Step 2**

Remove the deck from the unit and remove the four (4) screws on the battery bracket using a 5 mm Allen wrench.

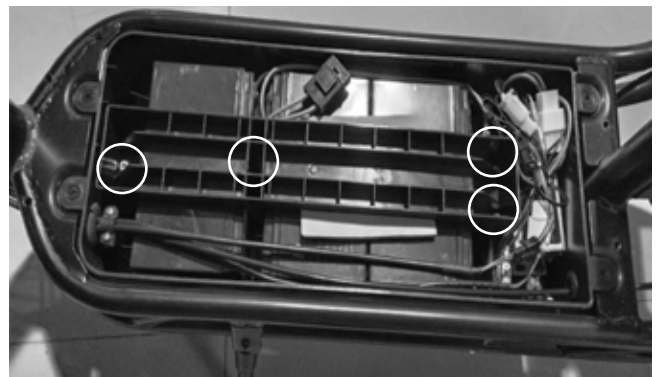

Step 3

Locate and disconnect the battery connector by depressing the locking pin.



Step 4

Lift and remove from the tray the battery with the longer wires and then using both hands lift and remove the other two batteries.



Step 5

Insert new batteries, then reverse steps 1 through 4.

ATTENTION: Charge battery 12 hours before using.