



RAMBLER™
DISPLAY/POWER SWITCH REPLACEMENT
PART NUMBER:W15128783283

Required Tools: (Not included)


- 2.5mm Allen Wrench
- 4mm Allen Wrench
- 5mm Allen Wrench
- Flat Screwdriver

! WARNING

! CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 4mm Allen wrench, remove two (2) screws located under the seat at the back of the unit.

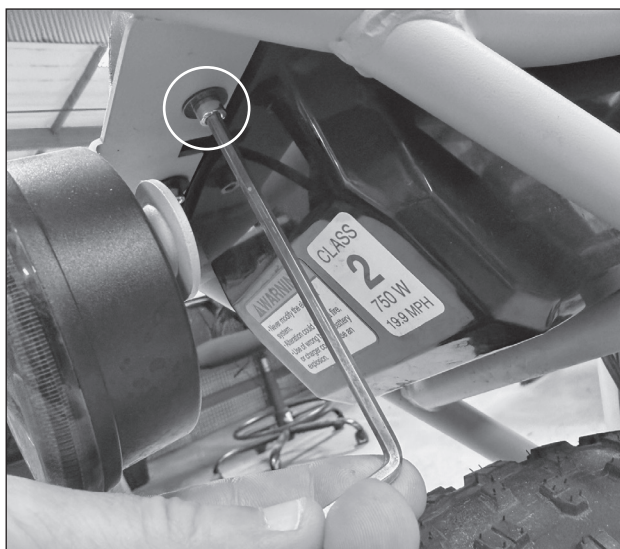

Step 2

Lift and pull back on the seat to remove it.



Step 3

Locate and disconnect the connector from the display to the controller.



Step 4

Using a 5mm Allen wrench, loosen the bolt from the clamp on the brake lever.




Step 5

Using a 2.5mm Allen wrench, loosen the set screw on the display. Move the display and brake lever away from the grip.



Step 6

Insert the blade of a flat screwdriver between the handlebar and the grip. Apply WD-40 or soapy water and remove the grip. Slide the brake lever and display out from the handlebar.

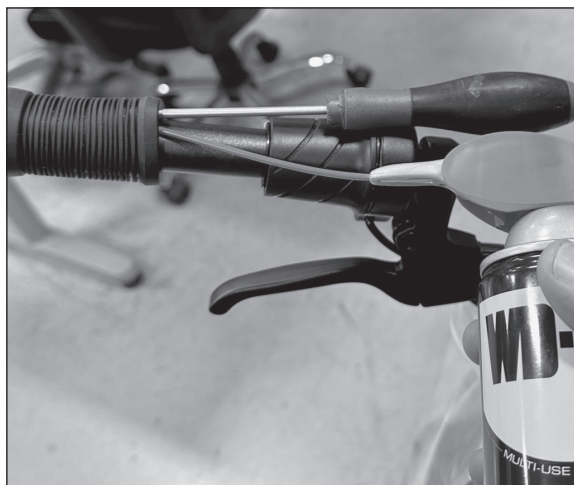

Step 7

Insert a new display, then reverse steps 1 through 6.

ATTENTION: Charge battery 12 hours before using.