



SONIC GLOW
CONTROLLER REPLACEMENT
PART NUMBER:W13112110015

Required Tools: (Not included)

- 5 mm Allen Wrench
- Phillips Screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a Phillips screwdriver, remove six (6) screws from the deck, then remove the deck.



Step 2

Locate and disconnect all the connectors from the controller.

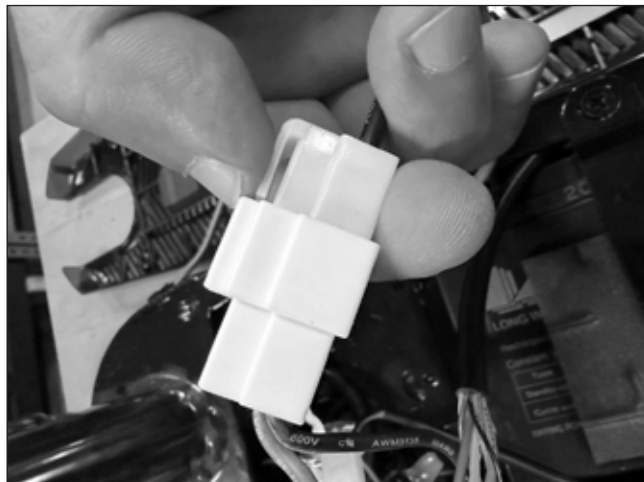

Step 3

Disconnect the blue and red connectors from the power switch.



Step 4

Using a Phillips screwdriver, remove the screw that holds the controller onto the unit.



Step 5

Using a 5mm Allen wrench, loosen the bolts from the collar clamp and remove the T-bar.



Step 6

Disconnect the throttle from the controller. Before removing the controller from the unit, attach a shoelace to the line and pull the line out from the frame, leaving the shoelace inside. This can be used to reinstall the line more easily.



Step 7

Reverse steps 1 - 6 to install a new controller.

ATTENTION: Charge battery 12 hours before using.