



ECOSMART HD/SUP REAR FENDER REPLACEMENT

ECOSMART HD PART NUMBER:W13114508021
ECOSMART SUP PART NUMBER:W13114510021

Required Tools: (Not included)


- 3 mm Allen Wrench
- Two (2) 8mm open wrenches
- 21 mm Open Wrench or an Adjustable Wrench
- Phillips Screwdriver

WARNING

 **CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using two 8 mm open wrenches, loosen and remove the bolt and lock nut that holds the brake anchor onto the frame. Note the sequencing and placement of the spacers and hardware for reassembly.

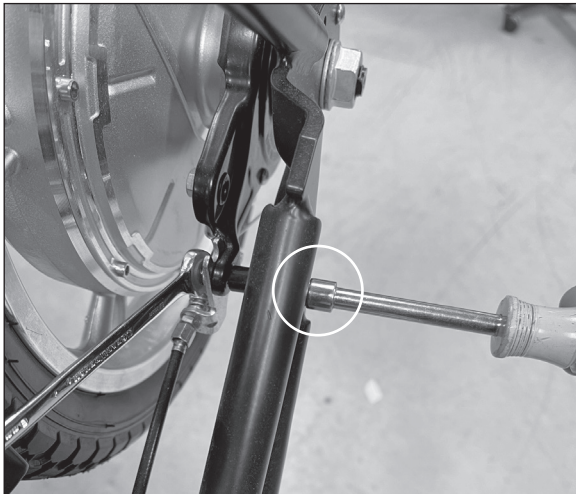


Step 2

Using a 21mm open wrench or an adjustable wrench, loosen and remove the lock nut from the axle.




Step 3

Loosen and remove the lock nut on the opposite side and slide the wheel downward just enough to access the fender screws. Be careful not to damage the motor wires.

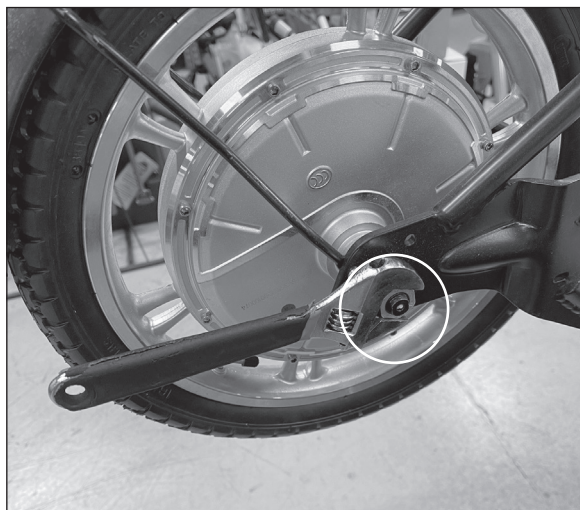

Step 4

Using a Phillips screwdriver, remove the two screws that hold the fender onto the frame.

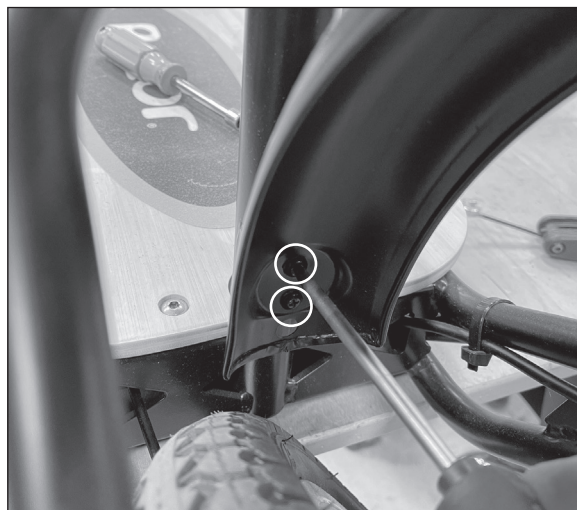

Step 5

Using a 3mm Allen wrench, loosen and remove the hex bolts from the side of the unit.



Step 6

Remove one more 3mm hex bolt from the other side of the unit and remove the fender.



Step 7

Insert a new rear fender, then reverse steps 1 through 6.

ATTENTION: Charge battery 12 hours before using.