



**MX350 & MX400 VERSION 37+
SX350 VERSION 1+
BATTERY REPLACEMENT
PART NUMBER: W15120040003**

Required Tools: (Not included)


- 4mm Allen Wrench
- 5mm Allen Wrench

WARNING

 CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 5mm Allen wrench, remove one (1) hex screw next to the power switch and two (2) screws under the seat. Remove the seat fairing.

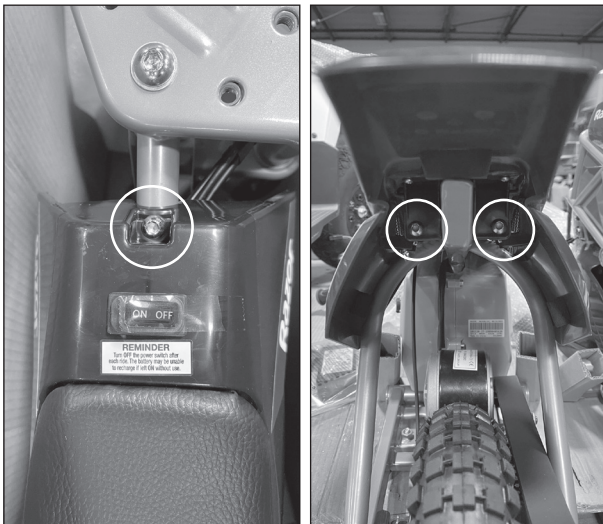


Step 2

Carefully disconnect the three (3) wires that connect to the power switch.



Step 3

Using a long 4mm Allen wrench, remove eight (8) hex bolts from the battery cover. Locate and disconnect the battery from the controller.

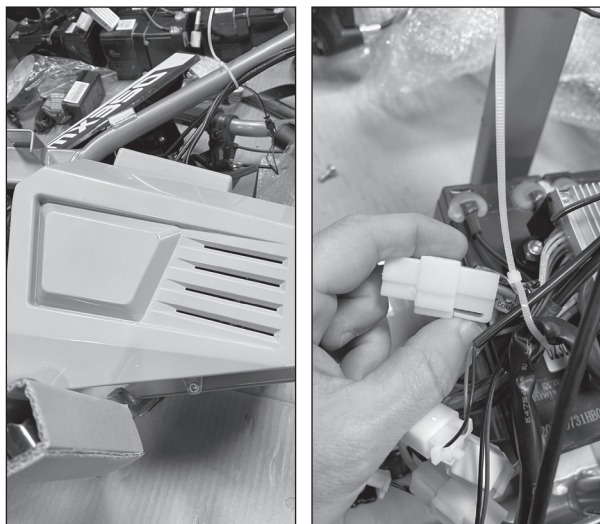


Step 4

Using a 4mm Allen wrench, remove the two (2) screws that hold the controller onto the battery bracket. Remove the controller.



Step 5

Using a 4mm Allen wrench, remove two (2) screws from the battery bracket. Using both hands, carefully remove the battery from the unit.

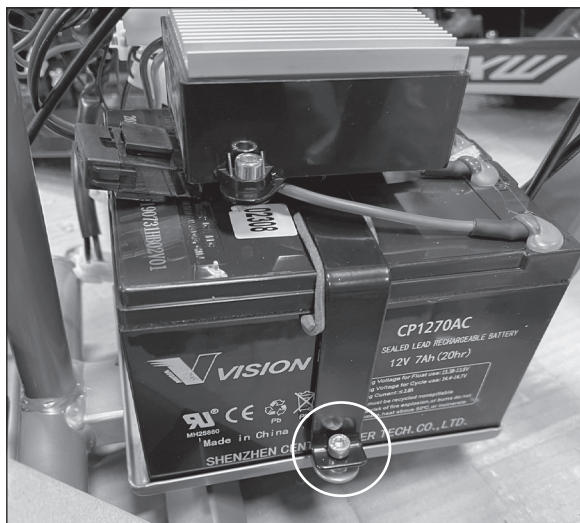

Step 6

Insert a new battery, then reverse steps 1 through 5.

ATTENTION: Charge battery 12 hours before using.

Note

When reconnecting the power switch, make sure to connect the black wire to the gold-colored prong and the two red wires to the silver-colored prongs.