



RSF650

BATTERY REPLACEMENT INSTRUCTIONS

PART # W15128560003

Required Tools: (Not included)


- Phillips screwdriver
- 4 mm Allen wrench
- 5 mm Allen wrench

WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver and a 4 mm Allen wrench, loosen and remove four (4) screws and one (1) hex bolt from the left side battery cover.

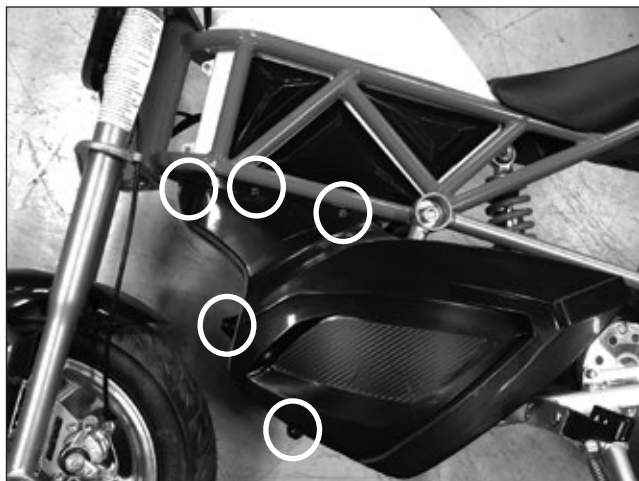


Step 2

Using a Phillips screwdriver, loosen and remove two (2) screws from the right side. Pull both battery covers off from the unit and set aside.




Step 3

Locate and disconnect the battery from the controller. Using a 4 mm Allen wrench, remove the two (2) hex bolts that hold the controller onto the battery bracket.

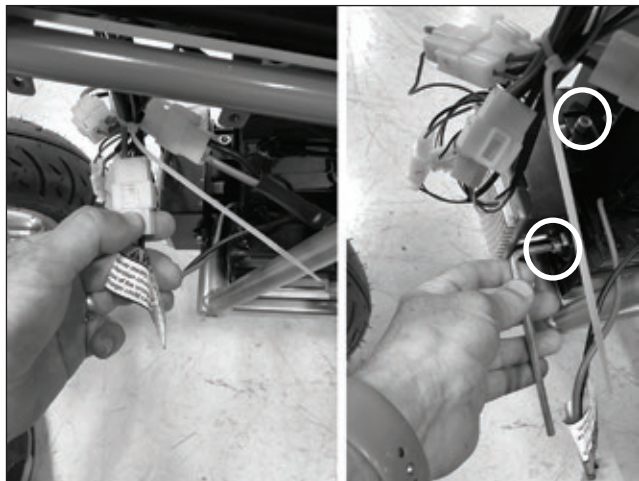

Step 4

Using a 5 mm Allen wrench, loosen and remove one (1) hex bolt located at the bottom of the unit and one (1) more located in front of the batteries.

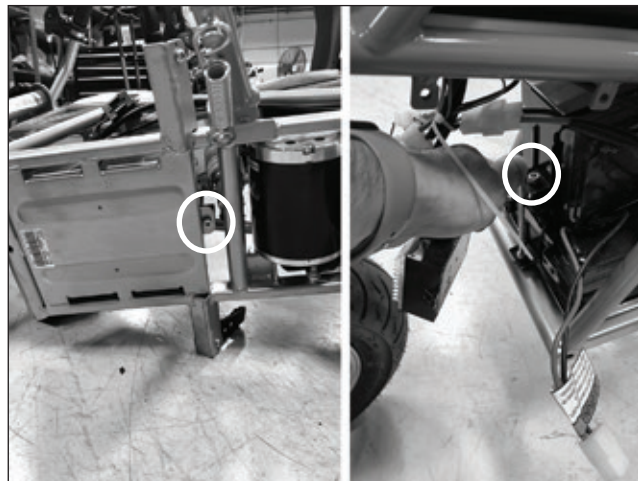

Step 5

Using both hands, lift and pull the battery set away from the unit.



Step 6

Once the battery set is out of the unit, remove two (2) hex bolts from the top battery bracket using a 5 mm Allen wrench.



Step 7

To install a new battery, reverse steps 1-6. (Remember to seat the battery on top sideways).

ATTENTION: Charge battery 12 hours before using.