

COLORRAVE BATTERY REPLACEMENT

PART NUMBERS: V1: W13111701003

V2+: W13111712003

Required Tools: (Not included)


• Phillips Screwdriver

WARNING

A CAUTION: To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove the ten (10) screws from the bottom of the unit.

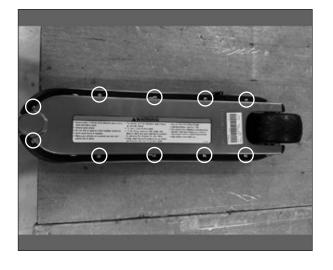


Step 2

Flip the unit over and lift the deck. Be careful not to pull the wires from the push button. Set the deck cover aside.




Step 3

Locate and disconnect the battery from the controller.

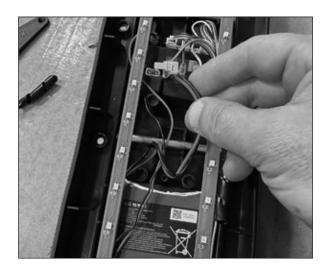


Step 4

Using a Phillips screwdriver, remove the two (2) screws that hold the light strip onto the battery tray and move the strip aside to allow better access to the battery.

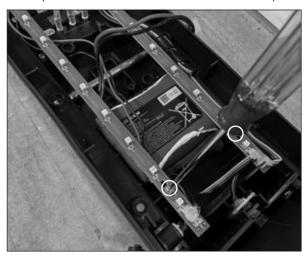

Step 5

Using a Phillips screwdriver, remove the three (3) screws from the battery holder and carefully remove the battery.

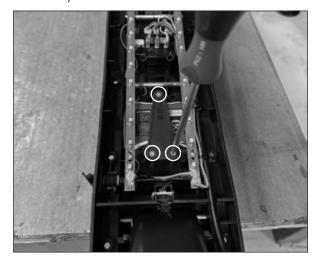

Step 6

Install the new battery, then reverse steps 1 through 5.

ATTENTION: Charge battery 4 hours before using.