

Required Tools: (Not included)

- 5 mm Allen wrench
- 6 mm Allen wrench
- Two (2) 10 mm open wrenches
- 13 mm open wrench
- Flathead screwdriver
- Phillips screwdriver

⚠ WARNING


⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 5 mm Allen wrench, loosen and remove the bolts from the steering wheel. Pull the steering wheel out from the shaft.


**Step 2**

Using a 13 mm open wrench, loosen the lock nut on both of the front wheels. Remove the wheels.

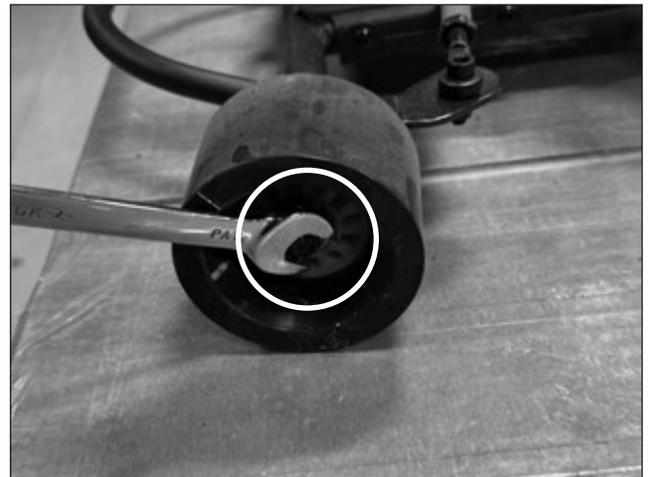


Step 3

Using a Phillips screwdriver, remove two (2) screws on the back of the rubber steering cover and four (4) more on the front.

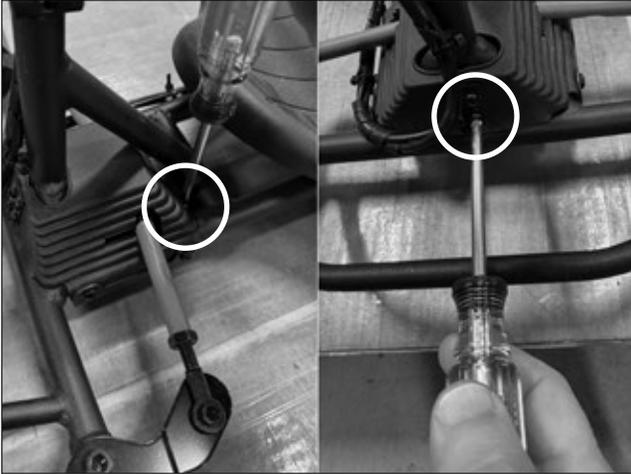

Step 4

Using a Phillips screwdriver, remove four (4) screws that hold the bottom steering cover plate and remove from the frame.

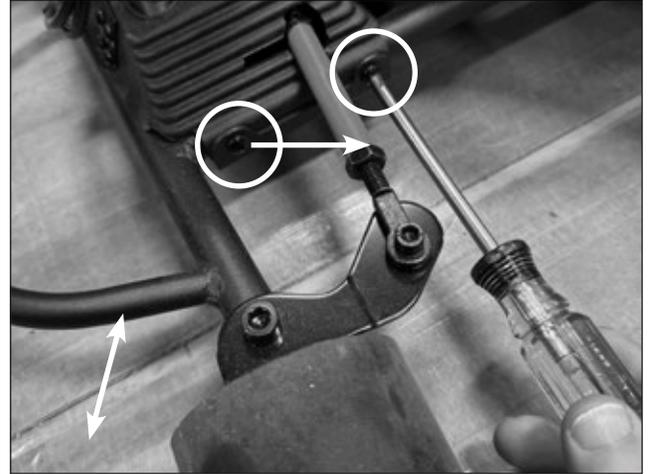

Step 5

Using a flathead screwdriver, remove the "C" Clip from the steering shaft.



Step 6

Using a 6 mm Allen wrench and a 10 mm open wrench, loosen and remove the bolts from the spindle arms.

