



**C45
KICKSTAND
REPLACEMENT INSTRUCTIONS
PART# W13113217028**

Required Tool: (Not included)

A. 4 mm Allen wrench

⚠WARNING

⚠CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before performing any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a size 4 mm Allen wrench, loosen and remove the two (2) hex screws that hold the kickstand onto the frame.



Step 2

To install new kickstand, reverse step 1.

Attention: Charge battery 6 hours before using