

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Required Tool: (Not included)

- Phillips screwdriver
- Flathead screwdriver
- Two (2) open wrenches

Step 1

Using a Phillips screwdriver, remove the three (3) screws on the chain guard. Remove the chain guard.

**Step 2**

With a flat screwdriver, remove the spring from the tensioner arm.



Step 3

Using two (2) 10 mm open wrenches, loosen and remove the nut and bolt that hold the tensioner onto the frame.



Step 4

Replace the chain tensioner with the new one.



Step 5

The tensioner needs to be positioned so that it is pushing upwards towards the lower side of the chain.



Step 6

The chain tensioner is self-adjusting, so there is no need for adjustment.



Step 7

Install the new chain tensioner, then reverse steps 1 through 6.

* Place the chain guard back and secure it with screws.

ATTENTION: Charge battery 12 hours before using.