



RAVEN
KICKSTAND REPLACEMENT
PART NUMBER: W13111243028

Required Tool: (Not included)

- 5 mm Allen wrench

⚠ WARNING

⚠ **CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a size 5 mm Allen wrench, loosen and remove the screw that holds the kickstand onto the frame.



Step 2

Install the new kickstand.

ATTENTION: Charge battery 5 hours before using.