

Required Tools: (not included)

- A. Phillips Head Screwdriver
- B. Flat Head Screwdriver
- C. 19mm Open Head Wrench (**Ripster**)
- D. 24mm Open Head Wrench (**Ripstik**)

Step 1:

Remove the phillip screws located underneath the deck. On the Ripstik, there are 5 screws on the kick tail (rear) and 4 screws on the kick nose (front end). (Figure 1)

Note: On the Ripster, there are 6 screws on both ends.

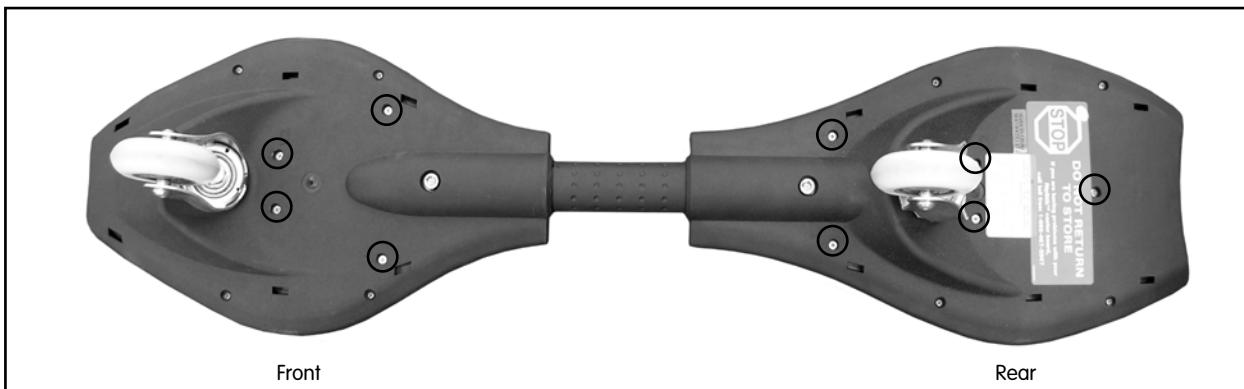


Figure 1

Step 2:

Using a flat head screwdriver, carefully push the plastic tabs to remove the deckplate. This will give you access to the bolt that secures the caster. (Figure 2)

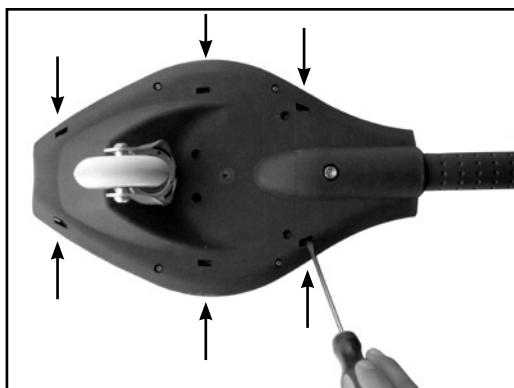


Figure 2

Step 3:

Using the appropriate open head wrench, remove the nut located underneath the platform deck. (Figure 3)

Note: If necessary, once nut has been removed, slightly tap the top of the caster bolt to help pull caster out.

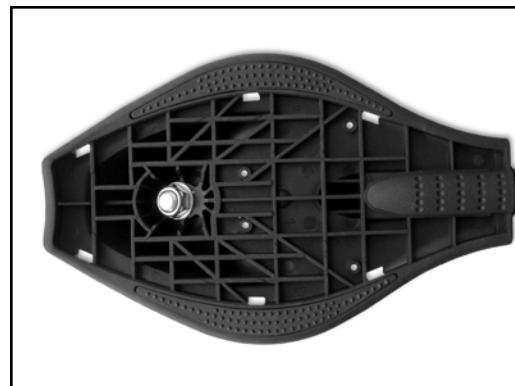


Figure 3