




COLOR RAVE CONTROLLER REPLACEMENT

STANDARD CONTROLLER PART #: W13111715015
REFRESHED CONTROLLER PART #: W13111712015

Required Tool: (Not included)


- Phillips Screwdriver

WARNING

 **CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a Phillips screwdriver, remove the ten (10) screws from the bottom of the unit. Flip the unit over. Lift the deck being careful not to pull the wires from the push button.

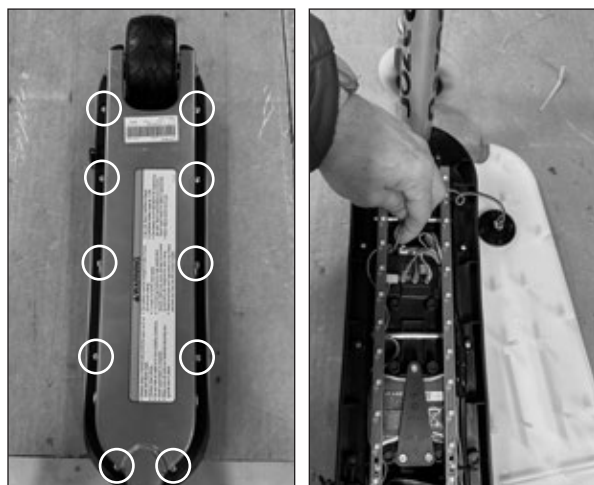


Step 2

Locate and disconnect all the connectors from the controller.

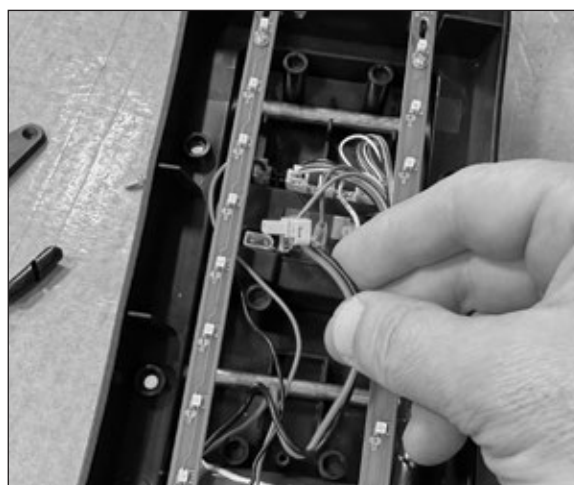


Step 3

Using a Phillips screwdriver, remove the four (4) screws that hold the light strips onto the battery tray and move the strips aside to better access the controller.

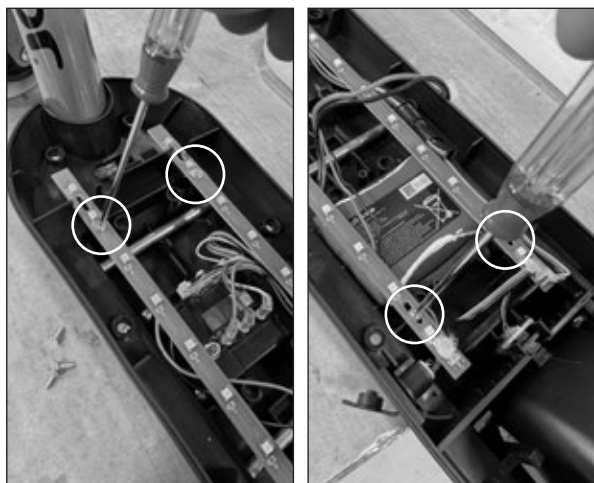

Step 4

After the light strips have been moved, use a Phillips screwdriver to remove the four (4) screws that hold the controller in place. Remove the controller.

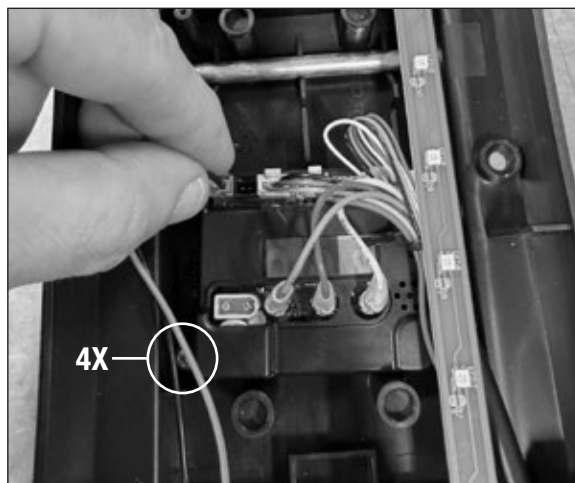

Step 5

Reverse the steps to install the new controller.

ATTENTION: Charge battery 4 hours before using.