

Required Tools: (Not included)


- 5mm Allen Wrench
- 6mm Allen Wrench
- 19mm Open-End Wrench

⚠ WARNING


⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 5mm Allen wrench, remove the two (2) screws on the front brake. Note: When reinstalling later, make sure the brake is fully engaged.

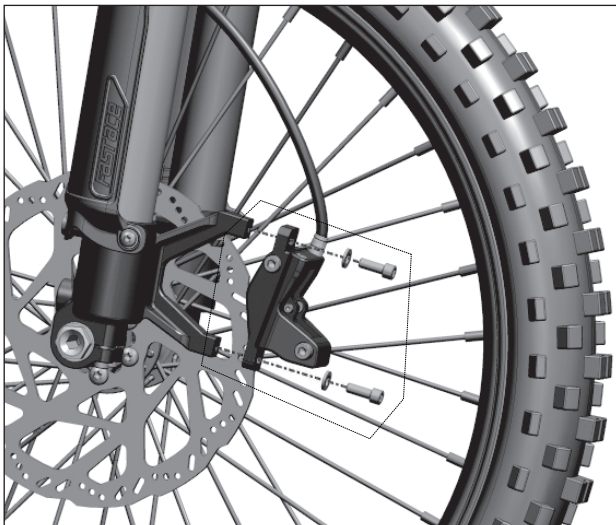
**Step 2**

Using a 6mm Allen wrench, remove four (4) screws on the front shock absorber. Using a 19mm open-end wrench, remove the nuts on the front wheel.

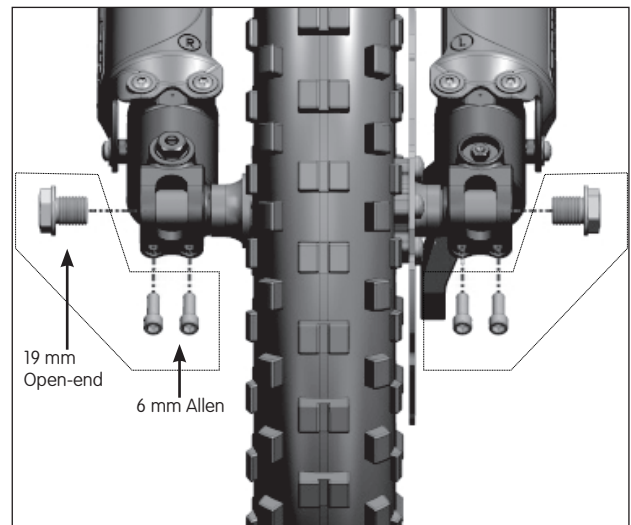


Step 3

Remove the front wheel axle.

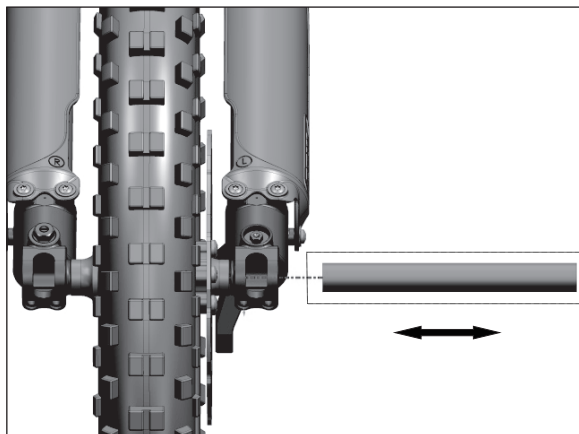

Step 4

Remove the front wheel from the unit, then remove the spacer sleeves from the front wheel.

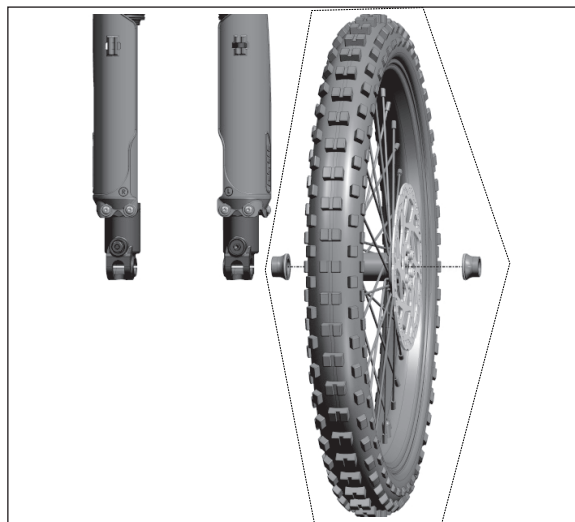

Step 5

Insert a new front wheel, then reverse steps 1 through 4.

ATTENTION: Charge battery 12 hours before using.