

Required Tools: (Not included)

- A. 3 mm Allen Wrench
- B. 4 mm Allen Wrench
- C. 5 mm Allen Wrench
- D. Flat Screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 4 mm Allen wrench, loosen the bolts from the collar clamp and pull the stem from the fork.

**Step 2**

Disconnect the two (2) connectors from the handlebar.



Step 3

Using a 3 mm Allen wrench, loosen the set screw from the thumb brake, and move the brake away from the grip.




Step 4

Using a small flat screwdriver, insert the blade between the grip and the handlebar. Apply a few drops of WD40® or soapy water. Remove the screwdriver and pull firmly on the grip to remove it from the handlebar.



Step 5

Using a 5 mm Allen wrench, loosen and remove the two (2) hex bolts from the handlebar clamp. This will allow you to remove the thumb brake and the cable from the handlebar.

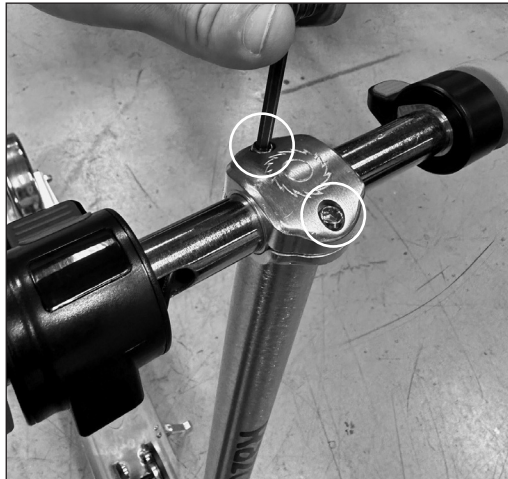

Step 6

Reverse the steps to install the new thumb brake.

ATTENTION: Charge battery 7 hours before using.