



HOVERTRAX 1.5 & HOVERTRAX BLACK LABEL & HOVERTRAX PRIZMA PC BOARDS REPLACEMENT

Required Tool: (Not included)


A. Phillips screwdriver

WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Flip the unit over. Using a Phillips screwdriver, remove the six (6) screws from the cover without the charger port/power switch.

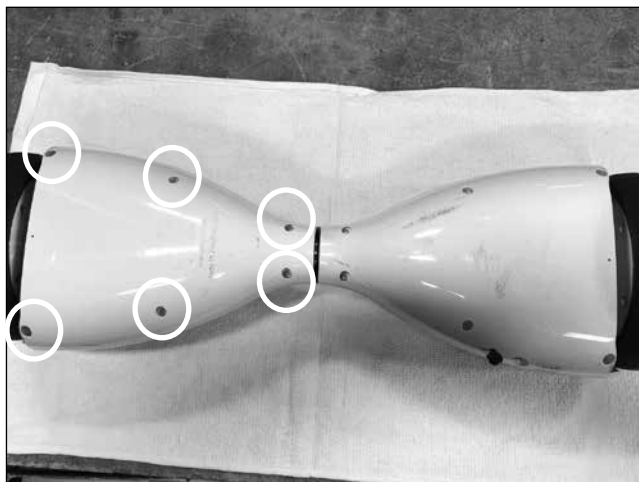


Step 2

Carefully lift up the cover. Be sure not to pull any wires. Set the cover aside.




Step 3

Starting with the side where the battery is located, disconnect all connectors from the PC board. All connectors are color coded and can only be installed in their proper place. If needed, take pictures for reference.

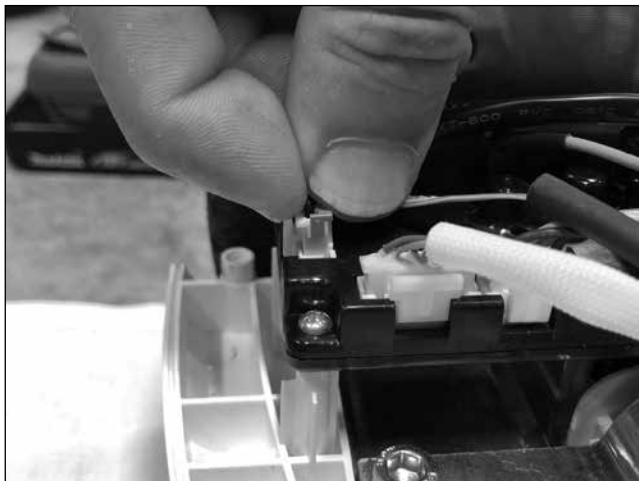

Step 4

Using a Phillips screwdriver, remove the four (4) screws that hold the PC board in place. Remove the PC board.

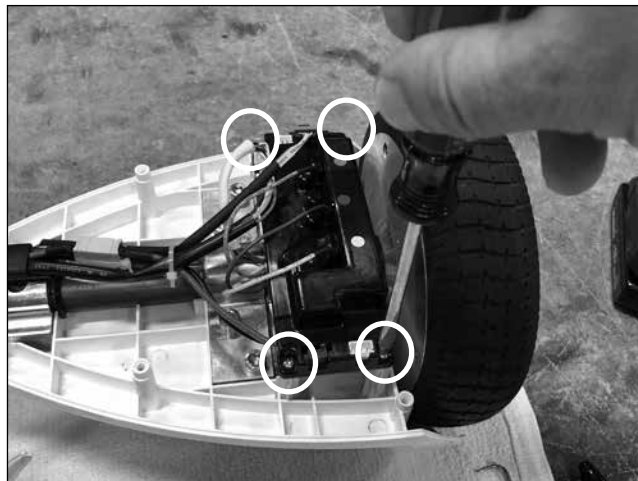


Step 5

Next, locate the side with the power switch and charger port. Disconnect all connectors from the PC board. Again, all connectors are color coded and can only be installed in their proper place.



Step 6

Using a Phillips screwdriver, remove the four (4) screws that hold the PC board in place. Remove the PC board.

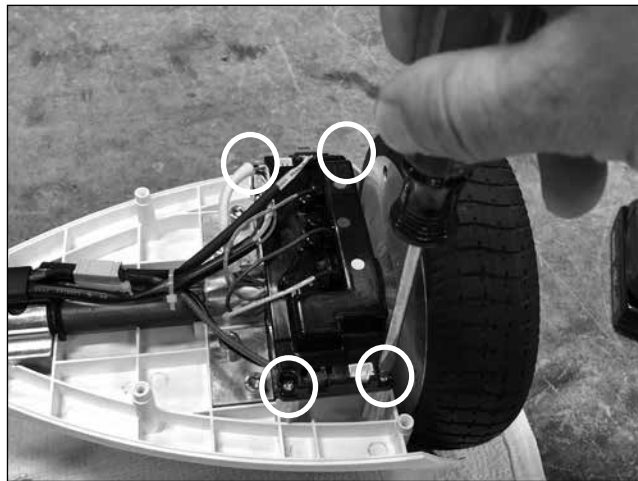

Step 7

To install a new PC board, reverse steps 1-6.

ATTENTION: Charge battery 12 hours before using.