



PRO SPEC
FRONT BRAKE LEVER REPLACEMENT
PART NUMBER:W15128501009

Required Tools: (Not included)


- 3 Allen Wrench
- 5 Allen Wrench
- Phillips Screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove ten (10) screws from the left battery cover.

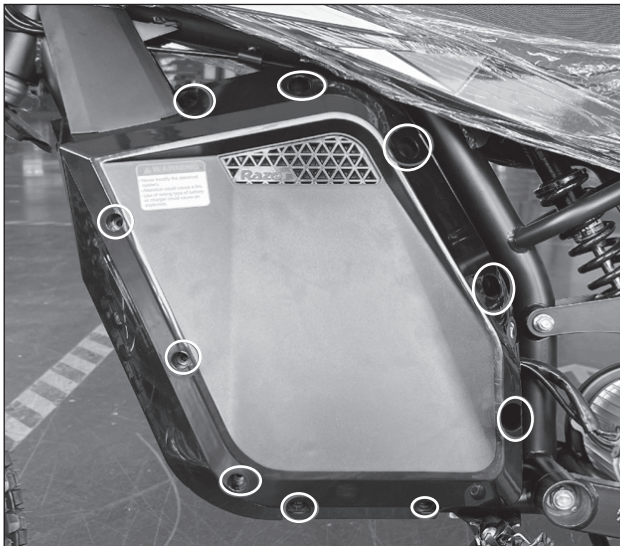


Step 2

Using a Phillips screwdriver, remove one (1) screw from the front battery cover.




Step 3

Remove the left battery cover and set it aside.

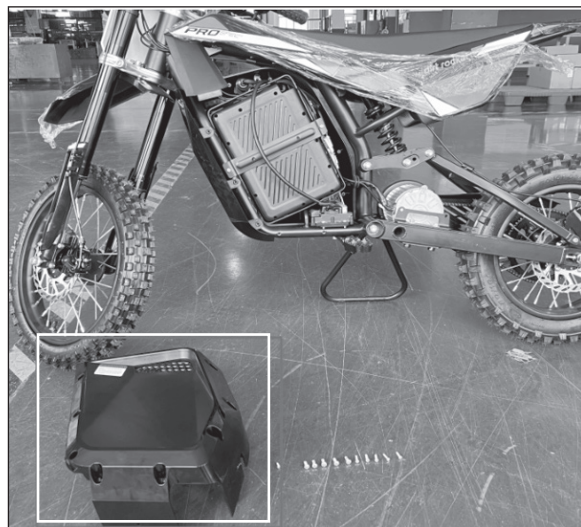


Step 4

Disconnect the battery connector.

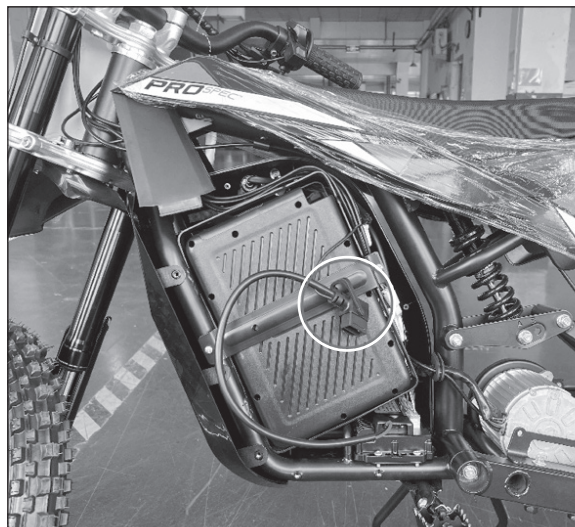


Step 5

Disconnect the front brake connector.

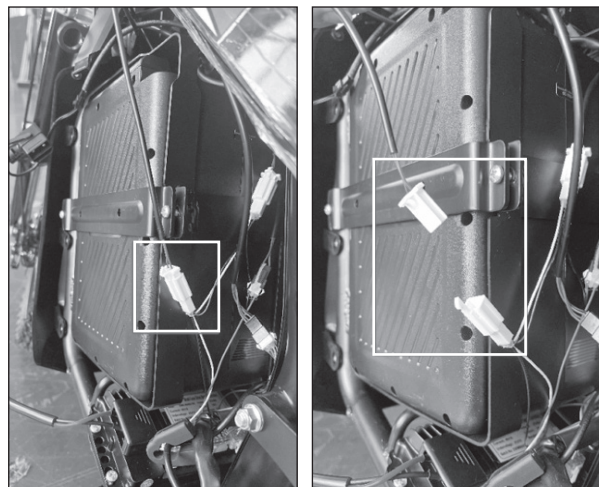

Step 6

Remove the winding pipe.

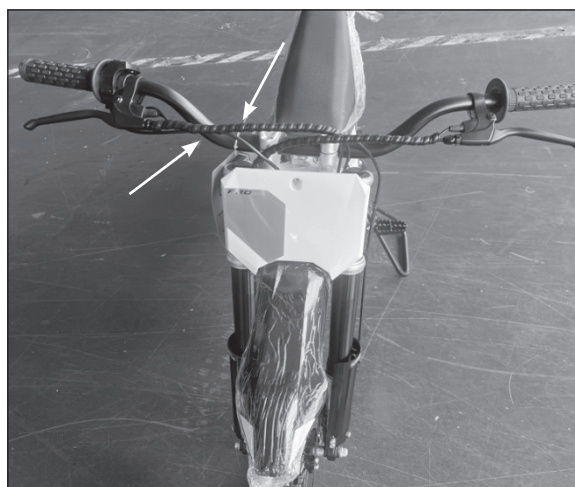


Step 7

Using a 5mm Allen wrench, loosen the rear anchor bolt.




Step 8

Remove the brake wire from the brake.

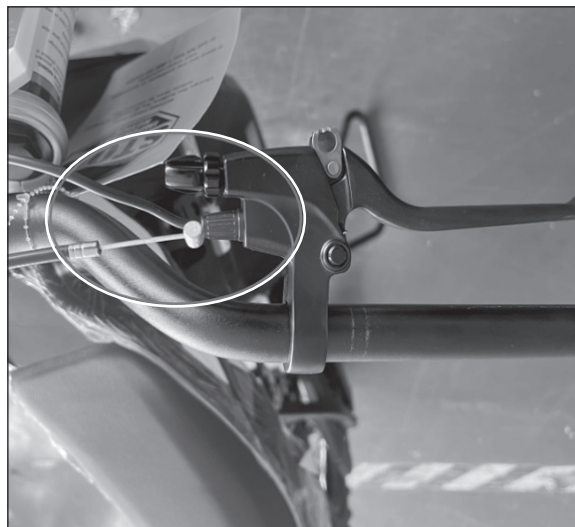

Step 9

Remove the brake cable from the scooter.

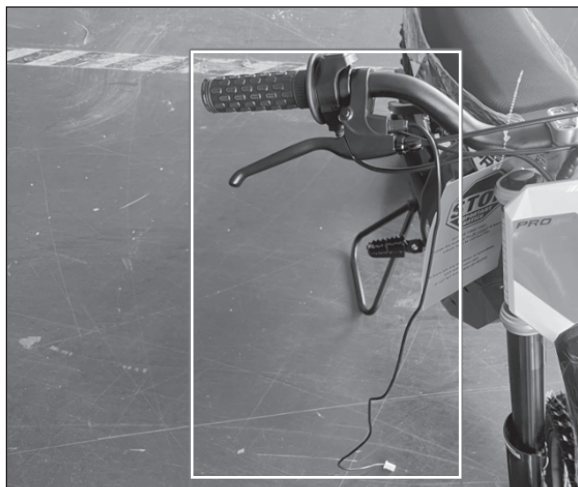


Step 10

Using a 3mm Allen wrench, loosen the bolt on the throttle.




Step 11

Remove the throttle.

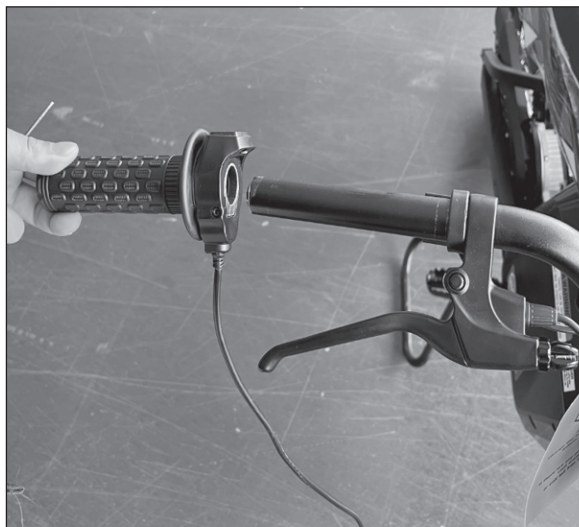


Step 12

Using a 3mm Allen wrench, loosen the bolt on the speed switch, then remove the speed switch.

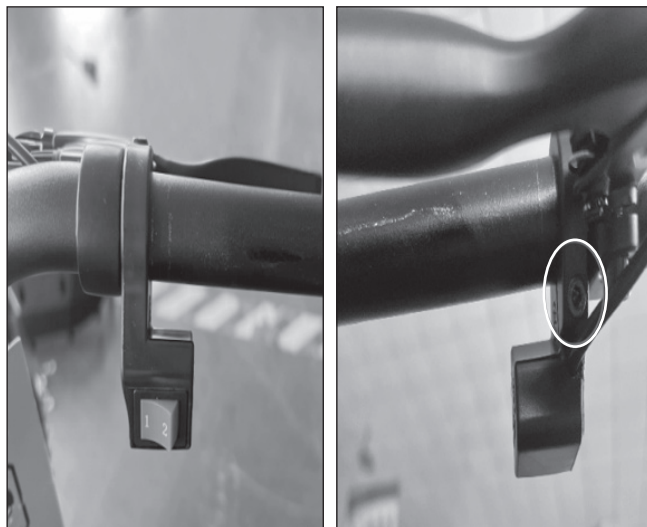

Step 13

Using a 5mm Allen wrench, loosen the bolt on the front brake lever, then remove the brake lever.

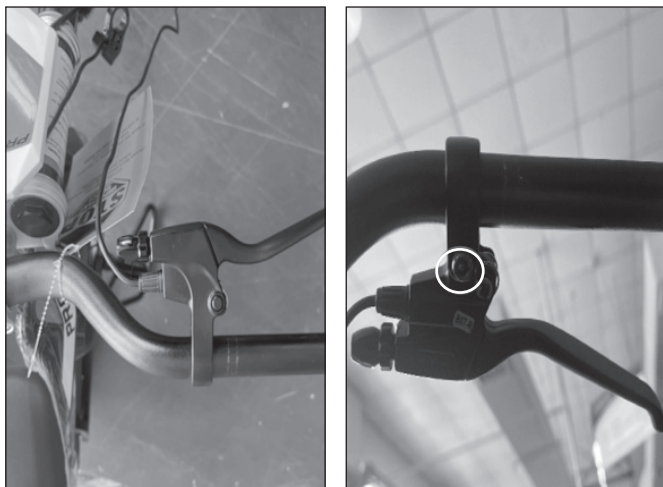

Step 14

Insert a new front brake lever, then reverse steps 1 through 13.

ATTENTION: Charge battery 12 hours before using.