



E PRIME III
THROTTLE & BRAKE LEVER
REPLACEMENT INSTRUCTIONS
PART # W13111818043

Required Tools: (Not included)

- A. 5 mm Allen wrench
- B. Phillips screwdriver
- C. 2 mm Allen wrench
- D. Flat head screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 5 mm Allen wrench, loosen the two (2) bolts on the collar clamp from the steering tube.



Step 2

Lift and remove the steering tube from the fork. Be careful not to pull the wires.



Step 3

Locate and disconnect the headlamp and throttle/brake connectors from the controller.



Step 4

Using a 2 mm Allen wrench, loosen the set screw at the bottom of the throttle and brake levers. Slide both levers away from the grips.




Step 5

Using a flat screwdriver, remove the end cap from the handlebar. Insert the blade from the screwdriver between the grip and handlebar. Apply a few drops of lubricant or soapy water to help you pull the grips off the handlebar.



Step 6

Using a Phillips screwdriver, remove four (4) screws at the back of the headlamp and move the cover away from the handlebar. Pull the cable through the opening on the steering tube.

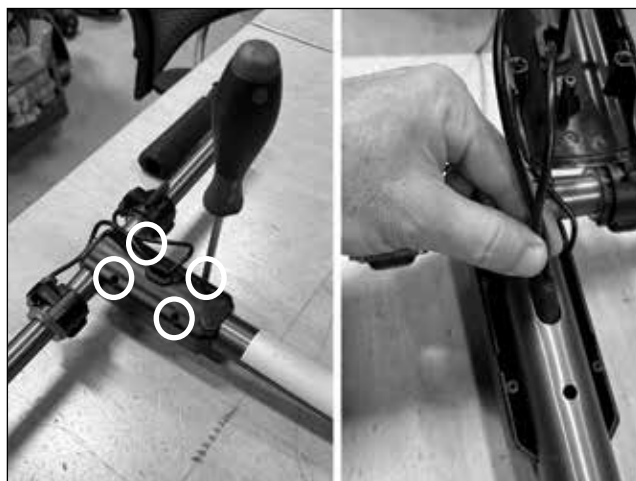

Step 7

Remove the grommet and cable from the headlamp cover.



Step 8

Remove the throttle and brake levers from the handlebar.



Step 9

To install the new throttle and brake levers, reverse steps 1-8.

ATTENTION: Charge battery 6 hours before using.