



PRO SPEC
REAR BRAKE LEVER REPLACEMENT
PART NUMBER:W15128501011

Required Tools: (Not included)


- 5mm Allen Wrench
- Phillips Screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove ten (10) screws from the left battery cover.

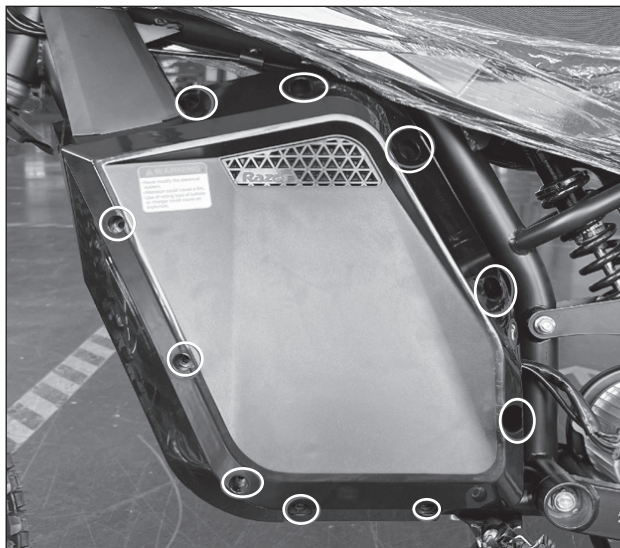


Step 2

Using a Phillips screwdriver, remove one (1) screw from the battery front cover.




Step 3

Remove the left battery cover and set it aside.

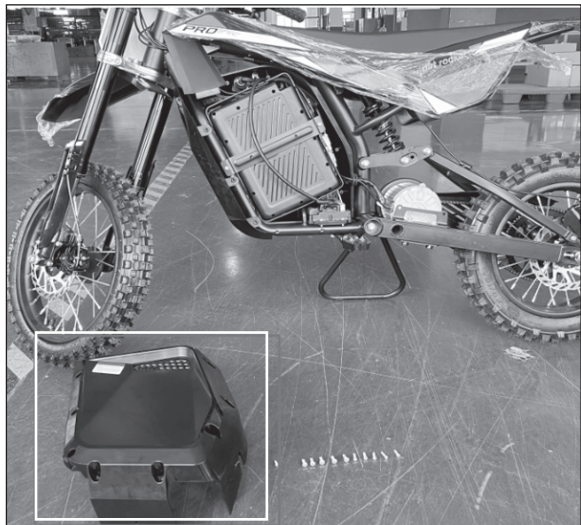


Step 4

Disconnect the battery connector.

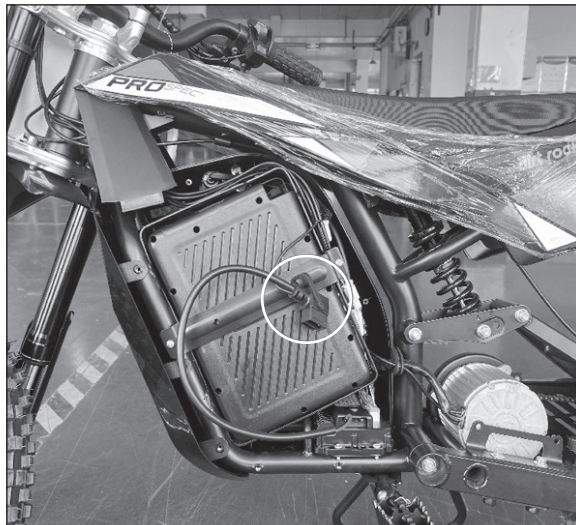

Step 5

Disconnect the rear brake connector.

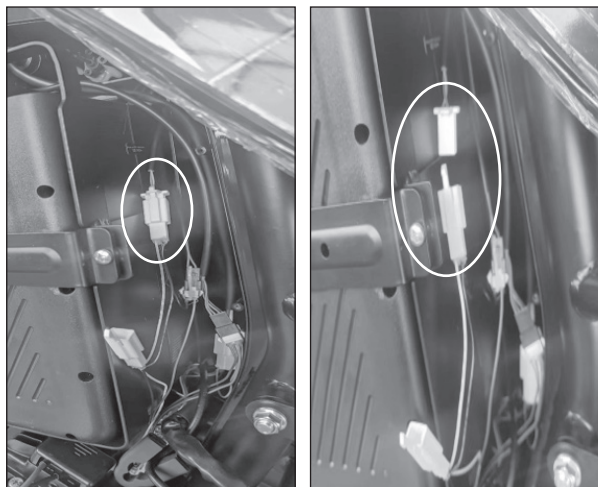

Step 6

Remove the winding pipe.




Step 7

Using a 5mm Allen wrench, loosen the rear anchor bolt so the brake wire can be adjusted.




Step 8

Remove the brake wire from the brake.

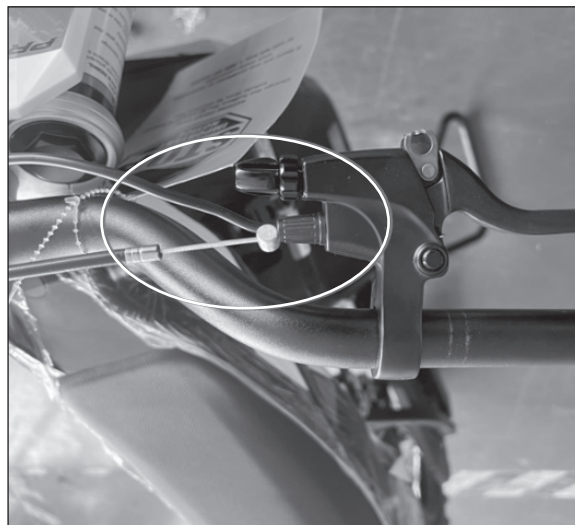


Step 9

Remove the brake cable from the scooter.

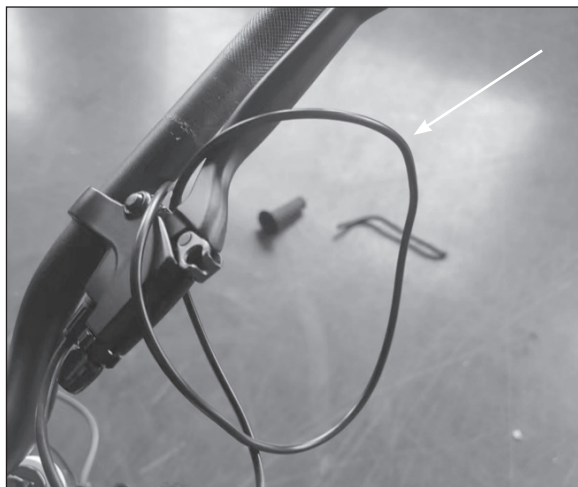


Step 10

Remove the handlebar grip.

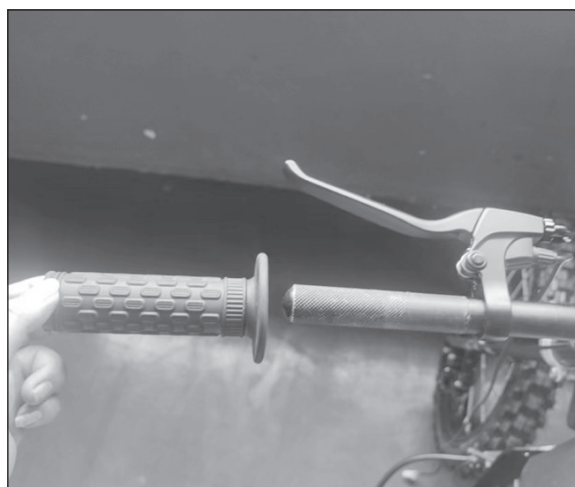

Step 11

Using a 5mm Allen wrench, loosen the bolt on the rear brake lever, then slide the brake lever outward to remove it from the handlebar.

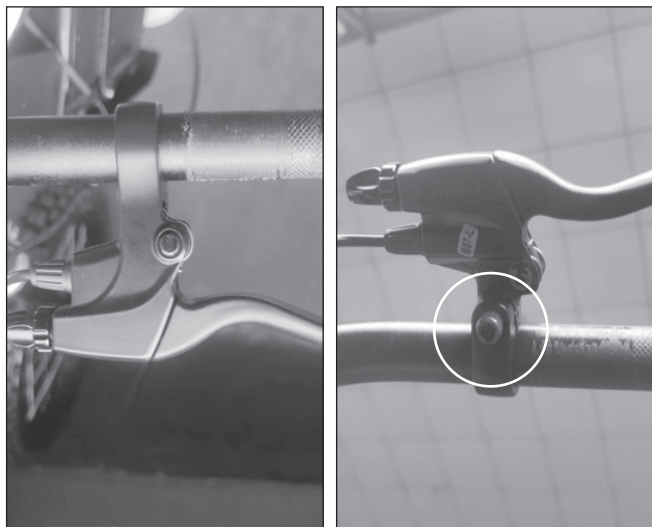

Step 12

Insert a new rear brake lever, then reverse steps 1 through 11.

ATTENTION: Charge battery 12 hours before using.