



E PRIME III
HEADLAMP REPLACEMENT INSTRUCTIONS
PART # W13111818157

Required Tools: (Not included)

- A. 5 mm Allen wrench
- B. Phillips screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 5 mm Allen wrench, loosen two (2) bolts on the collar clamp from the steering tube.



Step 2

Lift and remove the steering tube from the fork. Be careful not to pull the wires.



Step 3

Locate and disconnect the headlamp and throttle/brake connectors from the controller.




Step 4

Using a 5 mm Allen wrench, loosen and remove the two (2) bolts from the handlebar clamp. Remove the handlebar from the steering tube.



Step 5

Using a Phillips screwdriver, remove four (4) screws located at the back of the headlamp.

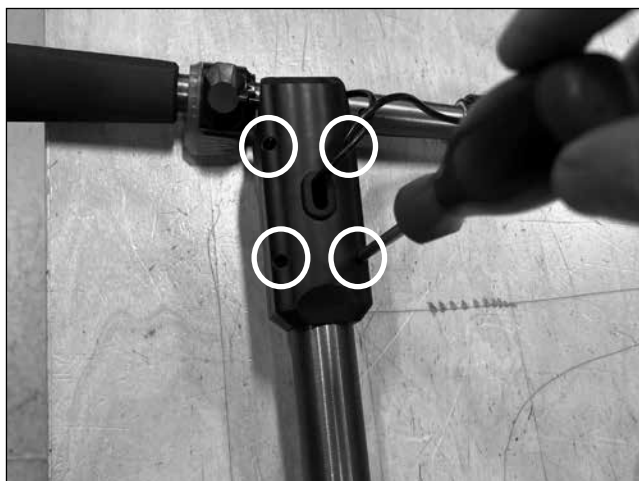

Step 6

Carefully pull the headlamp apart and pull the headlamp wire out from the opening on the steering tube.



Step 7

To install the new headlamp, reverse steps 1-6.

ATTENTION: Charge battery 6 hours before using.