

Required Tools: (Not included)


- Pliers
- Two (2) 15 mm socket wrenches
- 10 mm Open-End Wrench
- Phillips Screwdriver

! WARNING


! CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using two 15mm socket wrenches, loosen the lock nuts on both sides of the rear axle. Then, use a 10mm open-end wrench to loosen the chain tensioner nut and push the wheel forward to release the tension from the chain.

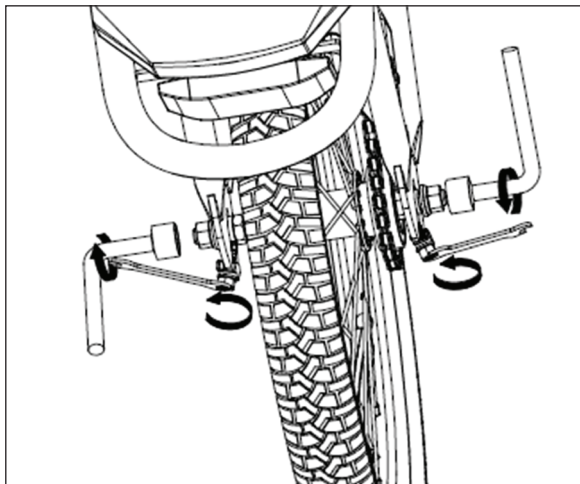
**Step 2**

Remove the chain link plate with pliers.

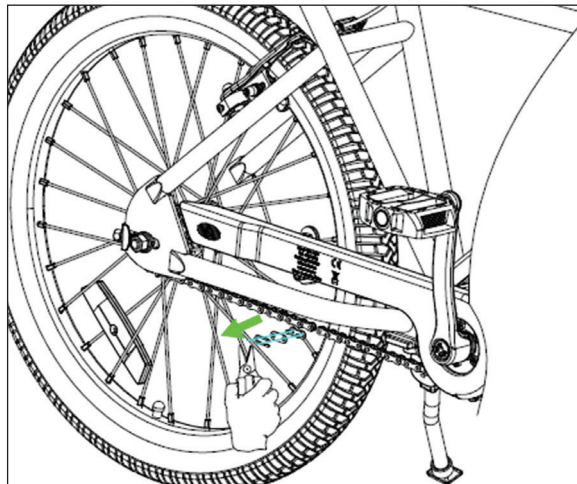

Step 3

Using a Phillips screwdriver, remove the two screws from the chain cover. Take off the chain cover and the chain.

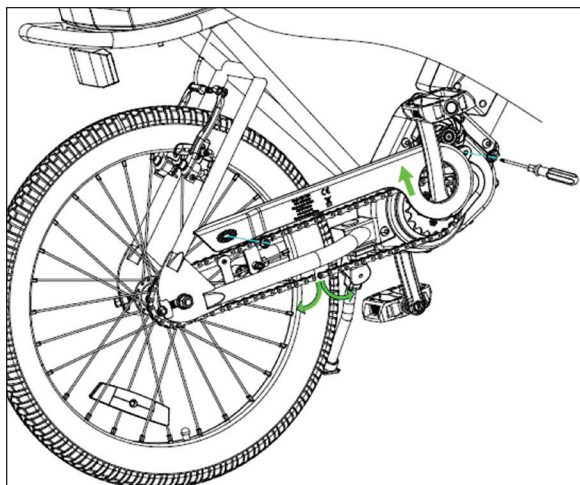

Step 4

Reverse steps 1 through 3 to install a new chain.

ATTENTION: Charge battery 12 hours before using.