



STAGE2 M1/STAGE2 M2
FRONT BRAKE REPLACEMENT
PART NUMBER:W15128945009

Required Tools: (Not included)


- 4mm Allen Wrench
- 5mm Allen Wrench
- Scissors

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a 4mm Allen wrench, remove the two bolts that secure the front brake lever onto the handlebar.

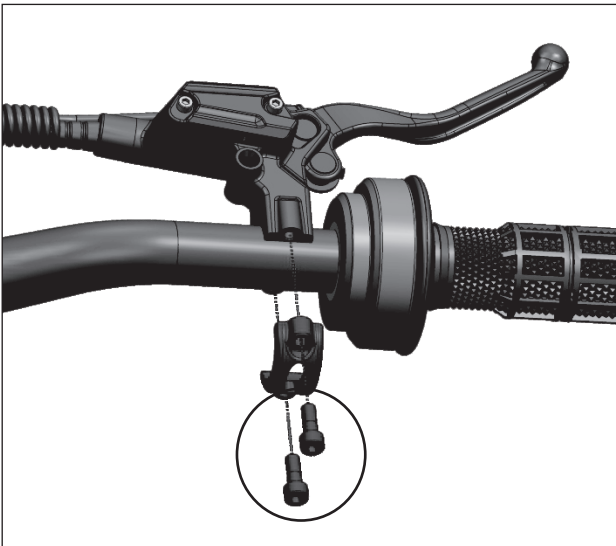

Step 2

Remove the tubing from the buckle.

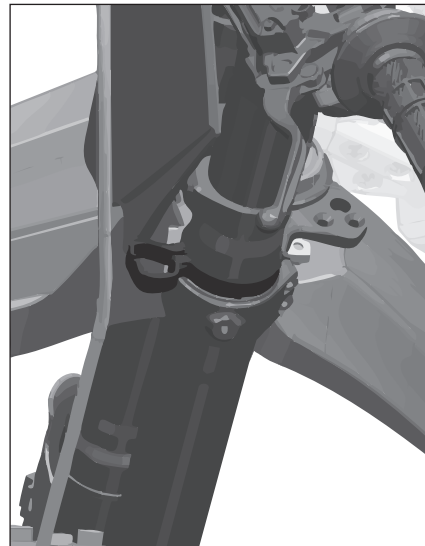


Step 3

Use scissors to cut the cable tie that secures the tubing.



Step 4

Using a 5mm Allen wrench, remove the two bolts that secure the brake caliper.

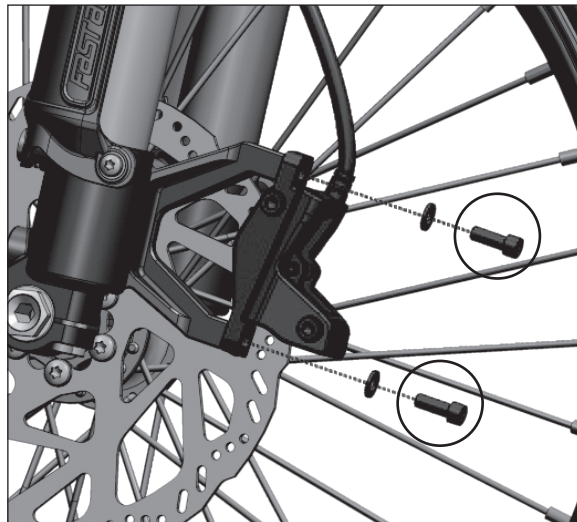

Step 5

Insert a new front brake lever, then reverse steps 1 through 4.

ATTENTION: Charge battery 12 hours before using.

Note

Tighten the brake caliper bolts while the brake is engaged. After installation, check the braking performance and adjust the brake lever tension as needed.

