



C30 & C35 HANDLEBAR KIT REPLACEMENT

C30 PART # W13113207027

C35 PART # W13113210027

Required Tools: (Not included)


A. 4 mm Allen wrench

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 4 mm Allen wrench, remove the four (4) Allen screws and washers from the handlebar.

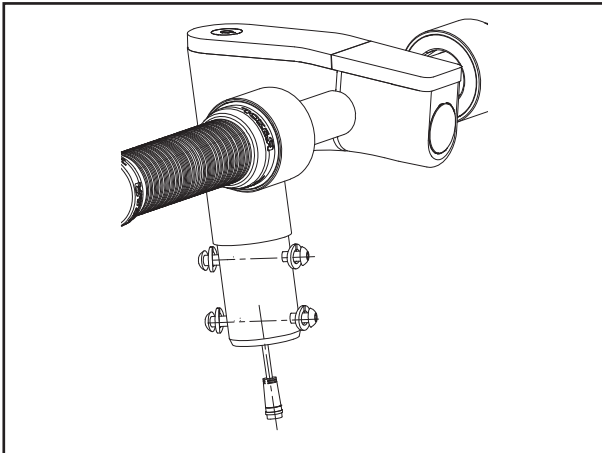

Step 2

Plug in connector. Slide the stem onto the Steer Tube. Be careful not to pinch wire. Tighten the four (4) handlebar screws and washers securely with a 4 mm Allen wrench.

