



C30 & C35 & C35 SLA FRONT FORK REPLACEMENT

C30 PART # W13113207023

C35 PART # W13113290023

C35 SLA PART # W13113291023

Required Tools: (Not included)

- A. 5 mm Allen wrench
- B. 2.5 mm Allen wrench

WARNING

 CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Set the unit on the floor or a work bench and fold the folding mechanism.




Step 2

Using a 5 mm Allen wrench loosen the two (2) bolts from the clamp of the folding mechanism.

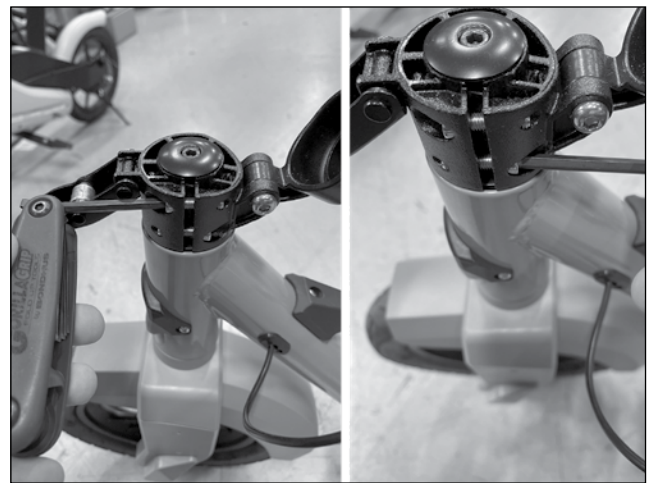

Step 3

Using a 5 mm Allen wrench loosen and remove the bolt from the top and remove it

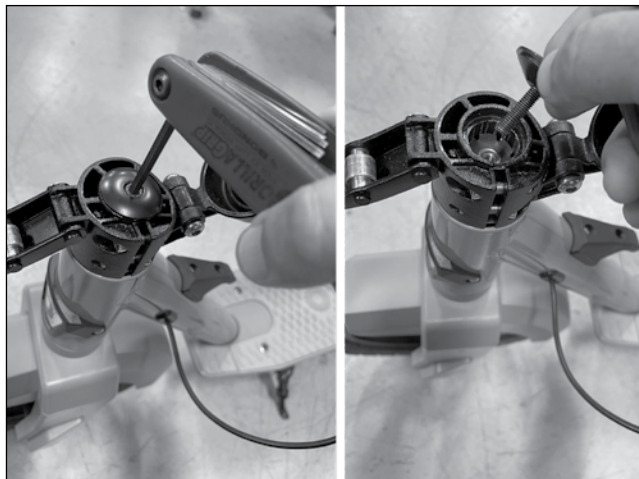


Step 4

Remove the handlebars with folding mechanism out from the fork and set aside being careful not to damage the cables.




Step 5

Using a 2.5 mm Allen wrench loosen and remove the two (2) bolts from the steering bolt cover, remove the cover and with a 5 mm Allen wrench loosen and remove the limiter steering bolt.

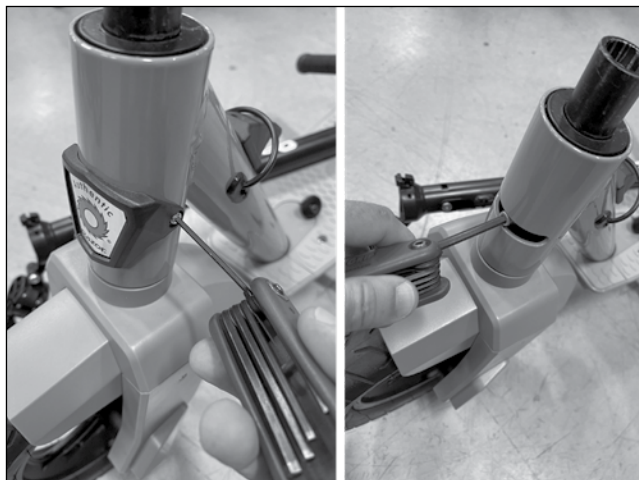

Step 6

Remove the top washer and the compression ring and set aside, slide the fork down and out from the unit.

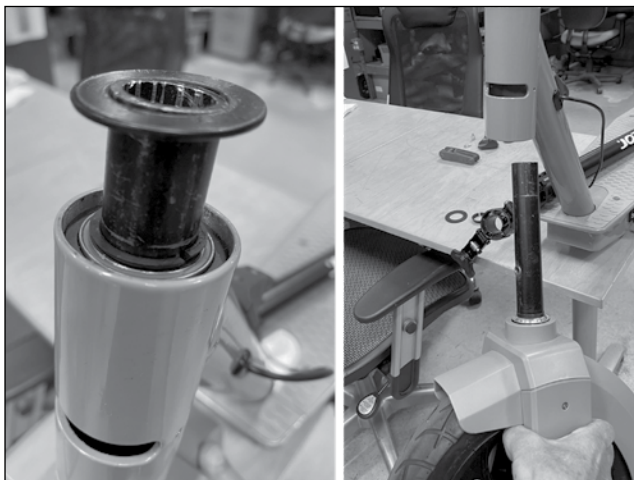

Step 7

Reverse the steps.

ATTENTION: Charge battery 8 hours before using.