

Tools Required: (Not included)

- A. Phillips head screwdriver
- B. Flat head screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before removing or installing the batteries. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Place the Pocket Mod on the Ground and have a Phillip Screw Driver ready. Turn off the Power!



Figure 1

Step 2

Open the seat and remove 4 screws (see the Circles) Remove the seat away from unit.

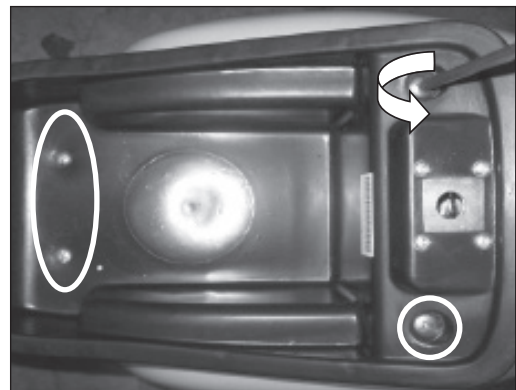


Figure 2

Step 3

Remove three phillip screws located one on each side and one at the bottom of the front seat cover. Disconnect the wires from the power switch and charger port before removing the cover away from the unit.



Figure 3

Step 4

Remove the plastic cover at the back of the power switch and disconnect the black wire that comes from the charger port, using a flat screw driver remove the silicon at the back of the power switch.

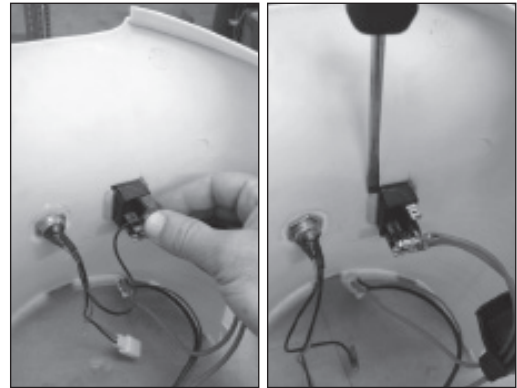


Figure 4

Step 5

Using a flat screw driver remove and disconnect the wire harness from the power switch.



Figure 5

Step 6

Press down on the top of the power switch and push the switch out of the cover.



Figure 6

Step 7

Reverse the steps to install

ATTENTION: Charge battery 12 hours before using