

Required Tools: (Not included)


- 3mm Allen Wrench
- 5mm Allen Wrench
- Scissors

⚠ WARNING


⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Use scissors to cut the cable tie that secures the brake wire.

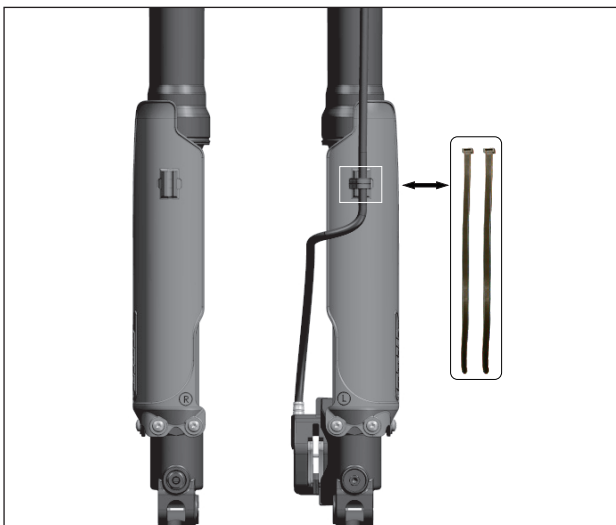
**Step 2**

Use a 5mm Allen wrench to loosen the screws on the upper and lower plate, but do not remove them.

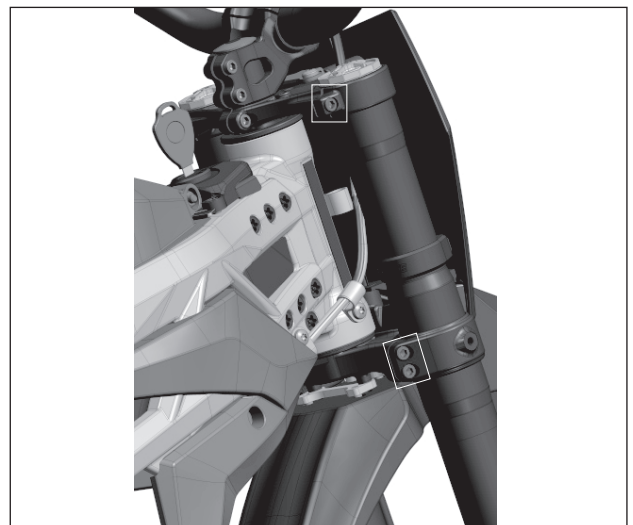


Step 3

Use a 3mm Allen Wrench to loosen the screw as shown in the photo below, but do not remove it.

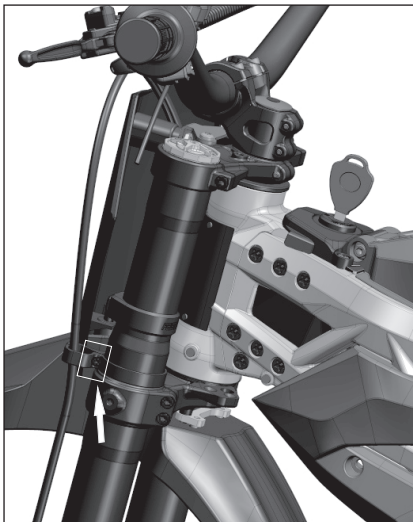


Step 4

Pull down on the left and right shock absorbers to remove them.

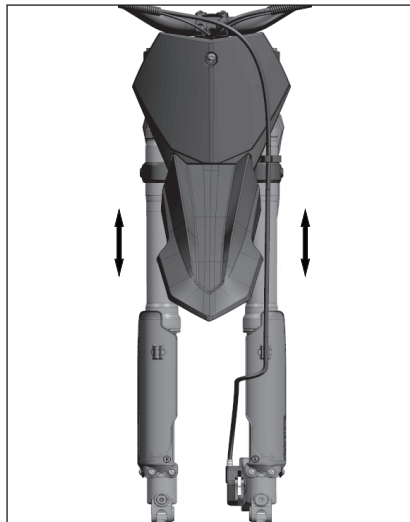

Step 5

After removing the shock absorbers, the unit should look like the photo below.

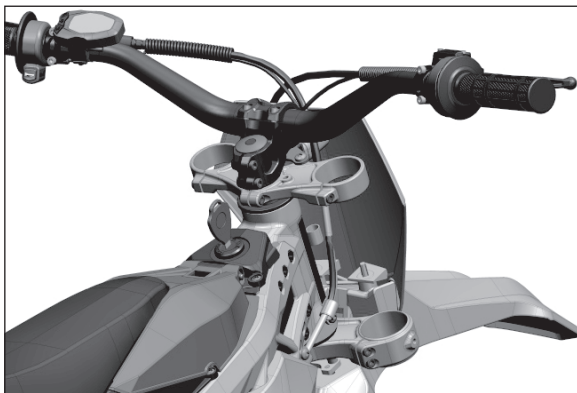

Step 6

Insert a new shock absorber, then reverse steps 1 through 5.

ATTENTION: Charge battery 12 hours before using.