



POWER CORE E95 BRAKE LEVER REPLACEMENT

PART NUMBER: W13111402011 FOR VERSIONS 1-4,
W13112149011 FOR VERSION 5,
W13112157011 FOR VERSIONS 6+

Required Tools: (Not included)

- 4mm Allen Wrench
- 5mm Allen Wrench
- 8mm Open Wrench
- Flat Screwdriver
- Long Needle Pliers

! WARNING

! CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a 5mm Allen wrench, loosen the bolts on the collar clamp and remove the T-bar from the fork.



Step 2

Disconnect the audio connector inside the fork.

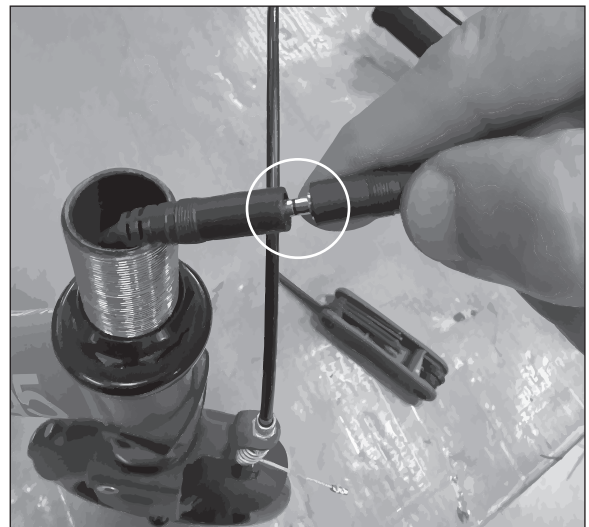


Step 3

Using a flat screwdriver, remove the plug located at the front of the T-bar.



Step 4

Carefully pull the cables out from the T-bar. Locate and disconnect the brake lever connector from the wire extender.

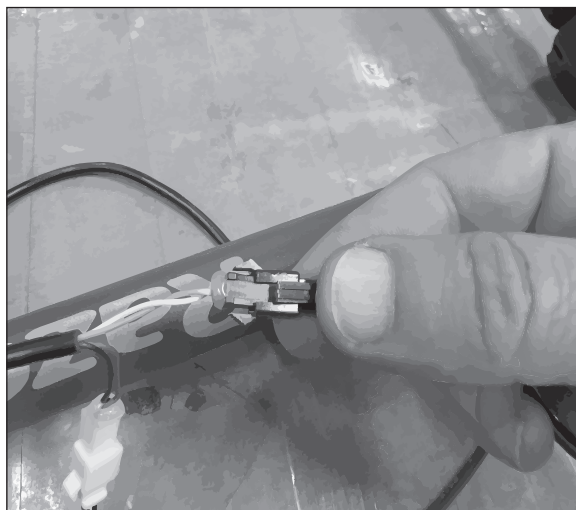

Step 5

Using a 5mm Allen wrench, loosen the brake lever screw, but do not remove it. Move the lever away from the grip.



Step 6

Carefully wedge a flat screwdriver under the edge of the handlebar grip. Add a small amount of lubricant or water, then remove the grip. Note: Save the grip for reassembly.




Step 7

Using a 4mm Allen wrench and an 8mm open wrench, loosen the screw that holds the brake cable onto the brake fender.



Step 8

Using long needle pliers, remove the end cap from the brake cable and save it for reinstallation. Then, pull the brake cable out.

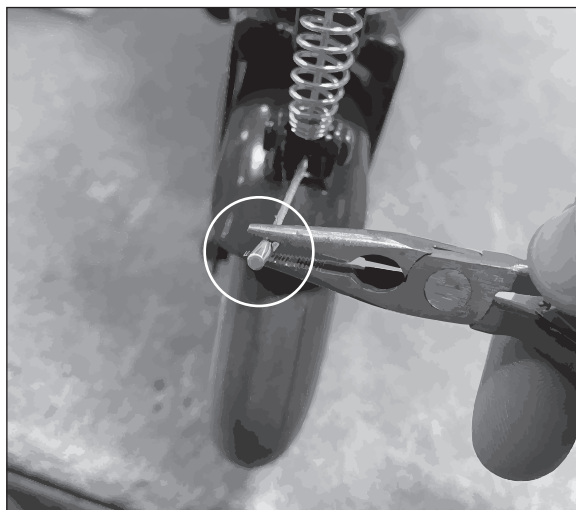

Step 9

Insert a new brake lever, then reverse steps 1 through 8.

ATTENTION: Charge battery 12 hours before using.