



POCKET MOD CHARGER PORT REPLACEMENT PROCEDURES

POCKET MOD (V13+) CHARGER PORT W/3 WIRES –
PART# W25141012106

Required Tools: (Not included)

- A. Phillips screwdriver
- B. Flat head screwdriver
- C. 19 mm open wrench

WARNING

 CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before performing any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

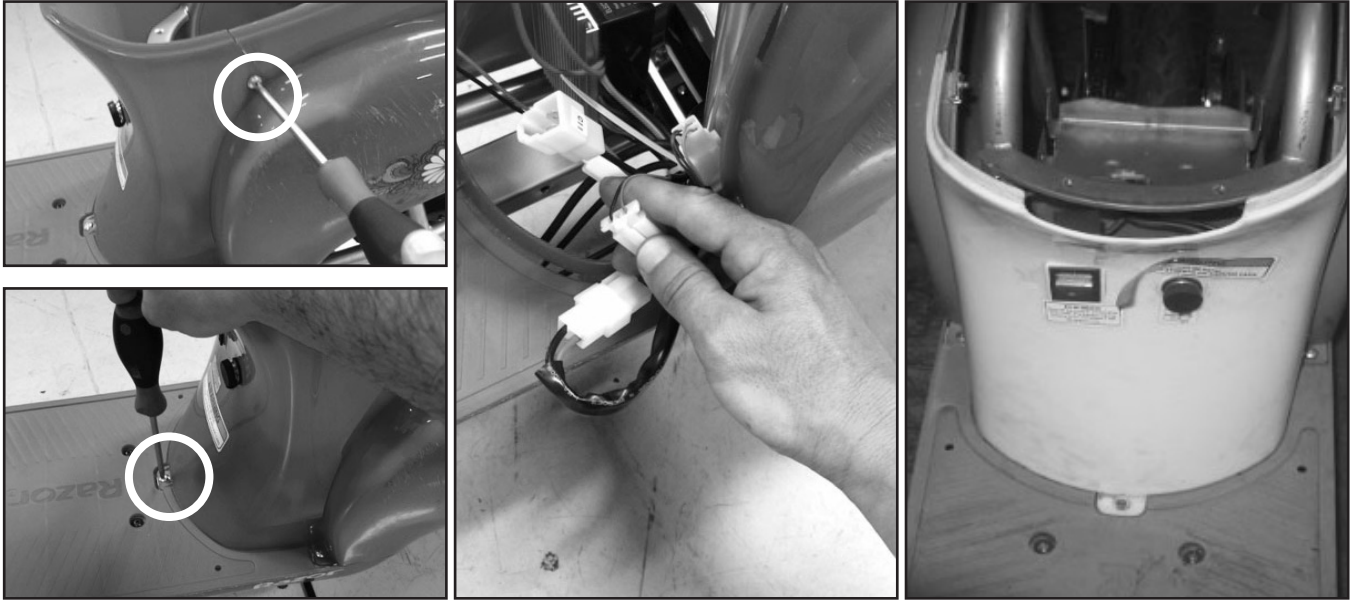
Step 1

Open the seat compartment. Using a Phillips screwdriver remove the four (4) screws on the seat assembly. The locations of the screws are circled in the image below. Remove the seat and set aside.



Step 2

Using a Phillips screwdriver remove three (3) screws located on each side and at the bottom of the front seat cover. Location of screws are circled in images below. Disconnect the wires from the power switch and charger port. Remove front seat cover and set aside.

**Step 3**

Remove the plastic cover at the back of the power switch and disconnect the black wire that comes from the charger port, using a flat head screwdriver remove the silicone at the back of the charger port to have access to the secure nut.



Step 4

Using a 19 mm open wrench loosen the nut in a counter clockwise motion.

**Step 5**

Using a small pointy object depress the locking pins on the prongs and push them out of the connector and remove the old charger port from the cover.

**Step 6**

Reverse the procedures to install new charger port.

Attention: Charge battery 12 hours before using