



**DIRT QUAD CHARGER PORT
REPLACEMENT INSTRUCTIONS**
PART # W25143060173

Required Tools: (Not included)


- Phillips screwdriver
- Flat screwdriver
- 5 mm Allen wrench
- 10 mm open wrench
- 13 mm open wrench
- 19 mm open wrench

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a 5 mm Allen wrench, remove the four (4) bolts located on the footrests.

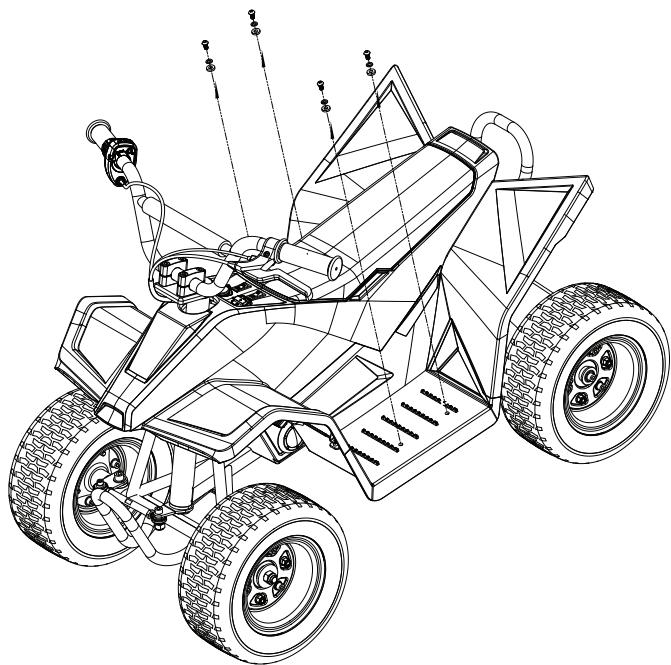


Step 2

Using a Phillips screwdriver, remove the two (2) screws on both the left and right sides of the front of the unit.

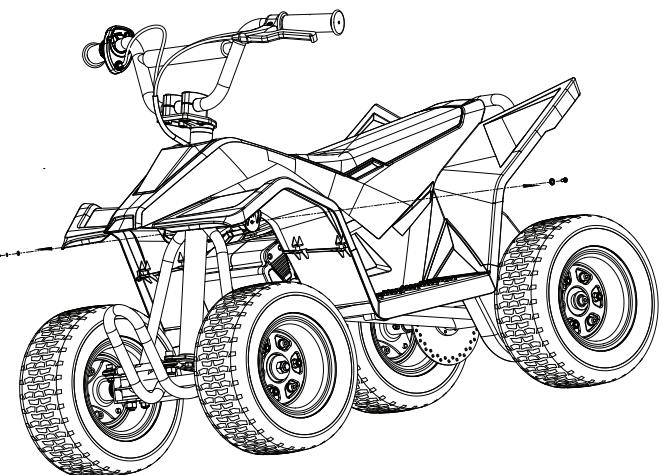


Step 3

Using a 13 mm open wrench, loosen and remove the bolt from the steering arm that connects it to the steering tube.

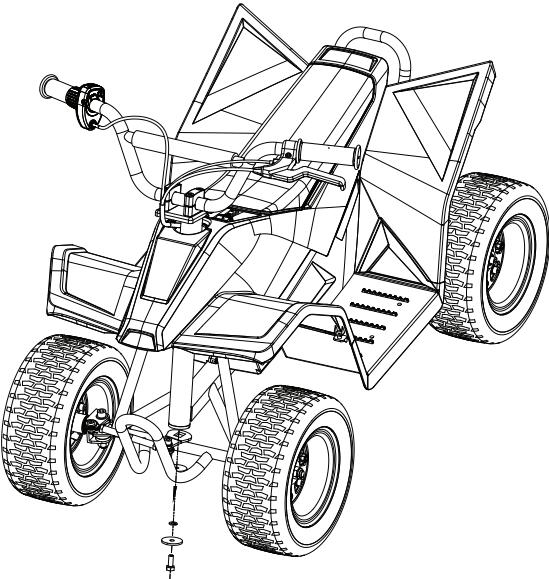


Step 4

Using a 10 mm open wrench, remove the two (2) lock nuts under the seat.

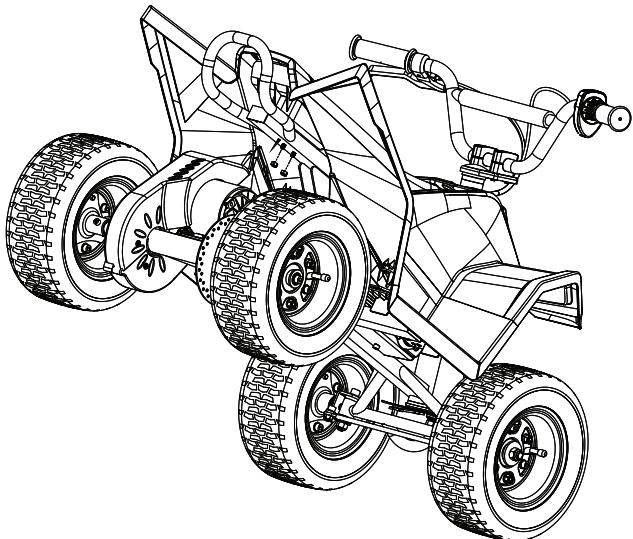


Step 5

Lift and remove the steering tube from the frame. The brake cable may need to be disconnected from the caliper.

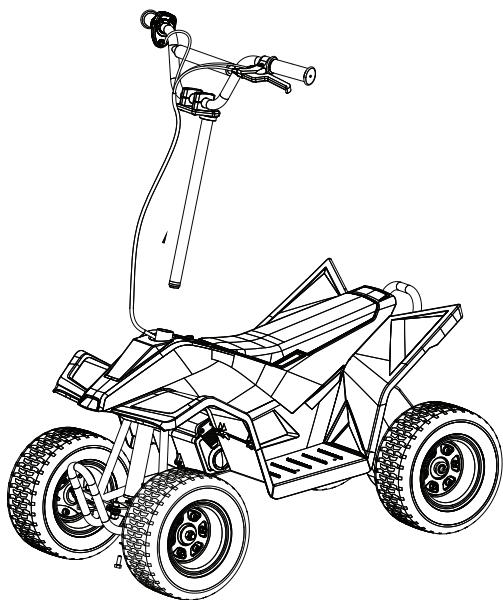


Step 6

Lift and remove the body fairing from the unit. Unplug the connectors between the battery and the controller.

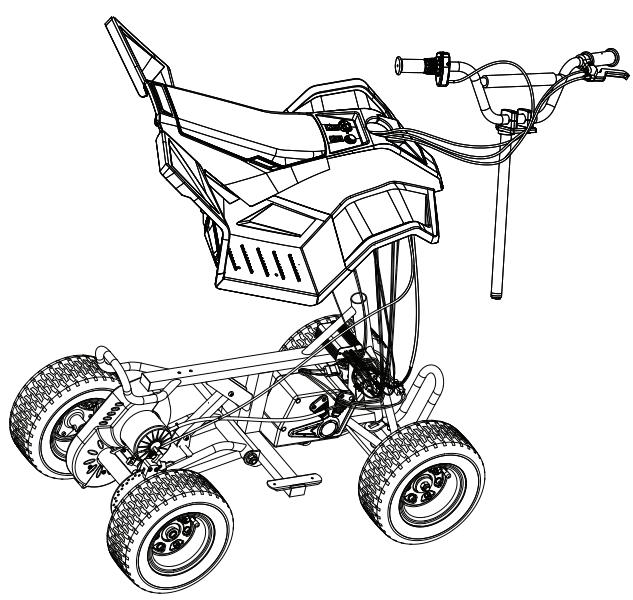

Step 7

Using a flat screwdriver, remove the glue on the back of the charger port. Using a 19 mm open wrench, loosen and remove the lock nut that holds the charger port in place.

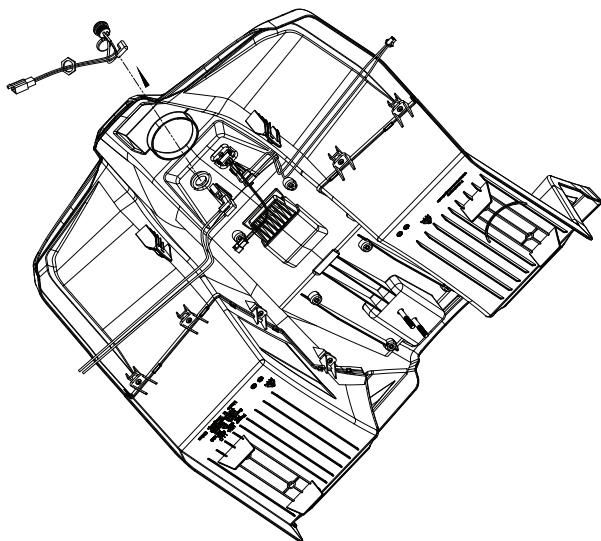

Step 8

To install a new charger port, reverse steps 1-7.

ATTENTION: Charge battery 12 hours before using.