



POCKET MOD HANDELBAR INSTALLATION INSTRUCTIONS

REQUIRED TOOLS: 6mm Allen key

⚠ WARNING: Turn off the main power switch before proceeding with the following instructions.

Step 1: Loosen the Steering Bolt

Using a 6mm Allen key, loosen steering bolt (fig. 1) 4 complete turns so that the wedge (fig. 2) is loose and not touching steering tube.

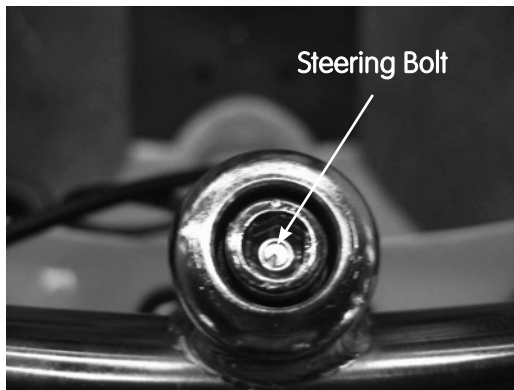


Figure 1

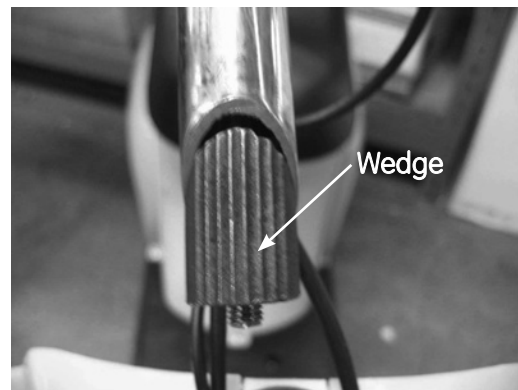


Figure 2

Step 2: Align Wedge with Steering Bolt

Facing the front of the Pocket Mod, position the handle bars so the throttle is on your right and the hand brake is on your left (the red "SAFE ZONE" print will be facing you). See fig. 3 Align wedge inside handlebar tube inside of the plastic cover.



Figure 3

Step 3: Insert Handlebar

While inserting the steering tube down into the handlebar tube, hold steering bolt steady with thumb and rotate handle bars 180 to the left (fig. 4).

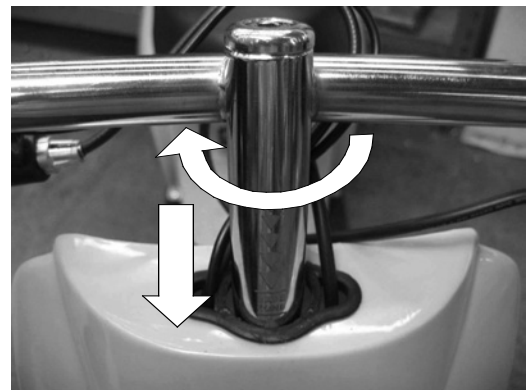


Figure 4

Need Help? Visit our website for additional instructions at www.razor.com or call toll-free at **866-467-2967** Monday - Friday 8:00am - 5:00pm Pacific Time.

Step 3 (cont.):

The throttle should now be on your left and the hand brake on your right (fig. 5).

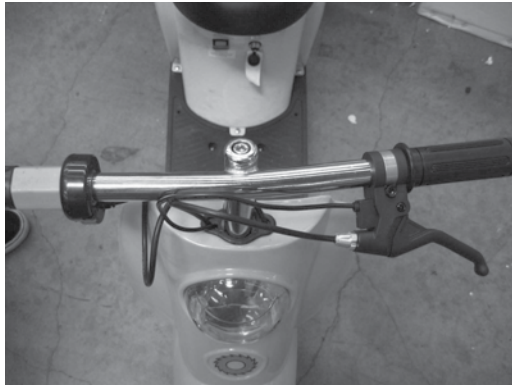


Figure 5

Step 4:

Slowly slide the handle bars up to make certain that the bar is in the "SAFETY ZONE" (fig. 6). Failure to secure the handlebars within the safety zone can cause the handlebars to come out while riding.



Figure 6

Step 5:

Securely tighten bolt using 6mm Allen key (fig. 7).

⚠ WARNING: Periodically check to make sure that this bolt remains tightly fastened.

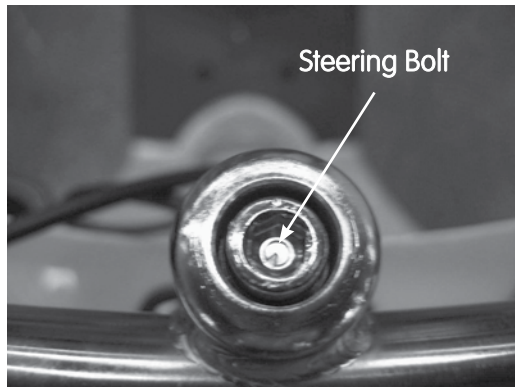


Figure 7