

**Required Tools: (Not included)**


- A. Phillips Screwdriver
- B. Flathead Screwdriver
- C. 2.5 mm Allen Wrench
- D. 5 mm Allen Wrench

**⚠ WARNING**

**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

**Step 1**

Using a Phillips screwdriver, remove the two (2) screws located under the seat at the back of the unit.

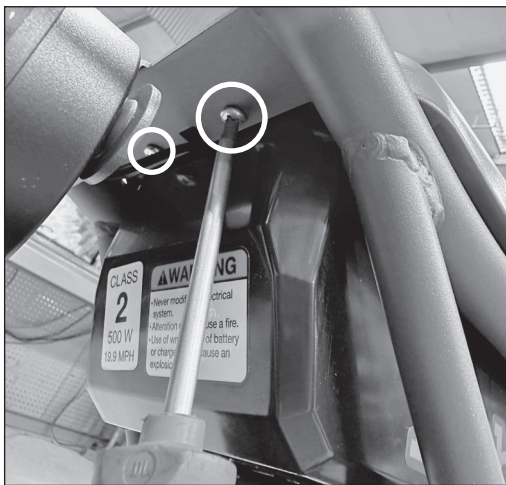
**Step 2**

Lift and pull back on the seat to remove the seat. Set the seat aside.



### Step 3

Locate and disconnect the connector from the Display & On/Off Power switch to the controller.

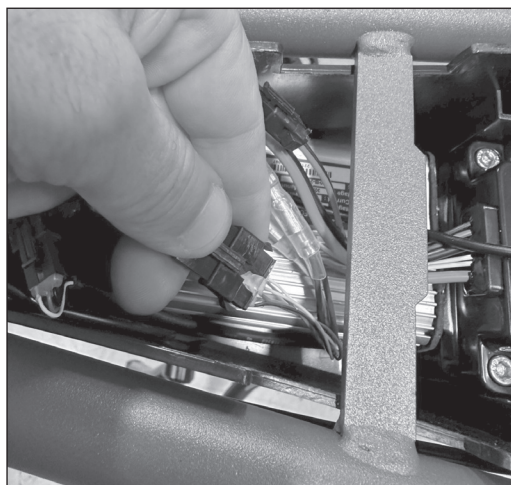

### Step 4

Using a 5 mm Allen wrench, loosen the bolt from the clamp on the brake lever.



### Step 5

Using a 2.5 mm Allen wrench, loosen the set screw from the Display & On/Off Power switch. Move the display and brake lever away from the grip.



### Step 6

Using a flathead screwdriver, insert the blade between the handlebar and grip and apply WD-40® or a few drops of soapy water and remove the grip. Slide out the brake lever and the Display & On/Off Power switch from the handlebar.



### Step 7

Reverse the procedures to install the new Display & On/Off Power switch.

**ATTENTION: Charge battery 6 hours before using.**