

**Required Tools: (Not included)**


- A. 5 mm Allen wrench
- B. Flat screwdriver
- C. 19 mm open wrench
- D. Small pointy object

**⚠ WARNING**

**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

**Step 1**

Using a 5 mm Allen wrench, remove the four (4) hex bolts that keep the seat attached to the frame. Remove the seat and set aside.

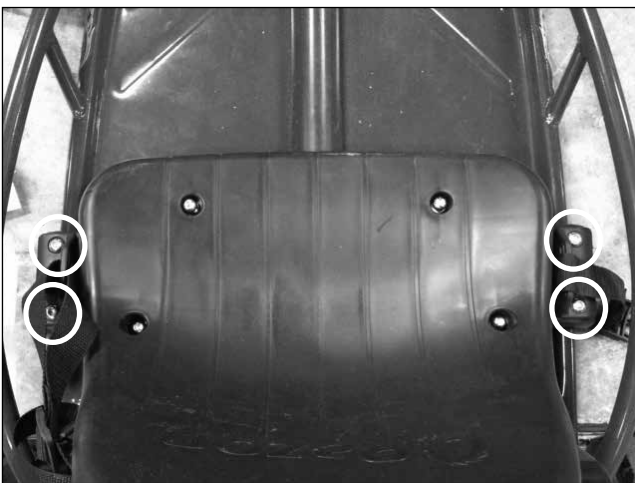
**Step 2**

Using a 5 mm Allen wrench, remove four (4) hex bolts from the battery cover, two (2) on each side. Remove the battery cover and set aside.




### Step 3

Locate and disconnect the charger port from the controller and power switch.

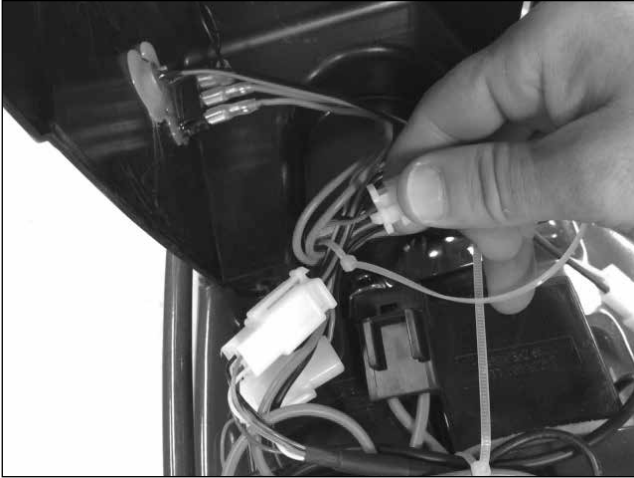


### Step 4

Using a flat screwdriver, remove the silicone on the back of the charger port.

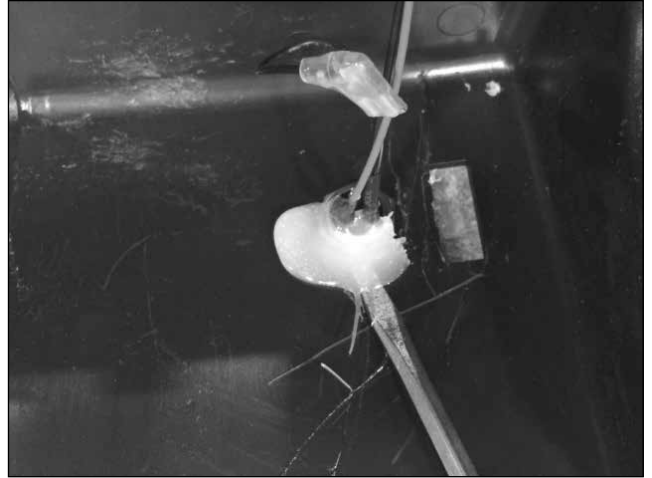


### Step 5

Using a 19 mm open wrench, loosen the locking nut that holds the charger port to the cover.

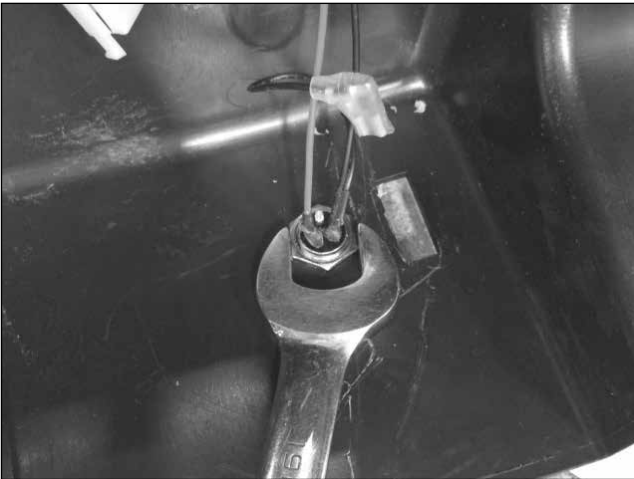

### Step 6

Using a small pointy object, depress the tabs from the prongs inside the white plastic connector and remove.

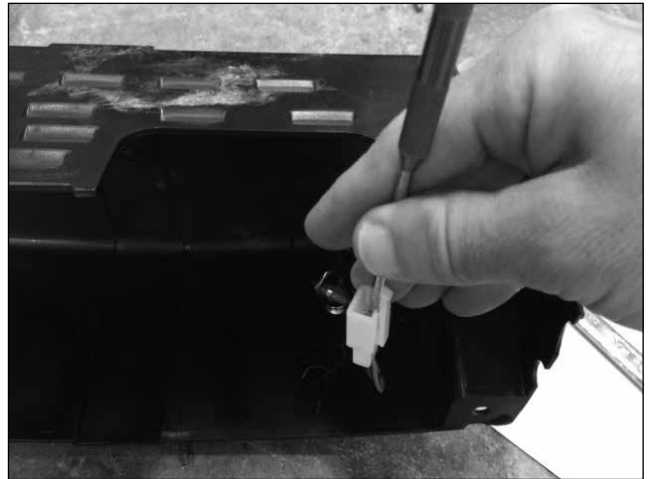

## Step 7

To install a new charger port, reverse steps 1-6.

**ATTENTION: Charge battery 12 hours before using.**