

**Required Tools: (Not included)**


- A. 5 mm Allen wrench
- B. 4 mm Allen wrench

**⚠ WARNING**

**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

**Step 1**

Using a 5 mm Allen wrench, remove the hex screw next to the power switch and the two (2) screws under the seat. Remove the seat fairing.

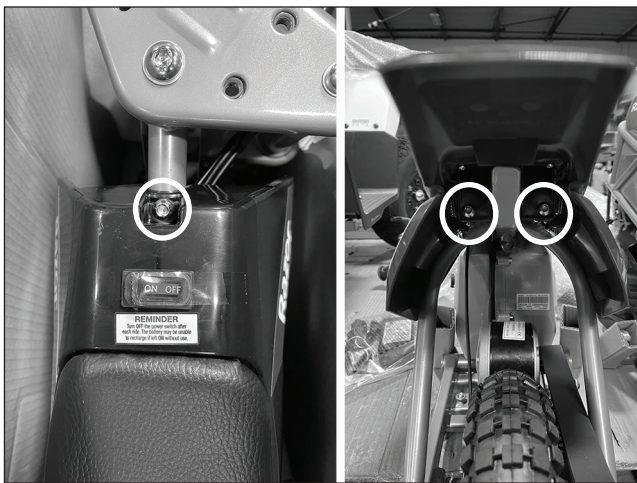
**Step 2**

Carefully disconnect the three (3) wires that connect to the power switch.




### Step 3

Using a long 4 mm Allen wrench, remove nine (9) hex bolts from the left and right sides of the battery cover.

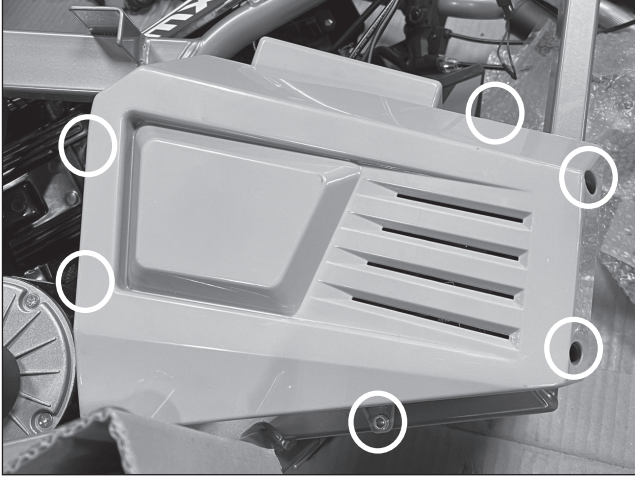


### Step 4

Locate and disconnect the battery from the controller.

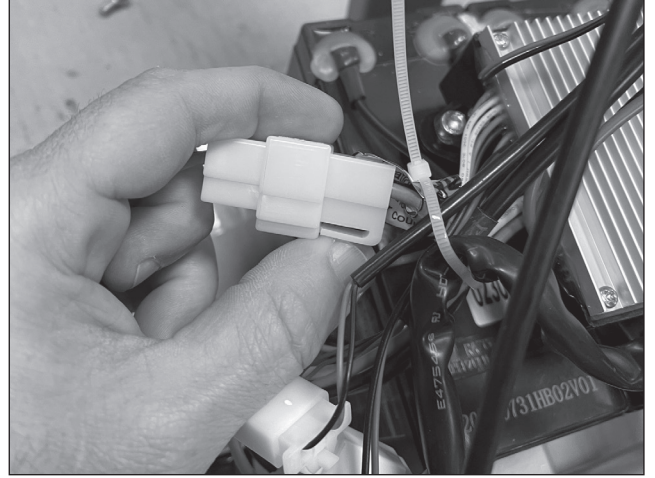


### Step 5

Using a 4 mm Allen wrench, remove the two (2) screws that hold the controller to the battery bracket. Remove the controller.

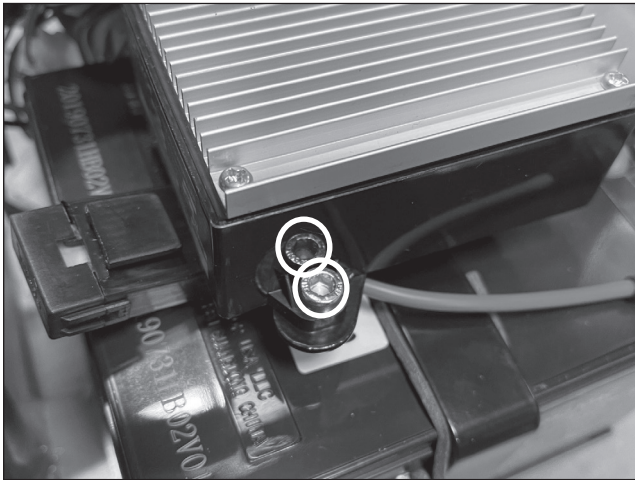

### Step 6

Using a 4 mm Allen wrench, remove the two (2) screws from the battery bracket. Using both hands, remove the battery from the unit.

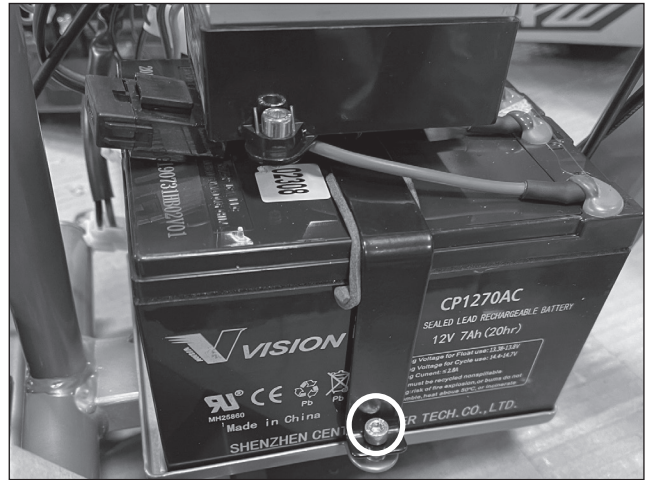

## Step 7

To install a new battery, reverse steps 1-6.

Note: When reconnecting the power switch, make sure to connect the black wire on the gold colored prong and the two (2) red wires on the silver colored prongs.

**ATTENTION: Charge battery 12 hours before using.**