



STAGE2 M1/STAGE2 M2
LEFT FOOT PEG REPLACEMENT
M1 PART NUMBER:W15128945022
M2 PART NUMBER:W15128901022

Required Tools: (Not included)


- M6 Allen Wrench

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Please refer to the diagram below for the left foot peg and kickstand components.

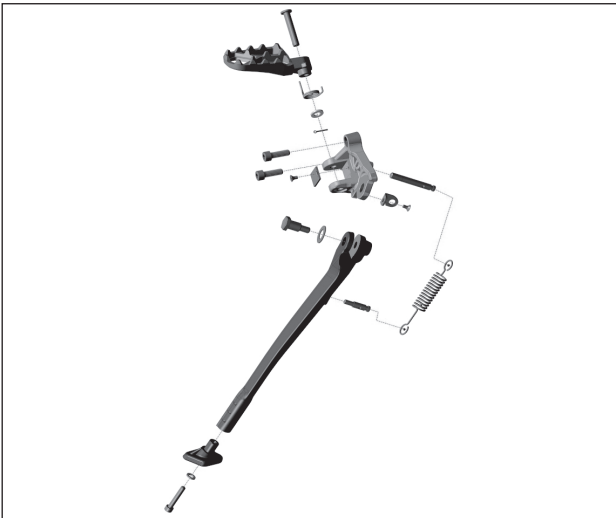


Step 2

Use a M6 Allen wrench to remove the two bolts that secure the left foot peg and kickstand onto the unit. Then, remove the left foot peg and kickstand.



Step 3

Reverse the steps to install a new left foot peg. Once completed, the unit should look like the image below.

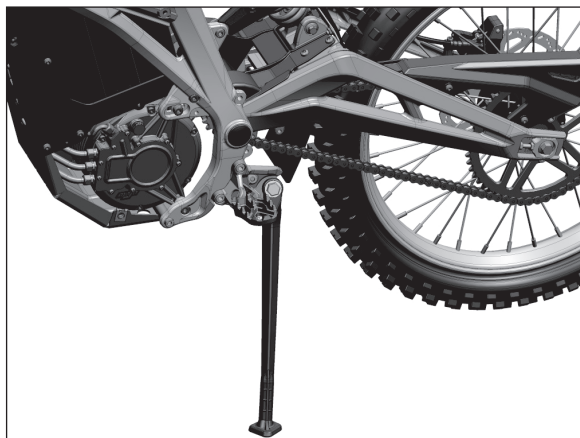

ATTENTION: Charge battery 12 hours before using.

Need Help? Visit our website at www.razor.com or call toll-free at **866-467-2967** Monday - Friday 8:00am - 5:00pm Pacific Time.